



INSTRUCTION MANUAL

Model :WL-AF09A

AFTER SALES SUPPORT
☎ 0800 422 274

210.00 mm

145.00 mm

CONTENTS	Page
IMPORTANT SAFEGUARDS	2-3
PRODUCT OVERVIEW	4
BEFORE FIRST USE	5
HOW TO USE THE CONTROL PANEL	5-6
HOW TO USE YOUR AIR FRYER	7
CLEANING AND MAINTENANCE	8
TROUBLESHOOTING GUIDE	8
WARRANTY	9

1 living & co.

AFTER SALES SUPPORT
☎ 0800 422 274

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

Read all instructions before operating this appliance.

- This appliance is NOT A TOY.
- Use the appliance only on a dry, level, stable, and heat-resistant surface only, away from any edges.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination, repair or adjustment.
- Children should be supervised to ensure that they do not play with the appliance.
- DO NOT** use an extension cord. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
- DO NOT** touch the hot surfaces. Use handles or knobs.
- DO NOT** place or store anything on top of product when in use.
- DO NOT** place appliance on or near a gas or electric hob, or in a heated oven.
- NEVER** use electrical socket below counter.
- NEVER** leave unit unattended while in use or when plugged into an outlet.
- ALWAYS** ensure the appliance is properly assembled before use.
- DO NOT** cover the air intake vent or air outlet while the appliance is in use.
- DO NOT** use this appliance for anything other than its intended use.
- DO NOT** use outdoors. **FOR HOUSEHOLD USE ONLY.**
- DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
- DO NOT** move the appliance when in use.
- DO NOT** place the appliance near the edge of a worktop during operation.
- The use of accessories not recommended by the appliance manufacturer may cause serious injury or damage to the appliance.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Unplug from outlet when not in use, before removing parts and before cleaning. Allow to cool before putting on or taking off any parts, and before cleaning.
- ALWAYS** ensure drawers are properly closed before operating.
- DO NOT** use the appliance without the removable drawers installed.

AFTER SALES SUPPORT
☎ 0800 422 274

living & co. 2

IMPORTANT SAFEGUARDS (CONTINUED)

- DO NOT** overfill when cooking, as it may cause personal injury or property damage or affect the safe use of the appliance.
- Extreme caution must be used when the appliance contains hot food. Improper use may result in personal injury.
- It is normal for some smoke or odour to emit from the unit when heating for the first time. This should subside after few minutes of use.
- NEVER** connect this appliance to an external timer switch or separate remote-control system.
- The appliance and accessories become extremely HOT during cooking process. **DO NOT** touch accessories during or immediately after cooking.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.




CAUTION:

Hot surfaces! The appliance and accessories become extremely HOT during cooking process. Do not touch the accessories during and immediately after cooking. Only hold the appliance by the handle and use caution when removing the accessories and food from the appliance. Always wear oven mitts when handling potentially hot accessories and foods. Allow to cool down completely before cleaning.

3 living & co.

AFTER SALES SUPPORT
☎ 0800 422 274

PRODUCT OVERVIEW

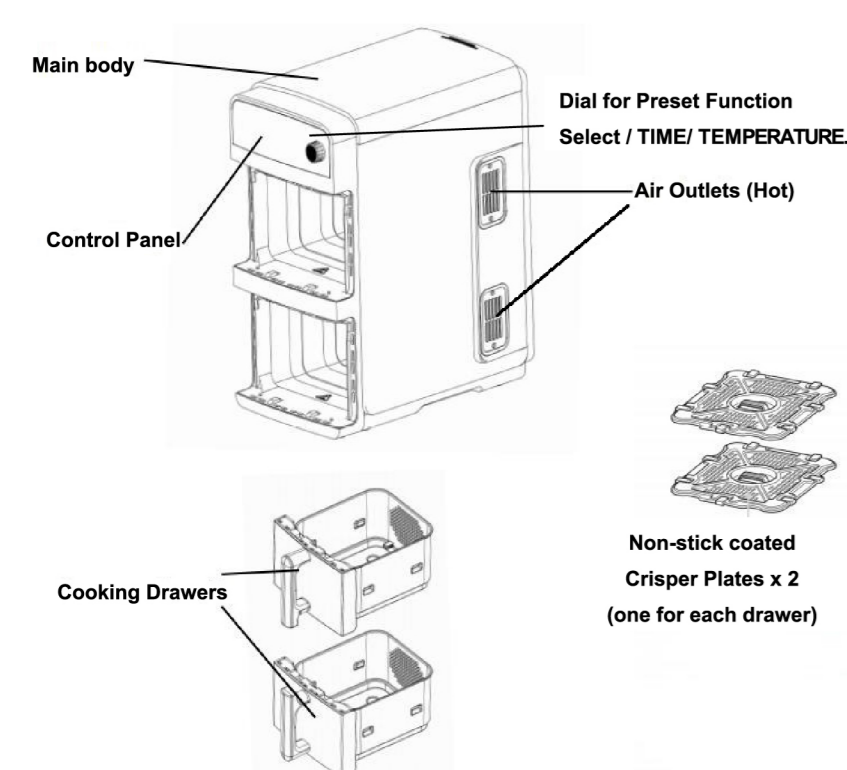

Appliance Specifications:
AC220-240 Volts, 50-60 Hz, 2200-2400Watts
THIS PRODUCT IS FOR USE IN 220-240V AC OUTLET ONLY.


AFTER SALES SUPPORT
☎ 0800 422 274

living & co. 4

BEFORE FIRST USE

- Carefully remove all internal and external packaging, protective film and accessories.
- Wash the drawers, crisper plates in hot, soapy water, then rinse and dry thoroughly. **WARNING! Do not immerse the main unit in water or any other liquids to clean.**
- When using this appliance, provide at least 20cm of space on all sides for adequate air circulation.
- Place the appliance on a stable, horizontal, flat and heat-resistant surface.

HOW TO USE THE CONTROL PANEL

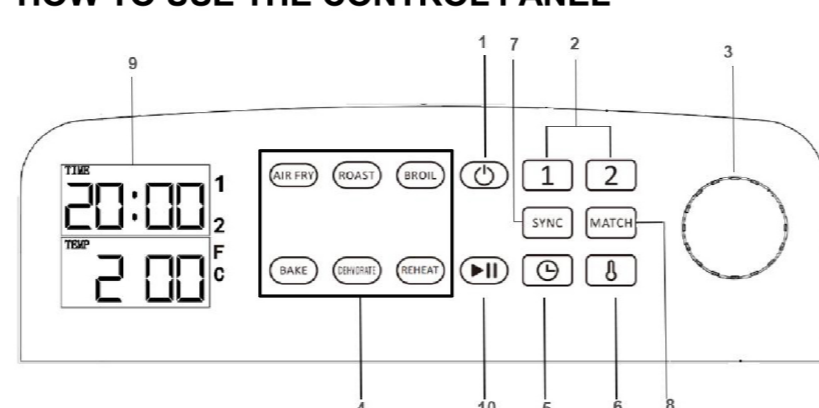

- Power Button**
 - Once the appliance is plugged in, the power button will light up and the appliance is in standby mode.
 - Touch the power button, the control panel will light up.
 - Press and hold the power button (3 sec) at any time during the cooking process, the control panel will switch OFF immediately and the appliance will shut down at the same time.
- Cooking Zone button**
 - Press 1 or 2 to select the zone. Zone 1 is the top drawer and zone 2 the bottom.
- Dial for preset function select Time /Temperature.**
 - Rotate the dial to select a preset cook function, the corresponding icon flashes.
 - Rotate the knob to adjust the time or temperature after touch the time button or temperature button.

5 living & co.

AFTER SALES SUPPORT
☎ 0800 422 274

HOW TO USE THE CONTROL PANEL (CONTINUED)

- Preset Function Icons**
 - The preset functions will help you to start cooking efficiently.
 - Using **Preset Function Select Dial** to select any of the icons, this will automatically set the Time and Temperature to a preset setting for the selected function.
- AIR FRY:** Use this function to give your food crispiness and crunch with little to no oil. **NOTE: The preset temperature is 210°C.**
- BROIL:** Cooking smaller quantities of frozen food such as French fries and chicken nuggets. **NOTE: The preset temperature is 200°C.**
- BAKE:** Create decadent baked treats and desserts. **NOTE: The preset temperature is 140°C.**
- ROAST:** Use the unit as an oven for tender meats and more. **NOTE: The preset temperature is 180°C.**
- REHEAT:** Revive leftovers by gently warming them, leaving you with crispy results. **NOTE: The preset temperature is 170°C.**
- DEHYDRATE:** Dehydrate meats, fruits and vegetables for healthy snacks. **NOTE: The preset temperature is 70°C.**
- 5.Time Setting Button**
 - Press the time button, then turn the dial to adjust the time before or during cooking.
 - You can increase or decrease time by 1 minute from 1 minute to 60 minutes. Under dehydrator function increase or decrease time by 10 minutes from 10 minutes to 8 hours.
- 6.TEMP Setting Button**
 - Touch the TEMP button, then turn the dial to adjust the temp before or during cooking.
- 7.SYNC button:**
 - Touch SYNC button, both zone with different cooking time and /or temperatures to finish at the same time
- 8.MATCH button:**
 - This button helps to quickly set if you need to set the same function or the same time and temperature for both cooking zones.
- 9.Digital display:**
 - The Digital Display shows the time and temperature.
 - It shows set time and temperature during setting and the remaining time and cooking temperature during cooking.
- 10.Start/Pause Buttons**
 - Touch this button to start cooking or stop cooking at any time during cooking process.

AFTER SALES SUPPORT
☎ 0800 422 274

living & co. 6

HOW TO USE YOUR AIR FRYER

Always place the appliance and the accessories on a flat, firm, and heat-resistant surface.

IMPORTANT! NEVER LEAVE THE UNIT UNATTENDED WHEN IN USE.

NORMAL COOKING

- Install crisper plates in the drawer, place the ingredients into one drawer or two drawers, then slide the drawer back into the appliance.
- Connect the supply cord plug into a mains power outlet socket. The power button light up, the machine is in standby mode.
- The unit will default to Zone 1, turn the dial to select a preset function.
- Press the TEMP button, then turn the dial to set your desired temperature.
- Press the TIME button, then turn the dial to set the time.
- Then touch ZONE 2 and set in the same way if needed.
- Press the START/PAUSE button to start cooking.
- Remove ingredients by tipping them out or using silicone-tipped tongs/tentacles. **DO NOT** place drawers on top of unit.

Note: When cooking is complete, the unit will beep and "COOL" will appear on the display for 60 seconds.

Cooking with SYNC function.

This function helps to finish cooking at the same time when foods in different zones need different cooking times. It is designed to use with two cooking zones.

- Press ZONE 1, using the dial to select a preset function or set the time and temperature manually for ZONE 1.
- Press ZONE 2 and set in the same way.

NOTE: You can select a different function for Zone 2

- Press SYNC, then press START/STOP to begin cooking in the zone with the longest time. The other zone will display Hold. The unit will beep and activate the second zone when both zones have the same time remaining.

Cooking with MATCH function.

This function helps to cook a larger amount of the same food, or cook different foods using the same function, temperature, and time:

- Place ingredients in the drawers, then insert drawers in unit.
- Press ZONE 1, using the dial to select a preset function/time and temperature for ZONE 1.

- Press the MATCH button to copy the zone 1 settings to zone 2. Then Press START/STOP to begin cooking in both zones.

NOTE: When you use MATCH function, both drawers will stop working if you remove 1 drawer.

7 living & co.

AFTER SALES SUPPORT
☎ 0800 422 274

CLEANING AND MAINTENANCE

- The unit should be cleaned thoroughly after every use. Unplug the unit from the outlet and wait until the unit is fully cooled before cleaning.
- To clean the outside of main unit, wipe with a clean with a damp cloth.
- Clean the Drawer and Crisper Plates with hot water, some washing-up liquid and a non-abrasive sponge.
- NEVER** immerse appliance or electrical cord in water.

TROUBLESHOOTING GUIDE

- How do I adjust the temperature or time while using a single zone?**
 - Select the active zone, then press TEMP and use the dial to adjust the temperature or press TIME and use the dial to adjust the time
- How do I adjust the temperature or time while using dual zones?**
 - Select the desired zone, press TEMP and use the dial to adjust the temperature or press TIME and use the dial to adjust the time
- Can I cook different foods in each zone and not worry about cross contamination?**
 - Yes, both zones are self-contained with separate heating elements and fans
- How do I stop one zone when using both zones?**
 - To stop one zone, first press the zone button then press START/PAUSE. To stop both zones simply press START/PAUSE.
- When should I use the crisper plate?**
 - Use the crisper plate when you want food to come out crispy. The plate elevates the food in the drawer so that air can flow under and around it to cook ingredients evenly.
- Why didn't my food cook fully?**
 - Make sure the drawer is fully inserted during cooking. For consistent browning, do not overfill and make sure ingredients are arranged in an even layer on the bottom of the drawer with no overlapping. Shake drawer to toss ingredients for even crispness. Cook temperature and time can be adjusted at any time during cooking. Simply select the desired zone, press TEMP and use the dial to adjust the temperature or press TIME and use the dial to adjust the time.
- Why is my food burned?**
 - For best results, check progress throughout cooking (by temporarily opening the drawers) and remove food when desired level of brownness has been achieved. Remove food immediately after the cook time is complete to avoid overcooking.
- Why is the unit beeping?**
 - Either the food is finished cooking or it indicates that the other zone has started cooking
- Why did the display screen go black?**
 - The unit has defaulted into standby mode. Press the power button to turn it back on
- Why is there an "E1 or E5" on the display screen?**
 - The unit is not functioning properly. Please contact Customer Service.

AFTER SALES SUPPORT
☎ 0800 422 274

living & co. 8



living & co.

Warranty
We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 2 years warranty.
Now you too can relax knowing that you are covered.
Customer Helpline NZ: 0800 422 274
This Product is covered by 2 years warranty when accompanied by proof of purchase

9 living & co.

AFTER SALES SUPPORT
☎ 0800 422 274