

**Safety** 1st®

**QUICKSIT**  
**FOLDING HIGHCHAIR**  
Suitable for 6 months to 15kg



**IMPORTANT !**  
**KEEP FOR FUTURE**  
**REFERENCE**




## **WARNING PREVENT SERIOUS INJURY OR DEATH FROM FALLS OR SLIDING OUT:**

- **FOLLOW THE MANUFACTURER'S INSTRUCTIONS.**
- **DO NOT LEAVE CHILDREN UNATTENDED.**
- **THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED MOST INJURIES FROM HIGHCHAIRS ARE CAUSED BY FALLS.**
- **POSITION THE HIGHCHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.**
- The child should be secured in the highchair at all times by the restraining system. It is recommended that the highchair be used only by children capable of sitting upright unassisted.
- Check that the highchair is fully erected and ensure that all locks are engaged before placing a child in it.
- Ensure that the highchair is placed on a flat, even, horizontal and stable surface.
- Do not elevate the highchair on any structure or table.
- To reduce the risk of injury, position the highchair away from furniture, walls, hot surfaces, hot liquids, window coverings, window cords and electrical cords. Position the highchair away from furniture when the chair is not being used at a table.
- Do not raise, lower, fold or move the highchair when a child is in it.
- Make sure children and their fingers are clear of any moving parts.
- Do not allow children to stand on the seat, as the highchair may become unstable.
- To avoid danger of suffocation, keep any plastic bags away from babies and children.
- Regularly inspect the highchair for any part that is loose, broken, torn or missing. Attend to the problem as soon as it is noticed.
- Do not use the highchair if it is not working correctly and immediately seek repair.
- Use only those accessories which are supplied by Dorel Australia and approved for use with this highchair.
- This product is not intended for commercial use.
- The weight of the child using the highchair should not exceed **15kg**.
- The weight placed in the storage basket should not exceed **0.5kg**.


### **PRODUCT CARE AND MAINTENANCE**

- Always store in a clean and dry place.
- Clean the frame by wiping with a damp cloth.
- Do not use abrasives, bleach or strong detergents.
- Spot clean fabrics with warm water and mild soap.
- Ensure fabric is dry before storing.
- Regularly check for loose parts and tighten when required.
- Damaged or broken parts should be immediately replaced.

**INSTRUCTIONS FOR ASSEMBLY AND USE**

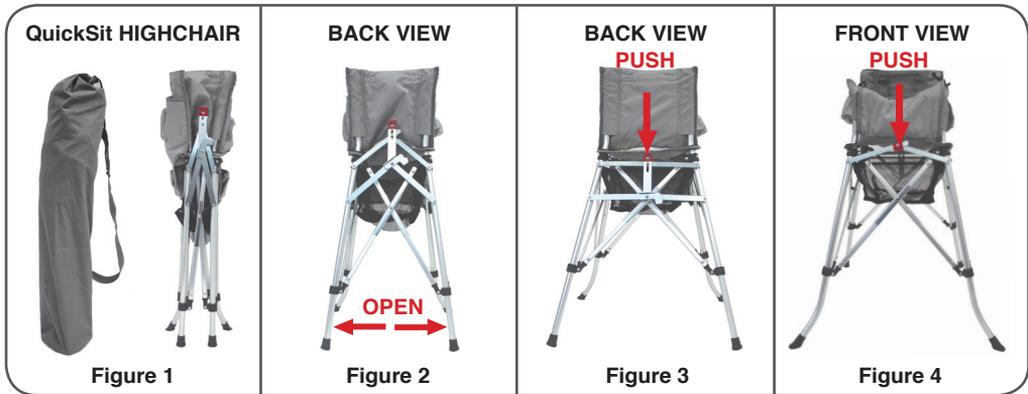

- **Figure 1** - Frame and Seat. Take the chair out of the carry bag.
- **Figure 2** - Start to unfold the highchair by pulling the legs in an outward motion until fully deployed.
- **Figure 3 & 4** - Push down on the frame locks at the back and front of the chair. It is essential to ensure that all locks have been fully engaged.

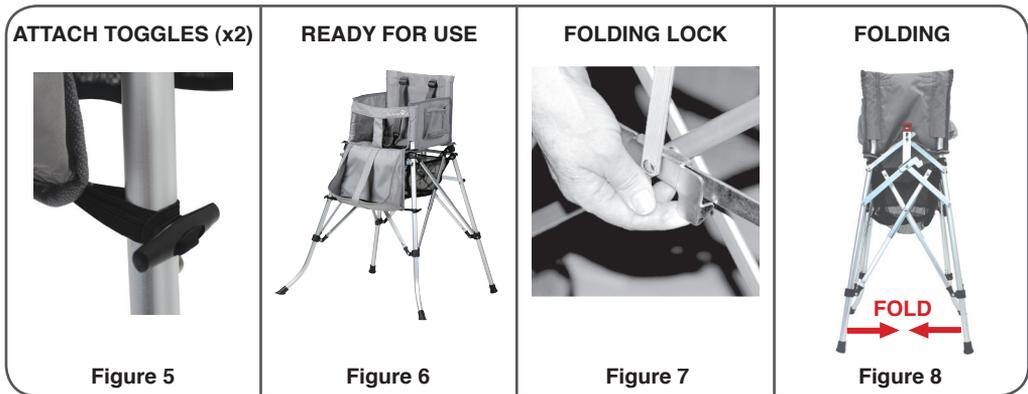

- **Figure 5** - Fix the footrest by attaching the toggles on both sides.
- **Figure 6** - Check if the fabric is attached properly to the frame. If yes, the highchair is now ready for use.
- **To fold the highchair** - Fold the highchair by proceeding in reverse order.
- Unfasten the toggles on both sides.
- **Figure 7** - Lift the locking system at the front and back of the chair.
- **Figure 8** - Fold the chair together and store in the bag provided.

## **SECURING YOUR CHILD**


- The harness strap can be adjusted by moving each straps's slider.
- The buckle is released squeezing the buckle tongues together.
- **A FIVE-POINT HARNESS IS PROVIDED TO SECURE YOUR CHILD.**



## **WARNING**

**USE THIS HARNESS AT ALL TIMES.**

**WHEN NOT IN USE DISCONNECT  
SHOULDER STRAPS FROM THE WAIST  
STRAP AND BUCKLE.**

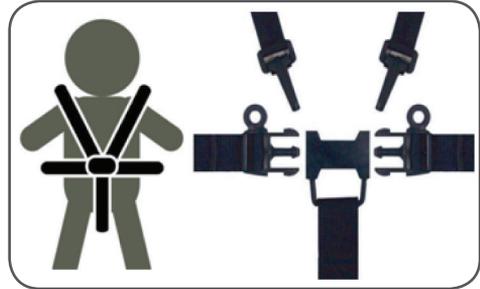

## **CUSTOMER SERVICE**

Please contact our Customer Service Department if you experience a problem with this product or require assistance:

### **AUSTRALIAN CUSTOMERS**

**Email** customerservice@dorel.com.au  
**Web** www.dorel.com.au  
**Phone 1** (03) 8311 5300  
**Address** 655-685 Somerville Road  
Sunshine West, Vic, 3020  
**Phone 2** 1300 809 526 (local call cost)  
**Hours** 8:30 am – 4:30 pm,  
Monday to Friday  
**Postal** Dorel Australia Pty Ltd  
P.O. Box 1260  
Sunshine West, Victoria, 3020  
**Australia**

### **NEW ZEALAND CUSTOMERS**

customerservice@igc.co.nz  
www.dorel.com.au  
(09) 274 1040  
14 Sir William Avenue, East  
Tamaki, Auckland, 2013.  
0800 628 000 (Toll Free)  
8:00 am – 4:00 pm,  
Monday to Friday.  
IGC Dorel New Zealand Ltd  
P.O. Box 82377 Highland Park  
Mt Wellington  
**New Zealand**



Specifications are subject to change without notice.  
Copy or reproduction without permission is prohibited.  
© 2013 Dorel Australia Pty Ltd. All Rights Reserved.  
www.dorel.com.au