

**ebony**  
**3 wheel stroller**

instruction  
**MANUAL**



Illustrations and designs may vary.

# contents

<i>assembling the stroller</i>	<i>pg.</i>
Components list .....	4
Opening stroller .....	5
Rear wheels assembly .....	6
Front wheel assembly .....	7
Bumper bar .....	8
Crotch pad .....	9
 <i>using the stroller</i>	
Using canopy .....	9
Front swivel wheel .....	10
Operating brakes .....	11
Adjusting handle .....	12
Adjusting backrest .....	13
Adjusting legrest .....	13
Attaching raincover .....	14
Folding stroller .....	15
Unfolding stroller .....	16
Securing your child .....	17
Adjusting harness height .....	18
Tether strap .....	19
Carrying stroller .....	19
 <i>care and maintenance</i>	
Care and maintenance .....	20
Notes .....	21
Product registration .....	23
 <i>contacts</i>	
Customer service .....	24

These instructions detail the safe use, assembly and maintenance of your product. Please read these instructions carefully and ensure that they are followed at all times. Failure to do so could result in serious injury or death.



## **WARNING TO AVOID INJURY OR DEATH:**

**ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.**

- **FOLLOW THE MANUFACTURER'S INSTRUCTIONS.**
- **DO NOT LEAVE CHILDREN UNATTENDED.**
- **SECURE THE CHILD IN THE HARNESS AT ALL TIMES AND ENSURE THAT THE SAFETY HARNESS IS ADJUSTED FIRMLY BUT COMFORTABLY TO THE CHILD'S BODY.**
- **DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.**
- **MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.**
- A harness can form loops that may be a strangulation hazard, never leave harness straps connected when not fitted to a child in the stroller.
- Use the tether strap to prevent the stroller rolling away.
- Do not allow children to stand on the seat or footrest.
- Do not attempt to lift the stroller by the bumper bar.
- Remove the child from the stroller before going up or down stairs or escalators.
- Engage front wheel swivel locks when travelling on rough or uneven surfaces.
- Inflate tyre to 28psi/2.0Bar (195kPa). Over inflation may result in tyre blowout.
- Regularly inspect the stroller for any parts that are loose, broken, torn or missing. Attend to the problem as soon as it is noticed.
- Use only those accessories which are supplied by Dorel Australia and approved for use with this stroller.
- Do not use the stroller near an open fire, barbecue or exposed flame.
- This product is not intended for commercial use.
- Do not run or jog with this stroller.
- The weight of the child using this stroller should not be more than **17kg**.
- Total weight for the shopping basket should be more than **4kg**.
- Maximum weight for the pocket should not be more than **1kg**.

# ebony

## 3 wheel stroller

### components list



**A** Handle

**B** Handle adjustment  
(both sides)

**C** Tether strap

**D** Folding lock  
(both sides)

**E** Storage lock

**F** Brake lever

**G** Rear wheel

**H** Carry basket

**I** Front wheel assembly

**J** Front wheel swivel lock

**K** Footrest

**L** Adjustable legrest

**M** Safety harness

**N** Crotch pad

**O** Bumper bar

**P** Canopy

**Q** Raincover  
(not shown)

# ebony

## 3 wheel stroller

### assembling stroller

#### step 1: opening stroller

- If the stroller has a security tie, please remove it.
- Release the storage latch (Figure 1a).
- To unfold the stroller, simultaneously lift handle (A) while resting your foot on the bar beneath the back of the shopping basket (B) until the locking mechanism engages (Figure 1b).



# ebony

## 3 wheel stroller

### assembling stroller

#### step 2: attach rear axle

- Align the rear axle over the rear leg tubes (Figure 2a).
- Push the rear axle on the rear leg tubes until the locking pin mechanism engages (Figure 2b).

#### mother's choice tip...

This process has to be even on both sides to avoid jamming.



#### step 3: fit rear wheel assembly

- Slide rear wheel onto the axle (Figure 3a).
- Press the metal tab and push wheel until it locks (Figure 3b).
- Repeat for other side.

#### to remove rear wheel assembly

- To remove the rear wheel assembly, press and hold the metal tab (Figure 3b).
- Remove rear wheel from the axle.
- Repeat on the other side.

# ebony

## 3 wheel stroller

### assembling stroller

#### step 4: fit front wheel assembly

- Lay the open stroller with the handle on the floor and the fork facing upwards (Figure 4a).
- Align the wheel assembly to the front forks.
- Push the two black plastic connectors over the front wheel fork tubes (Figure 4b).
- The front wheel assembly will be locked in place when the two locking pins fully engage (Figure 4c).



#### removing front wheel

- To detach the front wheel assembly, push the two locking pins in while pulling the plastic connectors off the front wheel forks (Figure 4c).

#### *note:*

This vehicle is designed for use on flat or gently sloping surfaces and may be unstable on higher sloping and uneven surfaces. You should always be aware of the possibility of the stroller tipping on uneven or higher sloping surfaces.

# ebony

## 3 wheel stroller

### assembling stroller



#### step 5: bumper bar

- Open the swivel clips fitted to each side of the bumper bar.
- Align bumper bar with the frame (Figure 5a).
- Clip the ends of the bumper bar onto the frame (Figure 5b)
- Close the clips on both sides (Figure 5c).



#### removing bumper bar

- To remove bumper bar, open the clips and separate from frame.



# ebony

## 3 wheel stroller

### assembling / using stroller

#### step 6: attaching crotch pad

- Wrap the crotch pad around the bumper bar and attach the press stud (Figure 6).

#### removing crotch pad

- To remove, detach the press stud and unwrap from the crotch pad from the bumper bar.



#### step 7: using canopy

- Pull the front edge of the canopy to open (Figure 7a & 7b).



#### closing canopy

- To close, simply push backwards.

#### mother's choice tip...

The canopy is permanently attached to the stroller.

# ebony

## 3 wheel stroller

### using stroller



### operating front swivel wheel

- TO LOCK: Press the swivel lock in the middle of the unit upwards in each wheel (Figure 8a).
- TO UNLOCK: Press the swivel lock downwards in each wheel (Figure 8b).



# ebony

## 3 wheel stroller

### using stroller

#### operating brakes

- To apply the brake, press down firmly on the red brake pedal (Figure 9a).
- To release the brake, lift the brake pedal until the brakes have fully disengaged (Figure 9b).



### WARNING

Apply all brakes whenever you park the stroller.



# ebony

## 3 wheel stroller

### using stroller



### adjusting handle

- Press both adjustment buttons simultaneously and rotate to the desired position (Figure 10).
- Listen for 'click'.

### multiple positions



# ebony

## 3 wheel stroller

### using stroller

#### to adjust backrest

- To lower the backrest, hold the top of the backrest adjuster located at the top of the seat and pull up on the lower lock (Figure 11), then release the backrest to desired position.
- When positioning the backrest from the layback position to the sitting position, move the backrest upwards - there is no need to operate the adjuster lock.
- Listen for a 'click' to confirm position locked.



#### to adjust legrest

- To lower the legrest, press both adjustment buttons simultaneously and rotate to the desired position (Figure 12).
- Listen for a 'click' to confirm position locked.

# ebony

## 3 wheel stroller

### using stroller

#### raincover

- Spread the raincover over the stroller and around the handle.
- Attach the velcro tabs in 3 places (**A**, **B**, and **C**, Figure 13), and attach front hook (**D**).
- Repeat steps for both sides.



# ebony

## 3 wheel stroller

### using stroller

### to fold the stroller

- Apply all brakes.
- Remove all items in the shopping basket.
- Fold the canopy.
- Unlock front swivel wheel.
- Adjust the seat backrest to full layback position (see page 13).
- Pull the folding locks up (A) and simultaneously press down (B) to fold the stroller (Figure 14a).
- Fold the stroller (Figure 14b).
- Attach the storage latch (Figure 14c).



#### mother's choice tip...

Lift handle to check that lock has fully engaged.



# ebony

## 3 wheel stroller

### using stroller

#### to unfold the stroller

- Prior to unfolding, make sure storage latch is release (Figure 15a).
- Simultaneously lift handle (A) while resting your foot on the bar beneath the back of the shopping basket (B) until the locking mechanism engages (Figure 15b).



#### note:

Folding strollers and accessories will always have the potential to trap fingers or parts of the body between moving parts, causing injuries. Care should be taken while folding or unfolding.

# ebony

## 3 wheel stroller

### using stroller

#### securing your child

- The harness strap can be adjusted by moving each strap's slider (A).
- The buckle is released by pressing the centre button.





## WARNING

Use this harness at all times.

A five-point harness is provided to secure your child.

When not in use disconnect shoulder straps from the waist strap and/or buckle.

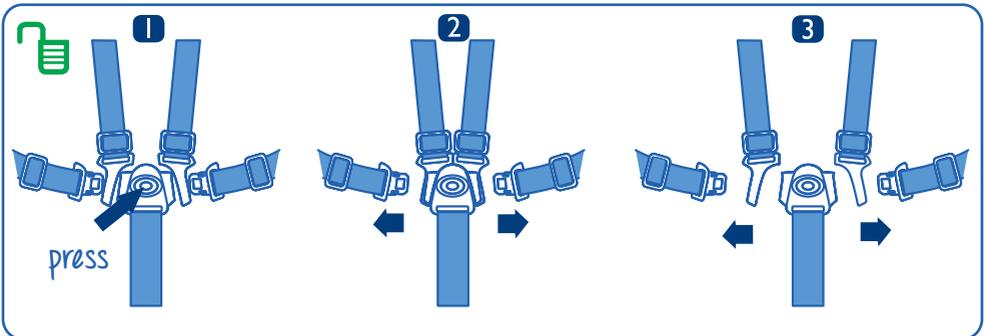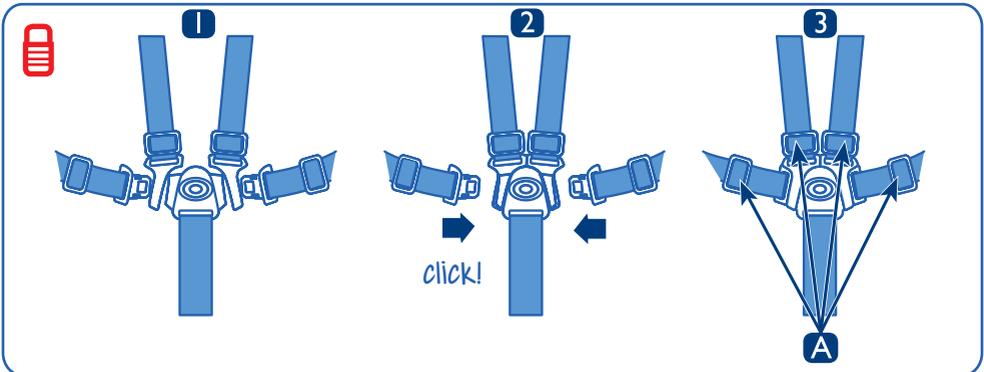

# ebony


## 3 wheel stroller

### using stroller

### adjusting harness height

lower slot

upper slot

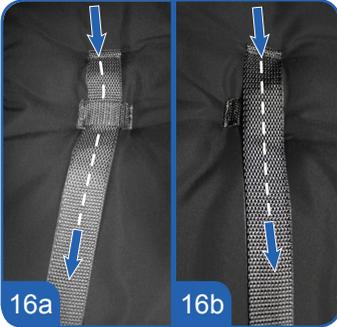


- The harness can be set at two heights, as displayed in Figure 16a and 16b.
- To use the lower slot, undo the buckle and feed the shoulder straps in through the loop (Figure 16c) before securing harness.
- To use the upper slot, undo the buckle and feed both shoulder straps out through the loop (Figure 16d), and allow to hang over the loop before feeding through the seat pad and securing the harness (Figure 16e).



lower slot use



upper slot use

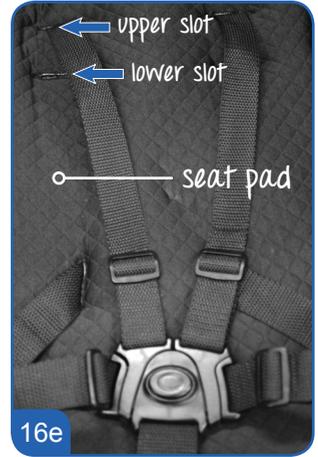

### mother's choice tip...

When harness is used in the lower slots, please make sure that the harness is fed as per Figure 16c.

# ebony

## 3 wheel stroller

### using stroller

#### tether strap

- Whenever a child is in the stroller and brakes are NOT engaged, the large loop should be around your wrist (Figure 16).



## WARNING

Correct use of the tether strap will prevent stroller runaway and possible injury to your child.

#### carrying stroller

- Fold the stroller, and ensure that the storage latch is applied before continuing.
- Carry stroller by holding frame at point shown in Figure 18.
- Avoid holding the stroller in other locations to avoid injury from moving parts.



hold frame here

# ebony

## 3 wheel stroller

### *care and maintenance*

- Always store in a clean and dry place.
- Clean the frame by wiping with a damp cloth.
- Do not use abrasives, bleach or strong detergents.
- Spot clean fabrics with warm water and mild soap.
- Ensure fabric is dry before storing.
- Occasionally clean and lubricate wheels and axles with a light lubricating oil.
- Regularly check for loose parts and tighten when required.
- Damaged or broken parts should be immediately replaced.





## mother's choice tip...

Visit us online to register your new Mother's Choice product.



follow us on    
[motherschoice.com.au](http://motherschoice.com.au)

[www.motherschoice.com.au/product-registration](http://www.motherschoice.com.au/product-registration)

## benefits of registration

- Your safety - allows us to contact you with important product notifications.
- Confirmation of ownership - provides a record in case of product loss or theft.
- Improved product development - helps us continue to design products that meet your needs.

*to prevent loss or fading,  
please attach your receipt here:*

motherschoice.com.au

DOREL AUSTRALIA PTY LTD  
655-685 Somerville Road  
Sunshine West Victoria 3020  
Email: customerservice@dorel.com.au  
Phone: 1300 809 526  
Hours: 8:30 am - 5:00 pm Monday to Friday

IGC DOREL NEW ZEALAND LTD  
14 Sir William Avenue  
East Tamaki Auckland 2013  
Email: customerservice@igc.co.nz  
Phone: 0800 628 000 (toll free)  
Hours: 8:00 am - 5:00 pm Monday to Friday

015477 - Ebony 3 wheel stroller - 10 - 15



Specifications are subject to change without notice.  
Copy or reproduction without permission is prohibited.  
© 2013 Dorel Australia Pty Ltd. All Rights Reserved.

[www.dorel.com.au](http://www.dorel.com.au)