

INSTRUCTION MANUAL FOR SRO6141

Dear user,

Thank you very much for choosing BT076 Bluetooth Portable Speaker. Please read this user manual carefully to operate this device in the correct manner.


I. THINGS TO REMEMBER.

- Please store and use this product at normal temperature;
- DO NOT expose this product to rain or dampness
- DO NOT toss this product and prevent it from falling and being damaged
- DO NOT disassemble, repair and modify this product
- As it is inbuilt with lithium battery, DO NOT place it in fire to avoid danger!

II. GENTLE REMINDER

1. To prolong the speaker 's life span and for your wellbeing, please don't listen to music with max volume for a long time to avoid hearing damage.
2. When something is wrong with the speaker, please immediately turn it of, unplug the USB, to prevent the speaker and other parts from getting damaged.

III. OVERVIEW

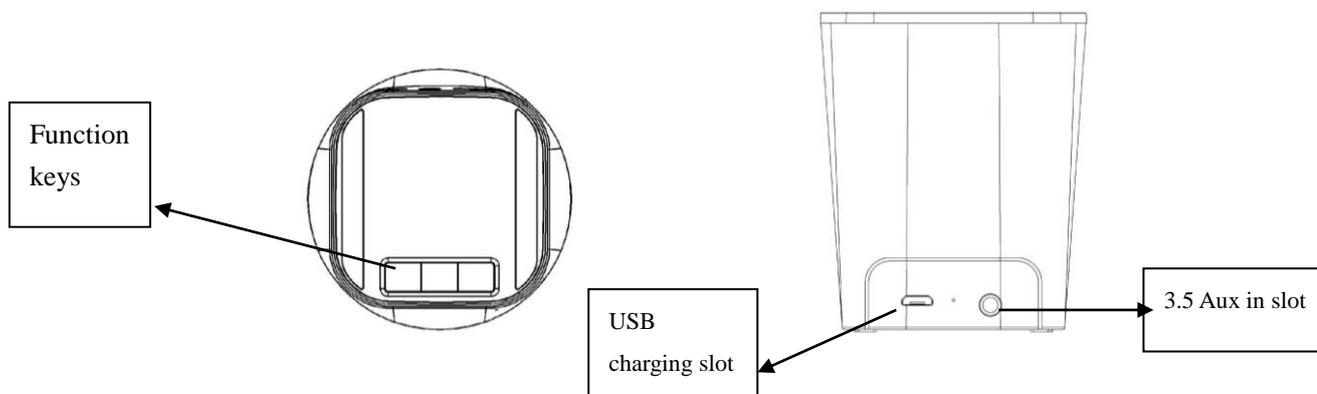

1. Play/pause as desired by pressing “▶|◀”
2. Press “▶|◀” to answer/hang up calls and keep it held it to refuse the call. Keep the button pressed for 3 seconds to disconnect the Bluetooth device.
3. Press & hold “-” to select previous tracks, keep pushing to decrease the volume.
4. Press & hold “+” to select next tracks, keep pushing to increase the volume.

IV. SPECIFICATIONS

- Model: SRO6141
- Bluetooth specification: Bluetooth V2.1+EDR
- Transmission distance: $\leq 10M$
- USB charging voltage: DC 5V/500mA
- Built-in battery: Lithium battery, 300mAh
- Output power: 3W x 1
- Frequency response: 90Hz-20 KHz
- Sensitivity: 80db \pm 2db
- S/N ratio: $\geq 76dB$
- Product dimension (L X W X D):64*64*75.5mm
- Charging time: 1.5 hours

V. PACKING LIST

1. Speaker * 1
2. USB cable * 1
3. User manual * 1

VI. FUNCTION DESCRIPTION

BLUETOOTH OPERATION

1. Turn on the speaker. The blue indicator light will flash to detect Bluetooth enabled devices near you. The blue indicator light will go off if no Bluetooth device is detected within 5 minutes.
2. Pair the speaker with the desired Bluetooth device.
3. Play/pause as desired by pressing. 
4. Press & hold 2.5S  to change the mode from Bluetooth to AUX

AUX PLAYBACK OPERATION

1. Turn on the speaker.
2. Insert a 3.5mm audio cable into the aux jack on the back of the speaker, connecting to any audio device such as mobile phones or computers with the other port.
3. Press "" to enter mute mode and re-press "" to release sound.

CHARGING THE SPEAKER

The speaker has a built-in Lithium battery. The battery is rechargeable and provides approx 3 .5-hours of continuous operation when fully charged.

Use the micro-USB cable to charge the speaker. The red indicator light will illuminate. The red indicator light will go of when the speaker is fully charged.

VIII. TROUBLESHOOTING

Problem	Solution
Unable to pair up with other devices	<ol style="list-style-type: none"><li data-bbox="539 293 1505 371">1. Check if the speaker is still in the process of search or switch it off and then on.<li data-bbox="539 383 1505 461">2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Please turn them off.
The sound is rather low or distorted	<ol style="list-style-type: none"><li data-bbox="539 483 1505 517">1. Check the Bluetooth device's volume and then adjust it to a proper level.<li data-bbox="539 528 839 562">2. Recharge the battery
The music stops from time to time	<ol style="list-style-type: none"><li data-bbox="539 584 1505 701">1. Check whether the speaker's effective transmission range is exceeded or there is an obstacle standing between the speaker and other Bluetooth devices.
The Bluetooth indicator remains off	<ol style="list-style-type: none"><li data-bbox="539 723 1505 801">1. It suggests the battery power drops quite low and retry once being recharged.<li data-bbox="539 813 783 846">2. Turn it on again.

If any other issue, please consult the dealer or an experienced IT technician for help.