 




Instruction Manual

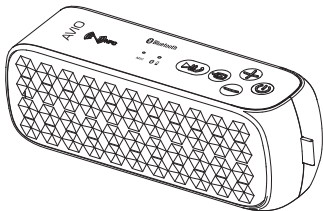

Water Resistant Bluetooth Speaker - White w Orange Tag

Model: AV3233

Please retain this manual for future use

Index

| | |
|-------------------------------------|--------|
| Important Safety Instructions | - 2 - |
| Overview | - 6 - |
| Operation | - 7 - |
| Cleaning the Speaker | - 12 - |
| Trouble Shooting | - 13 - |
| Specifications | - 14 - |
| Guarantee Card | - 15 - |

Important Safety Instructions

When using any electrical apparatus always observe safety regulations and use basic safety precautions to reduce the risk of fire, electric shock and personal injury, including the following.

1. Read, Keep and Follow these instructions, heeding all Warnings.
2. Keep out of reach of young children. This apparatus is not suitable for use by young children or infirm persons without supervision. Young children must be supervised to ensure that they do not play with the apparatus.
3. This appliance is not intended for use by persons (including young children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. **WARNING.** Do not insert any objects into any openings of an electrical apparatus.
5. **WARNING.** Do not touch any moving parts of any electrical apparatus.
6. **WARNING!** Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
7. **WARNING.** Do not use this apparatus near water. To avoid the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashes.

8. WARNING. No objects filled with liquid, such as vases, shall be placed on any electrical apparatus.

9. Do not immerse in any liquid whilst in use or in cleaning. Clean only with a damp cloth, dry with a dry towel. Do not use harsh abrasives as these may damage plastic parts.

10. DO NOT block any ventilation openings. Keep away from curtains, newspapers and restricted areas. Install in accordance with any specific manufacturer's instructions. Always allow a sufficient gap around the apparatus to avoid overheating.

11. DO NOT install near any heat sources such as radiators, gas heaters, stoves or other apparatus (including amplifiers) that produce heat. Do not leave in direct sunlight.

12. WARNING. Do not place any naked flame source, such as lighted candles on any electrical apparatus.

13. WARNING! Connect to a suitable 230-240V ~ 50 Hz power supply only. If a class 1 product it must be connected to a suitably earthed mains socket.

14. Always unplug from the power source when any electrical apparatus is not in use.

15. Do not abuse or damage a power cord. If any power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard. A replaceable cord must be replaced with an authorised replacement from an authorised service agent only.

16. Only use attachments/accessories specified by the manufacturer.

17. Unplug this apparatus during lightning storms or when unused for long periods of time.

18. Attention is drawn to the environmental aspects of disposing of any battery.

19. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

20. Do not attempt to service any double insulated apparatus. Double insulated apparatus requires specialist servicing and knowledge to retain the safety of the apparatus.

21. WARNING. Do not use any electrical apparatus outdoors. If any electrical apparatus is to be used outdoors, use a suitable Isolating transformer or Electrical Safety Switch (RCD).

22. For household use only, this apparatus is not intended for commercial use.

23. This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses

- by clients in hotels, motels and other residential type environments

- bed and breakfast type environments

24. If the apparatus is provided with a replaceable or non replaceable Lithium battery, the following applies

- CAUTION: Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

25. Warning! Dispose of batteries according to the manufacturers instructions.

26. If this apparatus is to be used by a third party, please supply these instructions with it.

27. No liability will be accepted for any personal injury or damage caused by failure to follow these instructions.

Overview

Thank you for purchasing this AVIO Bluetooth water resistance speaker. You can now enjoy audio playback from your Bluetooth enable device through this AVIO speaker.

 
Features:

- Wireless connection using bluetooth between your personal device and AVIO bluetooth speaker
- Rechargeable lithium-ion battery provides hours of entertainment.

Product Includes

This AVIO product includes the following;

- Bluetooth Water Resistant Speaker 1x
- Instruction manual 1x
- 3.5mm Line-in Cable (AUX) 1x
- USB cable for Charging 1x



Operation

Charging the Speaker

 
Before using your AVIO bluetooth speaker, it is important that it is completely charged (100%) before using for the first time.

To charge your bluetooth speaker, take your supplied micro USB cable and connect to your bluetooth speaker and an appropriate USB charging port. Please note charging port must have a rating of 5V 1A.



LED Indicator Light

The Speaker's LED status indicators are located at the top of the speaker. They illuminate power and other functions.

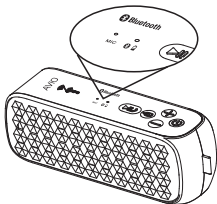

Charging the Speaker:

- LED will flash Red while charging.
- LED will be blue when the battery is fully charged.

Low battery indicator:

 
 
- LED will flash red for reminding.






Bluetooth® pairing:

LED will flash blue whilst waiting for a bluetooth connection. Once a connection is established LED will remain blue constantly.

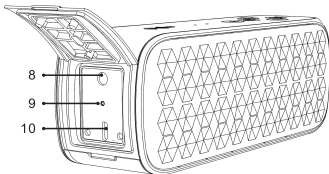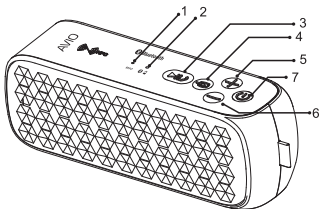Function Buttons

The function buttons are located at the top of the speaker.



1. Microphone for when taking calls when your mobile phone is connected to the speaker with Bluetooth.
2. LED Indicator-illuminates to show various functions of the speaker.
3.  -Press to play or pause a song. If the speaker is connected to a mobile phone and a call comes in, press once to take or hang up the call. Press and hold to disconnect from your current Bluetooth device.
4.  -Press to switch between Bluetooth and Line in modes.
5.  -Press and hold to increase volume.
6.  -Press and hold to decrease volume.
7.  -Press to turn on or turn off the speaker
8. Line-in Accepts 3.5mm Line-in cable for audio.
9. RESET-Stick a pin into the hole to reset the speaker.
10. Micro-USB-Connects to a micro-USB cable for charging the speaker.

Pairing with Bluetooth® Devices

Pairing occurs when two Bluetooth devices communicate with each other and establish a connection. A record of information about this connection is stored in the memory of each device.

Once you pair a device with the speaker you should not have to pair it again.

Using the Bluetooth speaker

Making a Bluetooth Connection


- Making a Standard Bluetooth connection

① Turn on the Bluetooth inside of your Bluetooth device like mobile or tablet.

② Search for "AV-3233" Bluetooth speaker in your Bluetooth device, and then select it to pair.

③ In the instance a password is required please input the password '0000'.

- Making a NFC Bluetooth Connection

For the first time to use the Bluetooth speaker, you may pair the Bluetooth speaker with your Bluetooth device directly without any setting. If you already paired the Bluetooth speaker successfully with one of your Bluetooth devices, you need to hold  key 2 seconds until the Indicator Light starts to blink in blue, and then pair the Bluetooth speaker to another Bluetooth device.

① Turn on the NFC inside of your Bluetooth device like mobile or tablet.

② Keep your Bluetooth device NFC induction area closed to NFC induction area of the Bluetooth speaker, until the distance between them is less than 2cm.

 
③ Select Bluetooth speaker in your Bluetooth device, then they are paired successfully.

* Please remove the protect case of your Bluetooth device while pairing.

- Making a Line-in Connection

① Connect the Bluetooth speaker to your audio device using a 3.5mm line-in audio cable.

② Under the situation of the Bluetooth speaker is on, the Bluetooth speaker will detect the audio device automatically and enter line-in play mode.



Cleaning the Speaker

Important

- Make sure the speaker is not charging by removing the Micro-USB cable.
- Do not use volatile solvent such as ethanol, rosin toluene solvent to clean the speaker.

Cleaning

- Use a 100% cotton cloth or micro-fiber cloth to wipe the speaker.

Trouble shooting

| Problem | Possible solutions |
|--|--|
| The speaker doesn't turn on | Most likely the battery does not have any power left. Plug the speaker into a power source to charge the speaker. |
| Bluetooth device is not connecting | Please try the following solutions. 1.If the device is asking for a passkey use "000" 2.Turn the speaker on and off. 3.Trun the Bluetooth on and off from your device. 4.Try removing the speaker from the Bluetooth pairing list and retry the connection instructions. |
| The speaker isn't playing but it's paired or connected | Please try the following solutions. 1.Power on and off the speaker 2.Check if you have muted the speaker or your music source. 3.Make sure you have the correct mode (Bluetooth or Line in) |
| Poor sound quality from the speaker | Please try the following solutions. 1.Make sure the speaker is fully charged. 2.Make sure your Bluetooth device is not too far from the speaker. 3.Make sure your 3.5mm Line-in cable is not damaged and fully plugged in. |

Specifications

| | | |
|--------------------|-------------------------|--|
| Input | Bluetooth | 2.1+EDR, NFC. |
| | Micro SD card | Nil |
| | Line in | |
| Output | Speakers | 4ohm 2 × 1.5 "Fullrange speaker + 85 × 45mm Passive Radiator |
| | SystemType | 2.0Bassflex |
| | Frequency Response | 100Hz~17KHz ±3dB |
| | Audio Amplifier | Integrated Classs-D 2×3W(RMS) |
| | Distortion Ratio | ≅ 1% @500mV/1kHz |
| | Signalto NoiseRatio | ≅ 75dB(A Weighted) |
| Battery | Embedded or replaceable | Embedded |
| | Batterytype | Lithium-ionpolymer |
| | Battery capacity | 1300mAh |
| | Battery output voltage | 5V |
| Audio | Audio formats | MP3 / WAV / OGG / FLAC / APE / M4A(WMA & AIF are not supported.) |
| Dimension & Weight | Dimension | 174×63×54mm |
| | Weight | 408g |
| Temperatu re | Storage | -10°C -55°C |
| | Operating | -5°C -60°C |

Guarantee Card

This product is guaranteed against faulty materials and workmanship for a period of one years from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR PRODUCTS USED COMMERCIALY LIMITED TO 90 DAYS

Type of Product: _____

Model No.: _____

Purchase Date: _____

Product _____ Purchased _____ From: _____

Your Name: _____

Address: _____

Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the product to your retailer, otherwise a fee may be charged.

New Zealand call Toll Free 0800-898580

