



## CD MINI SYSTEM

Model: VN3291MS



# INSTRUCTION MANUAL

# CONTENTS

---

Important Safety Instructions .....	3-5
Introduction .....	6
Panel Overview .....	7
Remote Overview .....	8
Audio System Setup.....	9
Basic MINI System Operation	
-General operation .....	10
-CD operation .....	11-12
-USB operation .....	13
-FMTuneroperation .....	14
-LINE In/AUX operation .....	15
-Bluetooth operation .....	16
Troubleshooting .....	17
Product Specification .....	18
Guarantee Card .....	19

# IMPORTANT SAFETY INSTRUCTIONS

---

## Helpline

For Technical Assistance

Please call

0800 422 274

### SYMBOLS



### IMPORTANT SAFEGUARDS

**When using any electrical apparatus always observe safety regulations and use basic safety precautions to reduce the risk of fire, electric shock and personal injury, including the following.**

# IMPORTANT SAFETY INSTRUCTIONS

---

**When using any electrical apparatus always observe safety regulations and use basic safety precautions to reduce the risk of fire, electric shock and personal injury, including the following.**

1. Read, Keep and Follow these instructions, heeding all Warnings.
2. Keep out of reach of young children. This apparatus is not suitable for use by young children or infirm persons without supervision. Young children must be supervised to ensure that they do not play with the apparatus.
3. This appliance is not intended for use by persons (including young children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. WARNING. Do not insert any objects into any openings of an electrical apparatus.
5. WARNING. Do not touch any moving parts of any electrical apparatus.
6. WARNING! Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable
7. WARNING. Do not use this apparatus near water. To avoid the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashes.
8. WARNING. No objects filled with liquid, such as vases, shall be placed on any electrical apparatus.
9. Do not immerse in any liquid whilst in use or in cleaning. Clean only with a damp cloth, dry with a dry towel. Do not use harsh abrasives as these may damage plastic parts.
10. DO NOT block any ventilation openings. Keep away from curtains, newspapers and restricted areas. Install in accordance with any specific manufacturer's instructions. Always allow a sufficient gap around the apparatus to avoid overheating.
11. DO NOT install near any heat sources such as radiators, gas heaters, stoves or other apparatus (including amplifiers) that produce heat. Do not leave in direct sunlight.
12. WARNING. Do not place any naked flame source, such as lighted candles on any electrical apparatus.
13. WARNING! Connect to a suitable 220-240 ~ 50/60 Hz power supply only. If a class 1 product it must be connected to a suitably earthed mains socket.
14. Always unplug from the power source when any electrical apparatus is not in use.
15. Do not abuse or damage a power cord. If any power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard. A replaceable cord must be replaced with an authorised replacement from an authorised service agent only.
16. Only use attachments/accessories specified by the manufacturer.

# IMPORTANT SAFETY INSTRUCTIONS

---

17. Unplug this apparatus during lightening storms or when unused for long periods of time.
18. Attention is drawn to the environmental aspects of disposing of any battery.
19. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
20. Do not attempt to service any double insulated apparatus. Double insulated apparatus requires specialist servicing and knowledge to retain the safety of the apparatus.
21. WARNING. Do not use any electrical apparatus outdoors. If any electrical apparatus is to be used outdoors, use a suitable Isolating transformer or Electrical Safety Switch (RCD).
22. For household use only, this apparatus is not intended for commercial use.
23. This appliance is intended to be used in household and similar applications such as
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments
24. If the apparatus is provided with a replaceable or non replaceable Lithium battery, the following applies
  - CAUTION: Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
25. Warning! Dispose of batteries according to the manufacturers instructions.
26. If this apparatus is to be used by a third party, please supply these instructions with it.
27. No liability will be accepted for any personal injury or damage caused by failure to follow these instructions.

# INTRODUCTION

---

Thank you for purchasing this VEON audio product. Please read through this manual in full before making any connections and/or operating this product. Please retain this manual for future reference.

Features:

- Compatible with CD, MP3, CD-R and CD-RW.
- USB input for media playback.
- Full function remote control.
- FM stereo radio tuner.

## Package Contents:

User manual



Remote control



Battery




FM antenna



# PRODUCT OVERVIEW

Front Panel

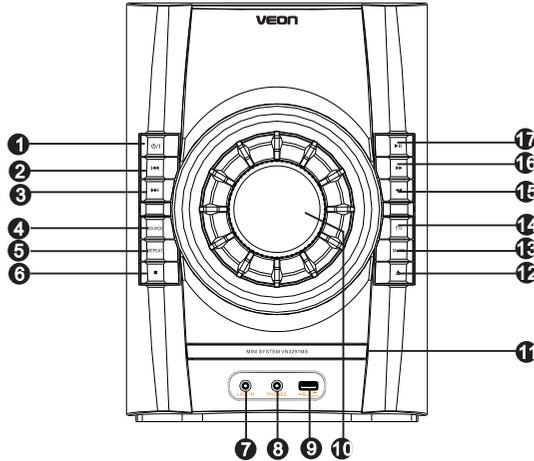


- 1 STANDBY
- 2 PREVIOUS
- 3 NEXT
- 4 SOURCE
- 5 REPEAT
- 6 STOP

- 7 LINE IN
- 8 HEADPHONE
- 9 USB INPUT
- 10 VOLUME CONTROL
- 11 DISC TRAY



**WARNING:** Excessive sound pressure from earphones or headphones can cause hearing loss.


REAR PANEL:

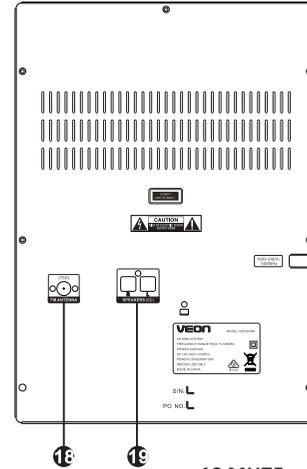

- 13 MUTE
- 14 EQ
- 15 FAST REWIND
- 16 FAST FORWARD
- 17 PLAY/PAUSE
- 18 FM ANTENNA JACK
- 19 SPEAKER OUTPUT

# REMOTE CONTROL OVERVIEW

Insert the battery into the remote control. Point the remote control at the sensor on the front panel. The remote control works within a reasonable proximity (4-5 Metres) and angle of the unit's sensor.

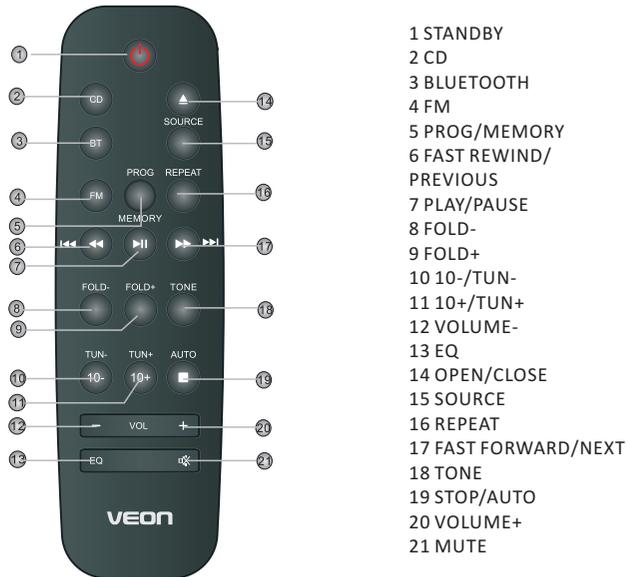

**Note:**

- Remove the battery when you do not intend to use the remote control for a long time.
- Weak batteries can leak and severely damage the remote control.


# AUDIO SYSTEM SETUP

---

## Speaker Connection

Connect the speakers to speaker output terminals with their attached speaker cables .

Amplifier Audio Input

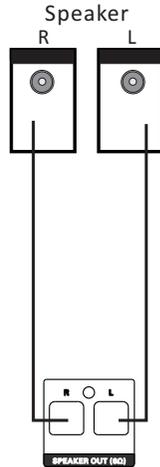

Speaker output  
CD Audio Output

# BASIC MINI SYSTEM OPERATION

## General Operation

### STANDBY



● Press to switch on the unit. Press it again to put the unit in standby mode.

### SOURCE



● Press repeatedly to switch among CD,LINE IN,BLUETOOTH,USB and TUNER mode.



● Press to enter to FM tuner mode.



● Press to enter to BLUETOOTH mode.



● Press to enter to CD mode.

### VOL+



● Press [VOLUME+] to turn up the volume.

### VOL-



● Press [VOLUME-] to turn down the volume.

### MUTE



● Press to temporarily switch off the sound . Press it again to switch it on.

### EQ



● Press to switch the equalizer modes.

### TONE



● Press to enter TONE settings adjust BASS and TREBLE using the volume control.

# BASIC MINI SYSTEM OPERATION

---

## CD Operation

### OPEN/CLOSE

-  ● Press to open or close the disc tray.

### STOP

-  ● Press to stop a playback .



- Press to temporarily pause a playback. Press it again to resume the playback.



- Press to skip to the next chapter/track.



- Hold down for fast forward playback .



- Press to return to the previous chapter/track.



- Hold down for fast rewind playback .

### REPEAT



- Press repeatedly to switch the repeat modes, REPEAT ALL or TRACK.



- Press this button for each time to increase ten tracks.(Only in MP3 mode)



- Press this button for each time to decrease ten tracks.(Only in MP3 mode)

# BASIC MINI SYSTEM OPERATION

---

## CD Operation-Continued

- a. In CD playback mode, press the stop button first, then press program button to start the program operation.
- b. The display will show "PR\_\_\_", press the previous/next or 10+/- button to select the track that you want to be programmed, and press the program button again to confirm.
- PROGRAM ● c. Then the display will show the programmed track and skip to next program track setting. For example, "009 PR 06" means the number 9 track was programmed as the number 06 track.
- d. Repeat the above step b and c to set up reset track till the display show "FULL".
- e. Then press the play button to start the programmed playlist playing.
- f. To cancel and remove the programmed playlist, press the stop button twice, or eject the CD disc.
  
- FOLD+ ● Press to skip the next folder. (Only in MP3 mode)
  
- FOLD- ● Press to return to the previous folder. (Only in MP3 mode)

# BASIC MINI SYSTEM OPERATION

---

## USB Operation

SOURCE



● Press SOURCE on the main unit repeatedly to enter to USB mode.

### Basic USB operation:

This unit has a USB port located on the front terminal of the unit. The purpose of this input is to enable MP3 playback from your USB STICK, FLASH DRIVE and/or MEMORY STICK. (THIS PORT IS NOT INTENDED FOR CHARGING).

Insert your USB device, the micro system will recognize its connection if READING is displayed across the display screen.

The mini system will automatically pick up any MP3 files located on the USB device and begin play back. The mini system will automatically organize the playlist of the MP3 files.

Proceed to use PLAY/PAUSE, NEXT, PREVIOUS and STOP located on your remote and unit to control.

# BASIC MINI SYSTEM OPERATION

---

## FM Tuner Operation



### Manual Tuning an FM Frequency

- TUN+: press to fine tune (increase) the frequency;
- TUN-: press to fine tune (decrease) the frequency.
- Hold down [TUN+/-] to increase/decrease the frequency continuously.



### Auto Tune FM Frequencies

- Hold down to do auto scanning for the broadcasting radio channels, press it again to stop auto scanning.



### Manual Storing FM Frequencies

- After tuning in a new frequency, press [MEMORY] then select a preferred station by pressing arrows [◀◀]/[▶▶], press [MEMORY] again to confirm and save it as a preset station.



- Press to skip to the next preset station.



- Press to skip to the previous preset station.

# BASIC MINI SYSTEM OPERATION

---

## LINE IN/AUX operation

SOURCE



● Press **SOURCE** on the main unit repeatedly to enter to LINE INPUT/AUX mode.

LINE IN(3.5mm/AUX) input is located on the front panel of the micro system. Using the appropriate 3.5mm connection connect to your selected device.

# BASIC MINI SYSTEM OPERATION

## BLUETOOTH CONNECTION

SOURCE



● Repeatedly press **SOURCE** button to switch to BLUE(BLUETOOTH)mode.

**Bluetooth Pairing Name: Veon VN3291MS**


**IMPORTANT:** To make a bluetooth connection you **MUST** have an **ENABLED** bluetooth device such as laptop, smart phone or computer. Not all external device are bluetooth enabled. Please check your devices manual to ensure your selected device is bluetooth enabled.

**Bluetooth Pairing Mode:** The LED display will display "NO BT".

### To make a bluetooth Connection:

To make a bluetooth connection the VEON micro system must be in pairing mode. Once in pairing mode, use your selected device to search and select the bluetooth pairing name (Veon VN3291MS). If your device requested a pass code place used '0000'. Once a connection has been made the LED display 'BT'.

**To disable a bluetooth connection:** Hold down the PLAY/PAUSE button for about 5 seconds.

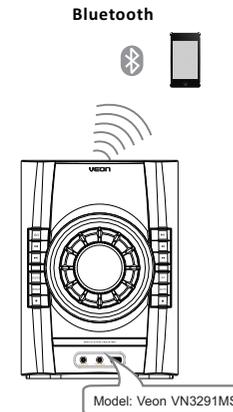

# TROUBLESHOOTING

---

Symptom	Check & Action
<b>No Power</b>	Check if power cord is connected properly to the power outlet. Check if main power button on the unit is switched on.
<b>Remote not working</b>	Remove obstacles between the remote and the appliance. Ensure you are pointing the remote at the remote sensor on the appliance. Check the batteries have been inserted properly. Replace dead batteries.
<b>Does not play</b>	Disc has been loaded upside down, place disc with label side up. Disc is not correct type for the player. Disc is damaged or dirty. Moisture may be condensed inside the player, remove disc and leave the unit on for 1 or 2 hours before using.
<b>Noise distorted</b>	The disc is dirty or damaged, clean the disc and try again.

# PRODUCT SPECIFICATION

Power supply		AC 100-240V~50/60Hz
Power consumption		40W
Working environment	Temperature	-10~+35°C
	Relative humidity	5%~90%
Disc output	Frequency Response	70Hz~20kHz
	S/N(A weight)	>70dB(1kHz)
	Dynamic Range	≥65dB(1kHz)
	THD+NOISE	≤-60dB(1kHz)
Tuner	FM band Range	87.5MHz~108MHz
Power output (Max)		50WX2
Frequency response		±3dB(70Hz~20kHz)

## Guarantee Card

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

### WARRANTY FOR PRODUCTS USED COMMERCIALY LIMITED TO 90 DAYS

Type of Product: \_\_\_\_\_

Model No.: \_\_\_\_\_ Purchase Date: \_\_\_\_\_

Product Purchased From: \_\_\_\_\_

\_\_\_\_\_

Your Name: \_\_\_\_\_

Address: \_\_\_\_\_

\_\_\_\_\_ Phone Number: \_\_\_\_\_

### IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the product to your retailer, otherwise a fee may be charged.

