




55" / 75" 4K ULTRA HD LED/LCD  
SMART TELEVISION

MODELS: VPS55UHD/VPS75UHD

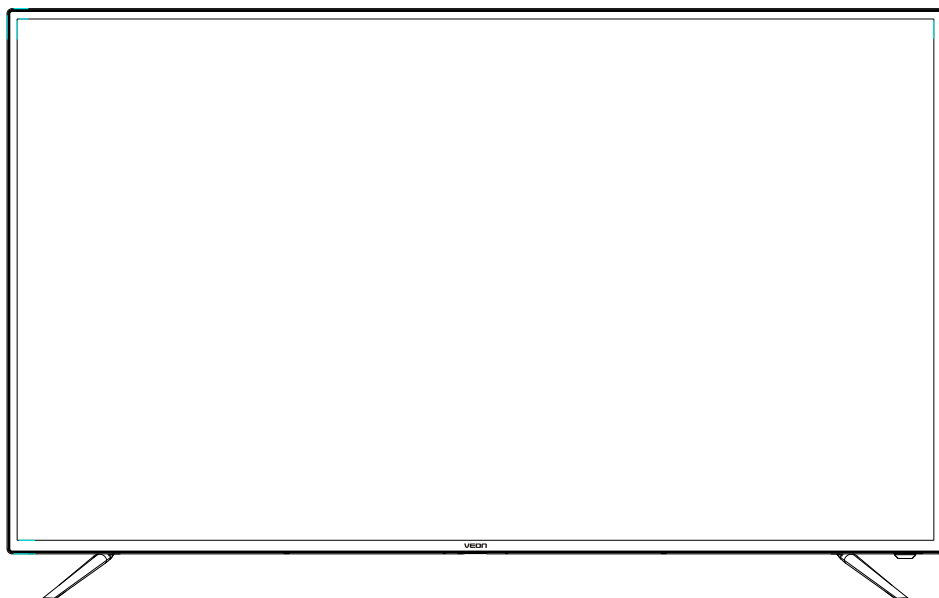

Instruction Manual




















# Welcome

Congratulations on choosing to buy a VEON product.

All products brought to you by VEON are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year Warranty.

We hope you will enjoy using your purchase for many years to come.

# Remote Control

- 1 POWER:** Set the unit to standby mode; press it again to switch it on.
- 2 **: Play/Pause in Timeshift and USB mode.
- 3 **: Move fast backward.
- 4 **: Stop playing.
- 5 **: Play the previous file.  
**FAV:** Display your favourite program list.
- 6 **: Home page in Smart mode.
- 7 **: Activate/deactivate air mouse in Smart mode.
- 8  /  /  / **: Press the RIGHT/LEFT UP/DOWN buttons to navigate the on-screen menus and adjust the system settings to your preference. Press **OK** to confirm your selection.
- 9 VOL +/-:** Turn the volume up/down.
- 10 MUTE:** Mute the sound. Press again to restore the sound.
- 11 NUMBER BUTTONS (0-9):** Select a TV channel directly when watching TV. The channel changes after 2 seconds.
- 12 **: Record program in DTV mode.
- 13    **: In HbbTV mode, press the colour buttons to access HbbTV applications (FreeviewPlus catchup TV programs).



# Remote Control (Cont.)



- 14 **MENU:** Display the main menu; press again to return to the previous menu page.
- 15 **MEDIA:** Enter Media (USB) mode directly.
- 16 **SUBTITLE:** Enable/disable subtitles.\*\*
- 17 **INFO:** Display information of the current program (DTV).
- 18 **EPG:** Launch the Electronic Program Guide (DTV).
- 19 **SMART TV/TV:** Select SMART TV or TV (DTV).
- 20 **CH+/-:** Press to play the next or previous channel; press repeatedly to scan through the channels.
- 21 **OK:** Confirm selection.
- 22 **↷/↶:** Return to the previous channel in DTV mode. Return to the previous page in FreeviewPlus catchup applications.
- 23 **▶▶:** Play the next file.  
**INDEX:** Display the record list.
- 24 **EXIT:** Exit from the main TV menu displayed on the screen. Display the DVD title menu (DVD)\*.
- 25 **▶▶:** Move fast forward.
- 26 **SOURCE:** Select the input source.

# Remote Control (Cont.)

There is a built-in keyboard on the back of the remote control for easy operation (for Smart Hub).



## TIPS:

- To enter UPPERCASE letters, press the 'Caps' button first, followed by the chosen letter button.
- To enter the numbers and characters shown on the keys in yellow, press the 'Alt' button first, followed by the chosen letter button.
- As an alternative to the remote control keyboard, you can use the on screen keyboard.
  - Press the up/down/left/right navigation key to select characters.
  - Press the ■ RED button for ENTER function.
  - Press the ■ GREEN button to move the cursor to the left.
  - Press the ■ YELLOW button to move the cursor to the right.
  - Press the ■ BLUE button for backspace function.

**NOTE:** If you experience difficulty with connection or range of the air mouse or keyboard features of the remote, please connect the USB air mouse dongle extension cable to the USB port labelled '**Air Mouse**' at the rear of the TV.

**NOTE:** USB air mouse dongle must be connected for keyboard to work.

# Remote Control (Cont.)

## Using the Remote Control

To use the remote control, point it towards the remote sensor at the front of the TV.

The remote control has a range of up to approximately five metres (5m) from the TV at an angle of up to 30 degrees each to the right and left of the sensor. The remote control will not operate if its path is blocked.

### NOTES:

- Do not drop, step on or otherwise impact the remote control as this may damage the parts or lead to a malfunction.
- The operating distance may vary according to the brightness of the room.
- Do not point bright lights at the remote control sensor.
- Do not place objects between the remote control and the remote control sensor.
- Do not use this remote control while simultaneously operating a remote control of other devices.

## Remote Control Preparation

- Install the batteries in the back of the remote control, ensuring to match up the polarity markings (+/-).
- The batteries should last for around one year, depending on how often they are used.
- If the remote control does not work when operated near the TV, replace the batteries.

**NOTE:** Remove the batteries if the remote control is not going to be used for a long time.

## Pairing the Remote Control and the Receiver

If you get a new/replacement remote control, you will need to pair it with the receiver.

1. Press and hold the **OK** button and the **MUTE** button for about three seconds. The remote control light will turn on and then flash quickly, as it enters pairing mode.
2. Turn on the USB receiver and wait for about three seconds. The remote control light will turn on and flash three times. Once pairing has successfully occurred, the remote control light will turn off.

# Contents

Welcome	iii
Remote Control	iv
General Safety Instructions	1
Installation	4
Controls and Connections	6
Getting Started	13
Basic Operations	16
Electronic Program Guide (EPG)	18
Recording	19
Smart TV	22
Media Mode	29
Menus	32
FAQs	49
Specifications	51






# General Safety Instructions

Read this manual thoroughly before first use and keep it in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Follow all instructions and take notice of all the warnings.

**This product complies with Australian Safety standard AS/NZS 60065:2012 to ensure the safety of the product.**

 <b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>		<p>The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert you to the presence of non-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
<p>To reduce the risk of electric shock, do not remove the cover (or back). This unit contains no user-serviceable parts inside. Refer all servicing to qualified service personnel only.</p>		<p>The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.</p>

## IMPORTANT WARNINGS AND CAUTIONS

- Only connect this TV to a mains socket with a protective earthing connection.
  - Do not change or modify the appliance in any way.
- Only use the attachments/accessories specified by the manufacturer.

## IMPORTANT INFORMATION

If the television is not positioned in a sufficiently stable location, it can be a potential hazard and may fall. Many injuries, particularly those to children, can be avoided by taking simple precautions:

- Use cabinets or stands recommended by the manufacturer of the television.
- Only use furniture that can safely support the television.
- Ensure the TV is not overhanging the edge of the supporting furniture.
- Do not place the TV on tall furniture (for example on a cupboard or bookcase) without anchoring both the furniture and the TV to a suitable support.
- Do not place the TV on cloth or other materials between the TV and supporting furniture.
- Educate children about the dangers of climbing on furniture to reach the television or its controls.

# General Safety Instructions (Cont.)

## Installation

**Follow instructions:** Only install this TV set in accordance with the instructions in this manual.

- This TV is equipped with standard wall-mounting points, and **we recommend that a wall bracket be installed between the TV and the wall to prevent the TV from falling from a cabinet.** (The bracket is not included.)
- When deciding on where to put the TV set, make sure the place is:
  - Well ventilated, and away from damp and cold.
  - Protected from overheating and away from direct sunlight.
  - Away from moisture drips or splashes.
  - Protected from excessive dust or grease.
- **Bookcase:** Do not install this equipment in a confined space such as a bookcase or similar unit.
- **Heat:** Do not install the TV set near heat sources such as radiators, stoves or other audio visual equipment (including amplifiers) that produce heat.
- **Water:** Do not place containers with liquids (such as vases) or with small metallic objects on top of the unit. If liquid enters the unit or any metal object falls into the unit, it may result in short-circuit, fire or electric shock.
- **Fire or explosion:** Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the TV set.
- **Antenna:** Install the antenna away from high-voltage power lines and communication cables and make sure it is installed securely. If the antenna touches a power line, contact with the antenna could result in fire, electric shock or serious injury.
- **Ventilation:** Install the unit at an adequate distance from the wall to ensure sufficient ventilation. If the temperature inside the unit rises, it may result in fire. **Electrical Safety and Cord Handling**
- **Voltage:** Before installing this TV set, make sure your outlet voltage corresponds to the voltage stated on the appliance rating label.
- **Protect from moisture:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture; do not use it anywhere near water; do not touch the power plug with wet hands.
- **Damage:** Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.

# General Safety Instructions (Cont.)

- **Moving:** When moving the unit, be sure to turn it off and unplug it from the wall outlet. Moving the unit with the power cord connected to the outlet may cause damage to the cord, resulting in fire or electric shock.
- **Packaging:** This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use.
- **Batteries:** When removing the batteries from the remote control, make sure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery. Please dispose of batteries responsibly by recycling at your nearest recycling centre.

## **WARNING!**

Batteries must not be exposed to excessive heat such as direct sunlight, fire or other sources of heating.

- **Usage restriction:** This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the product by a person responsible for their safety.
- **Children:** Supervise young children to ensure they do not play with the TV.

## **Cleaning and Maintenance**

- **Unplug:** To reduce the risk of fire and electric shock, always unplug the TV before cleaning.
- **Cleaning:** Only use a soft, dry cloth for cleaning the TV; do not use a damp cloth. Never clean with industrial strength polish, wax, benzene, paint thinner, air freshener, lubricant, detergent or other chemicals. Wipe off any moisture, dirt or dust on the power plug pins with a clean, dry cloth.
- **Repair:** If the unit requires repair, contact the after sales support line; never disassemble or modify the unit or attempt to service it yourself.
- **Service:** Refer all servicing to qualified service personnel. Servicing is required when the TV has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the TV, when the TV has been exposed to rain or moisture, does not operate normally, or has been dropped.

# Installation

Your TV is packaged with the two stand legs separate from the cabinet. Before using the TV, install the stand as described below. Or if you want to mount it to a wall, see the following page for mounting advice (the wall mount itself is not supplied).

## IMPORTANT!

- Make sure the TV set is unplugged from the power supply before installing or removing the stand.
- The TV panel may be awkward to install on your own. We recommend you ask someone to help with installation and/or removal of the stand.

## Attaching the Stand

### Step 1

Place a soft cushioned material on top of a flat surface to prevent damaging the screen panel. Then place the TV screen flat on top, with the screen side facing down, as illustrated on the right (1).

### Step 2


Align the stand base to the installation point, as illustrated on the right (2).

### Step 3

Tighten the screws (supplied) with a screwdriver to affix the stand to the panel, as illustrated on the right (3).

## CAUTION!

- Do not apply excessive force as this may damage the screw holes.
- Unplug the power plug first when installing or removing the TV Stand.
- To avoid any damage to this TV, we recommend you ask someone to help with installation and/or removal of the stand.

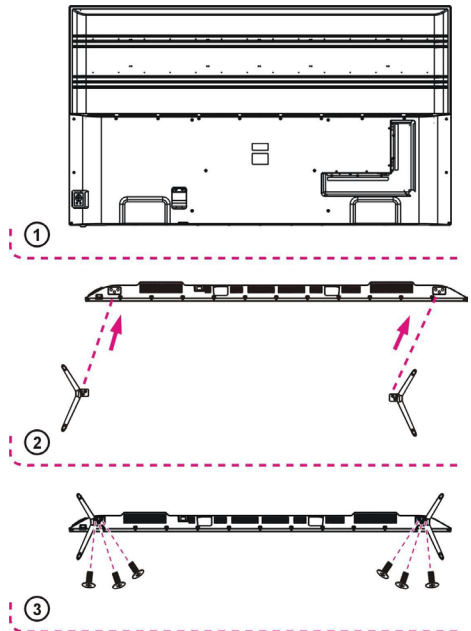


# Installation (Cont.)

## Wall-Mounting Instructions

### IMPORTANT!

- Make sure the TV set is unplugged from the power supply before removing the stand and mounting it to a wall.
  - We recommend you contact a professional for assistance when wall-mounting the TV. We assume no liability for any damage to the product or injury to yourself if you mount the TV.
- 
- The TV set is equipped with holes on the back panel for use with wall-mounting brackets (not included). Please use the illustration below as a reference when buying wall-mounting brackets.
  - Use four standard M6\*12mm screws (or longer, depending on the mounting bracket) to mount this TV.

Back of the TV

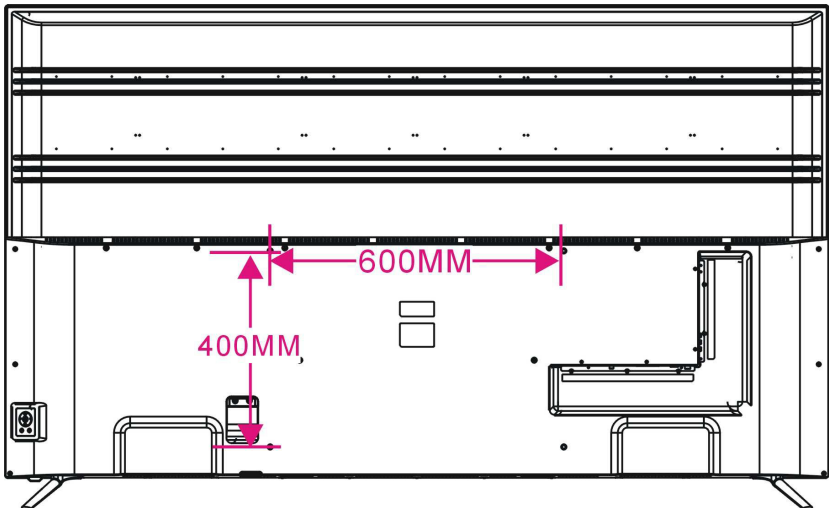



**NOTE:** The screws in the package are for securing the TV stand only. If you are wall-mounting the TV, please consult a professional installer for further instructions on bracket support and wall support.

# Controls and Connections

Front View



Back View

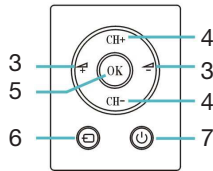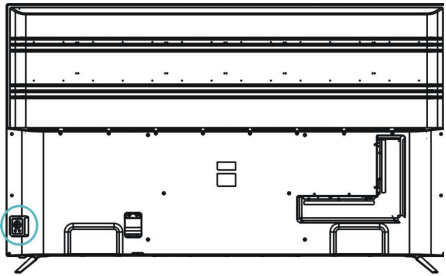


1. **LCD Display** Screen
2. **IR (infra-red)** Sensor for Remote Control  
**Power Indicator:** In standby mode the indicator light is red; when switching on the unit the indicator light will illuminate blue.
3. **VOL + / -** : Increase/decrease the volume level or move left/right.
4. **CH + / -** : Select the next/previous channel or move up/down.
5. **MENU**: Enter the settings menu.
6. **SOURCE**: Select the input source.
7. **STANDBY**: Turn the TV On/Standby.

**NOTE:** See next page for a detailed description of all the sockets on the back panel.

# Controls and Connections (Cont.)

## Main Unit Back View Controls and Sockets

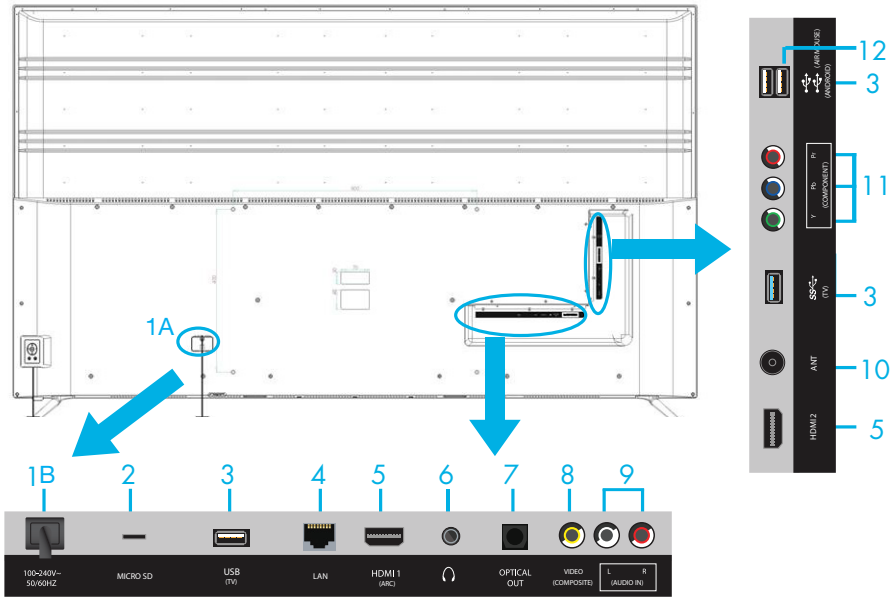


1. **POWER CORD:** 1A: Model VPS75UHD, 1B : Model VPS55UHD
2. **MICRO SD CARD INPUT** (for Model VPS75UHD only):
3. **USB:** Connect a USB storage device to USB (TV) for PVR recording and multimedia file playback.
4. **LAN INPUT** (Local-Area Network): For connecting to the internet.
5. **HDMI 1 (ARC) / HDMI 2:** Provides a digital video/audio connection between the TV and any HDMI devices.
6. **HEADPHONES OUTPUT:** Connect your headphones via a 3.5mm connector.
7. **OPTICAL DIGITAL AUDIO OUTPUT:** Connect to an external digital audio device.
8. **AV (COMPOSITE VIDEO) INPUT:** Supports SD picture quality connections.
9. **L-R AUDIO INPUTS:** Shared with AV and Y/Pb/Pr video inputs.
10. **ANTENNA INPUT:** For connection of the external antenna.
11. **Y/Pb/Pr INPUT (COMPONENT):** Supports both SD (Standard Definition) and HD (High Definition) picture quality.
12. **USB FOR AIRMOUSE DONGLE**

# Controls and Connections (Cont.)

## IMPORTANT!


Read through the instructions before connecting the TV to other equipment.

## Connecting to an AC Power Source

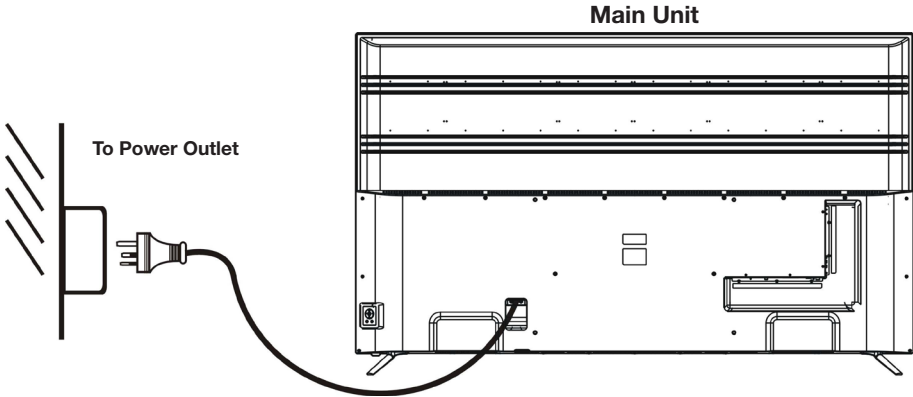

## Connecting an External Antenna

For the best picture quality, we recommend connecting the TV set to an external antenna.

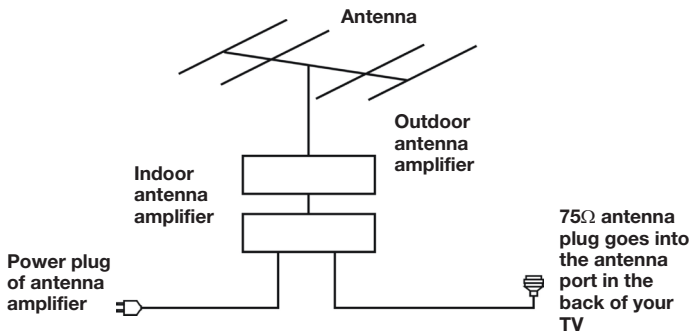


**NOTE:** At this stage, TV programming in New Zealand is not available in Ultra HD. Therefore, the result of up-scaling and displaying HD broadcast signals on a Ultra HD TV can be soft images, which don't have the detail or smoothness you see when watching the same content on an HD TV.




# Controls and Connections (Cont.)

 
## Composite Video (CVBS) Connection



For a non high-definition connection, use the composite Audio L/R (white/red) and video (yellow) cable to connect the unit with other devices.

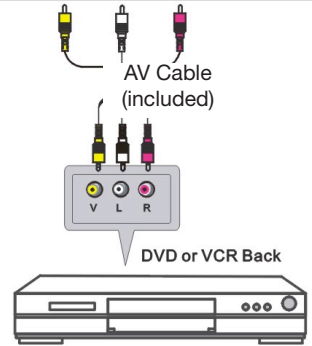


## HDMI Connection

 

Use a HDMI cable to connect the unit with other devices to receive high-definition multimedia signal.


HDMI Cable (not included)

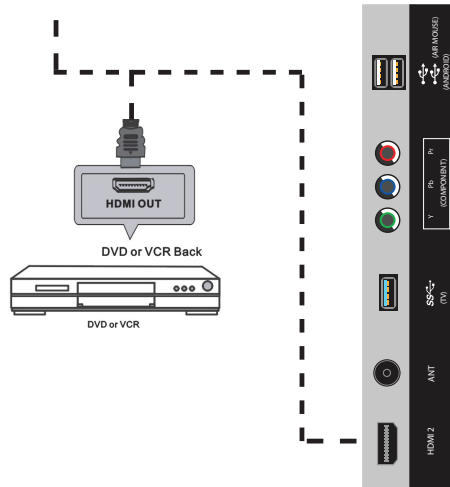

# Controls and Connections (Cont.)


## USB Connection

Insert a USB memory device into the USB port for PVR recording, time-shifting and playback of video/music/photo multimedia files.

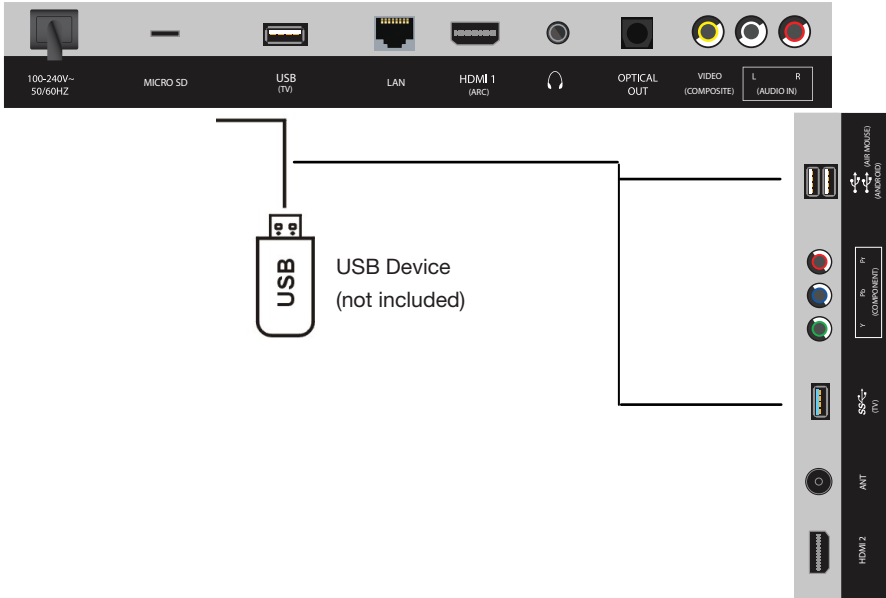

## Optical (S/PDIF) Connection


 
Connect to an amplifier or other audio decoding devices for a high quality digital audio connection.



Use a optical cable to connect the unit with an amplifier or other audio decoding device for optical audio signal output. (Optical cable is not included.)

# Controls and Connections (Cont.)

 
## Component (YPbPr) Connection

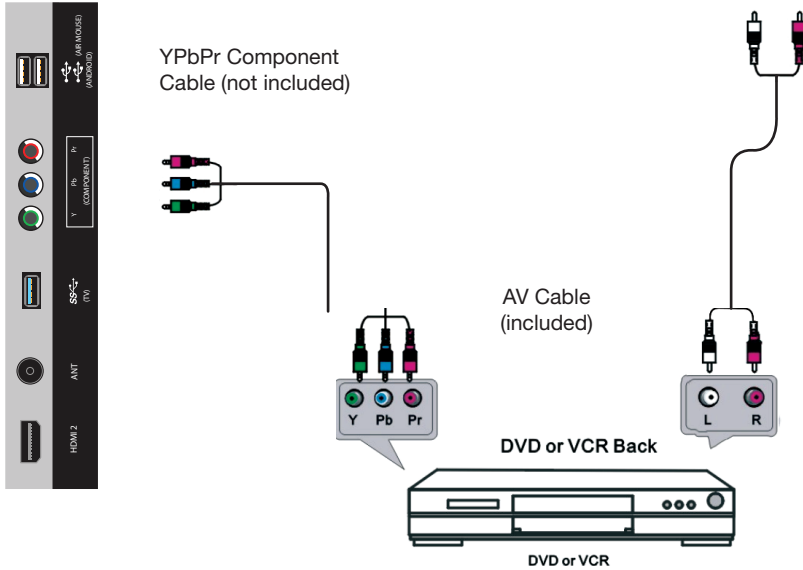

- Use a YPbPr component cable (not supplied) complete with green, blue and red terminals to connect to your external device.
- For sound, use the white and red jacks on the supplied AV cable to connect your external device to the TV.

# Controls and Connections (Cont.)
 
## Internet Connection




LAN Cable  
(not included)




Use a RJ45 LAN cable (not included) to connect this TV with an available network.

## Earphone Connection

 

Earphone Cable  
(not included)

## Micro SD Connection

 

Micro SD  
(not included)

# Getting Started

## IMPORTANT!

Make sure all relevant equipment is properly connected (as illustrated on the previous pages) before connecting the unit to a wall socket and turning on the power.

## Powering the TV


- Plug the power cord into a suitable power outlet, then turn on the power at the outlet.
- Press the **POWER** button, on the right lower side of the back panel (or on the remote control, making sure to aim it at the sensor at the front of the TV); the indicator light will glow blue. Press it again to power off (standby mode); the indicator light will glow red.

## Installation Guide

When you switch on the TV for the first time, the First Time Setup menu will be displayed on the screen, as illustrated below.

### Setup navigation

- Press the **▲ / ▼ / ◀ / ▶** buttons to select different sub menus.
- Press the **OK** button to confirm settings.
- Press the **MENU** button to go back to the previous step.
- Press the **EXIT** button to exit the menu page.

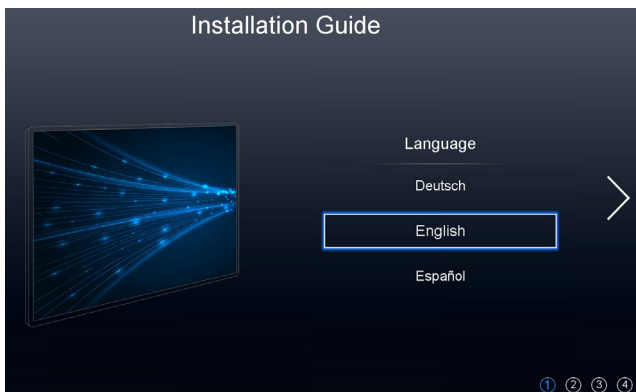

### Step One:

**Language:** Use the **▼ / ▲** buttons to select your On-Screen Display (OSD) language and then press the **OK** button to go to the next step.

# Getting Started (Cont.)

## Step Two:

### Network Setup:

**NOTE:** Make sure your Cable/DSL modem/router is turned on.




- If an Ethernet cable is already connected to the TV, the TV will automatically connect to the Internet. Select '**OK**' and press '**OK**' to move to the next step.
- If an Ethernet cable is not connected, connect the cable. Then select 'Try Again' and press the **OK** button. The TV will automatically connect to the Internet. Select '**OK**' and press the **OK** button to move to the next step.
- If you want to connect via Wi-Fi, select 'Use Wireless Network' and press the **OK** button. The TV will search for nearby wireless access points.
  - Select the name of your wireless access point and press the **OK** button.
  - Enter your wireless access point's password using the remote control's keyboard or the on-screen keyboard and press the **OK/ENTER** button.
  - When successfully connected, press the **OK** button to move to the next step.
  - Press the **Menu** button to go back to the previous step.
- Select 'Skip' and press the **OK** button to skip the network setup process and move to the next step. You can set up the network later on via the user menu. (See page 39.)

# Getting Started (Cont.)

## Step Three:


**Usage Mode:** Use the ◀ / ▶ buttons to select the usage mode of your new TV and then press the **OK** button to go to the next step. Press the **MENU** button to go to the previous step.

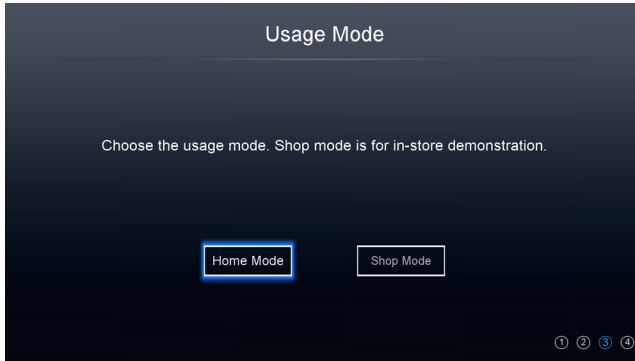

## Step Four:

### Auto Tuning:

- Use the ▲ / ▼ buttons to edit the Time Zone and then press ◀ / ▶ buttons to select your time zone.
- Use the ▲ / ▼ buttons to select 'Auto Start' and press the **OK** button to begin scanning for TV stations. To exit channel tuning, press the **EXIT** button. When auto searching is complete, your TV will show the first channel found.

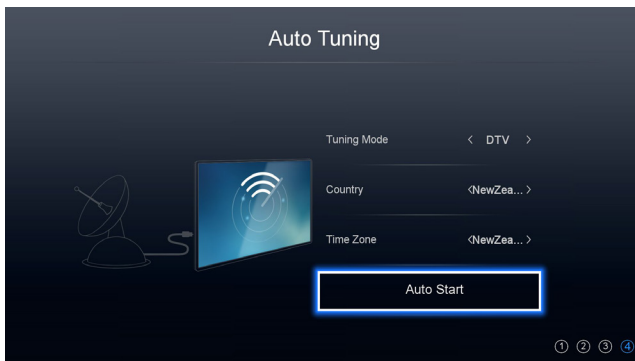


# Basic Operations

## Selecting an Input Source

- Press the **SOURCE** button at the lower-right side of the back panel, or on the remote control, to display the input source list.
- Press the **▲ / ▼** buttons to select the desired input source, and then press **OK** to confirm your selection from the following options: DTV, Analogue TV, AV, YPbPr, HDMI1, HDMI2, Smart TV.

**NOTE:** When you switch on this TV for the first time, you need to go through the first time installation and auto-search for all the DTV programs in your area.

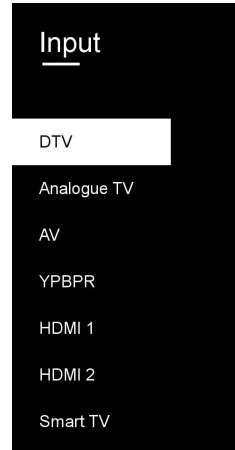

## Channel Selection

- Press the **CH +/-** button to select the next/previous channel.
- Alternatively, press the number buttons to select a channel directly.

## Volume Control

- Press the **VOL +/-** button to adjust the volume level.
- Press the **MUTE** button to mute the sound, press it again to restore sound.

## Information Display

- Press the **INFO** button to display information about the current program.





# Basic Operations (Cont.)

## Quick Select

- While viewing a channel, press the **OK** button to enter the Channel List directly.
- Press the **▲ / ▼** buttons to select the channel and press **OK** to watch it.




## Subtitles

- Press the **SUBTITLE** button on the remote control to enter the subtitle menu and select the available subtitle language.  
**NOTE:** The program you are watching must support subtitles.

# Electronic Program Guide (EPG)

## EPG TV Guide (for DTV mode only)

EPG stands for Electronic Program Guide. It is supplied by the program providers and offers information about the programs to be broadcast. You can access it in digital mode by pressing the **EPG** button on the remote control.

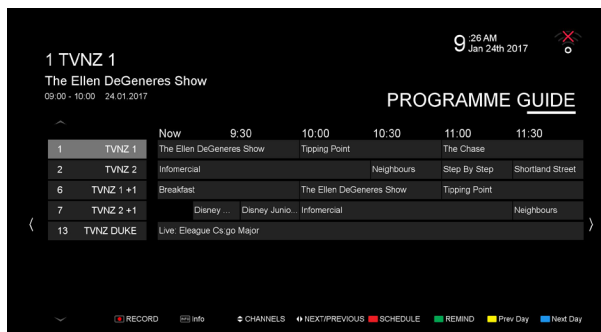

- Press the **EPG** button to display the EPG interface (above). The area at the top will display information about the selected program or channel, and the columns below will display the list of available channels and their programs at various time slots.
- Before you can view any EPG information, you have to 'activate' each channel for which you want to view program information. To do this, press the **▲ / ▼** buttons to select a channel in the left column, then press **OK** to confirm.
- Press the **◀ / ▶** buttons to switch between channels and program columns.
- Press the **▲ / ▼** buttons to select a different channel/program in the list and press **OK** to activate the channel.
- Select the programs column and press the **■ BLUE** button to view the TV guide for the next day.
- Select the programs column and press the **■ YELLOW** button to view the TV guide for the previous day.
- Press the **■ GREEN** button to schedule a reminder for the selected program.
- Press the **■ RED** button to view the listing of scheduled recordings.
- Press the **● RECORD** button to schedule the program for recording.
- Press the **INFO** button to display full program information.
- Press **EXIT** to exit the EPG menu.


# Smart Hub (Cont.)

## FreeviewPlus

FreeviewPlus is a service provided by Freeview New Zealand, which provides a state of the art Electronic Program Guide (EPG) and seamless access to catch-up TV across the free-to-air networks. FreeviewPlus uses HbbTV technology which combines broadcast and broadband. An Internet connection and an aerial are required. Data usage charges and conditions apply.

Once you're connected to the internet, press the:

 **GREEN** button on your remote to launch FreeviewPlus.

 **RED** button on your remote to launch broadcast network content and services.

Then follow the on-screen instructions to navigate through the applications.

### NOTE:

- Your home network must have broadband Internet access. Contact your Internet Service Provider (ISP) if you have problems maintaining a fast connection that is reliable.
- Accessing Internet content may incur access or data fees from third parties such as your ISP.
- Since all content is downloaded over the internet, there may be a delay in loading the content.
- If any of your other network connected devices such as computers, gaming consoles and network hard drives are transferring large amounts of data across your network (such as a file transfer, online gaming, or other instances of video streaming), loading times of interactive applications, sound and picture quality may be compromised.

To turn off FreeviewPlus, go to Menu > System and set the HbbTV setting to **OFF**.

# Recording

## IMPORTANT!

Before you can record with this TV set (including time-shift recording), you must insert a FAT32 formatted USB storage device into the USB (TV) port.

USB storage devices do not come with the TV.

- First, insert your USB memory device into the USB port.

*When Watching a Program in DTV Mode:*

- Press the **RECORD** button on the remote control to start recording directly. Press the **RECORD** button again to minimise the information bar at the bottom of the screen.
- Press the **RECORD** button again or the **STOP** button to display information about the current recording.
- Press the **STOP** button twice to display a dialogue box: 'Do you want to stop PVR?'
- Press **▶** for '**NO**' and cancel the warning. Press **◀** for 'Yes' and stop recording.
- If you wish to turn off the TV and continue recording, press the **POWER** button on the remote, select 'Turn off panel & continue recording' and press **OK**.
- Select 'Power off' to stop recording and turn off TV.
- Press the **EXIT** button to cancel the dialog box and continue recording.



## Scheduled Recording (in DTV mode only)

See the instructions under EPG on the previous page.

# Recording (Cont.)

## Time-Shift Recording and Playback (in DTV mode only)

### IMPORTANT!

Before you can record with this TV set (including time-shift recording), you must have inserted a FAT32 formatted USB storage device into the USB (TV) port.


USB storage devices do not come with the TV.

The time-shift function allows you to pause the live TV signal, then resume playback at your convenience.

- First, insert your USB memory device into the USB port.

*When Watching a Program in DTV Mode:*

- Press the **▶||** button on the remote control to initiate time-shift mode and pause the program; the tool bar pictured below will appear on the screen and will disappear after a few seconds.
- Press the **▶||** or stop button again to bring back the tool bar.
- Press the **▶||** button again to resume playback.
- Use the **◀ / ▶** buttons, then press **OK** to select a function such as Fast Forward from the on-screen tool bar.
- To stop time-shift, press the **■ STOP** button on the remote control.

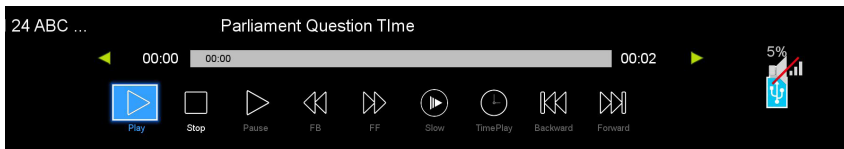

**NOTE:** The USB storage device will not retain recorded data after exiting the time-shift function.

# Recording (Cont.)

## Important Notes


When using the USB/Media function, remember the following important points:

- We strongly recommend you back up all data in the USB storage device to another storage device so you do not risk losing any data in case of an unexpected device failure or accident. We do not assume liability for any loss of data due to misuse or malfunction. Data backup is your personal responsibility.
- You cannot change to another channel or select another function while in recording mode.
- If the signal is interrupted or removed while in recording mode, the recording will stop until the signal is established. This may cause you to lose program content.
- The file recorded can only be used in this TV. Do not copy it to any other device.
- When you are in time-shift recording mode, you may experience some difficulty with a scheduled recording at different times without removing the USB recording device. You will need to remove the USB device as it is required to reset after each recording to protect the device from damage. If you see the message 'DISK NOT READY' displayed, remove the device, reconnect it, and proceed with your recording.
- Some USB storage devices may not be compatible for smooth operation with this TV.
- For large file sizes and large capacity storage devices, the loading speed may be longer. The recognition speed of a USB storage device may vary depending on the device.
- When connecting or disconnecting the USB storage device, ensure the TV is not in USB mode, otherwise the USB device or the files stored in it may be damaged.
- Only use a USB storage device formatted in a FAT32 file system provided with the Windows operating system. If it is formatted by a different utility program that is not supported by Windows, it may not be recognised.
- Ensure any USB devices connected to the TV do not use/exceed 500mA power rating.
- If an "Unsupported File" message is displayed, the file format or codec is unsupported or corrupted.

# Media Mode

## Media Playback

- First insert a USB memory device into the USB port.
- Press the **MEDIA** button to switch the unit to Media mode.
- Use the ▲/▼/◀/▶ buttons to move the cursor.
- Press the **EXIT** button to return to the previous menu page.
- Press the **RED** button to change the device.

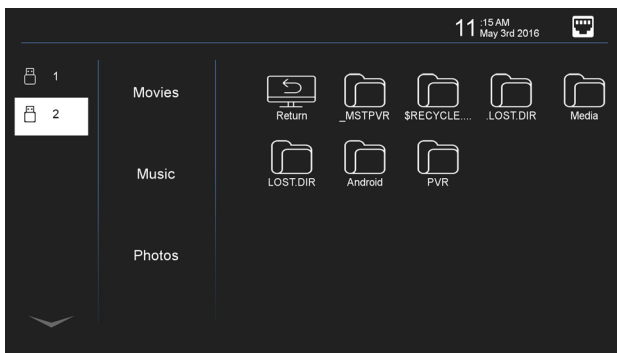


## Photo

- Use the ▲/▼ buttons to select the desired USB drive (when you have multiple USB drives available).
- Use the ▲/▼ buttons to select “Photos” in the main menu, then press **OK** to enter it. Photo files can only be played in this menu category.
- Use the ▲/▼/◀/▶ buttons to select the desired folder or file, then press **OK** to select files and press the **OK** button to play files in full screen.

### When Playing Photo Files:


- Press the **MENU** button on the remote control to hide/display the on-screen tool bar.
- Use the ◀/▶ keys to select a function such as Previous, Next, Rotate and Enlarge from the on-screen tool bar. Press the **OK** button to apply.
- Press the **STOP** or **EXIT** buttons to exit playback and return to the file list.

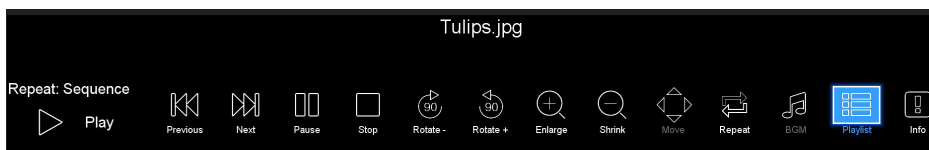

# Media Mode (Cont.)

## Music

- Press the ▲ / ▼ buttons to select Music in the main menu, then press **OK** to enter it. Music files can only be played in this menu category.
- Use the ▲ / ▼ / ◀ / ▶ buttons to navigate to the desired folder or file, then press **OK** to select and press the **OK** button for playback.

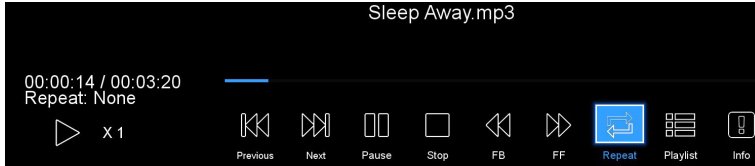

*When Playing Music Files:*

- Use the ◀ / ▶ buttons, then press **OK** to select your desired function. The functions available are: Previous, Next, Rewind, Fast Forward, Pause, Stop, Repeat, Playlist and Info.



# Media Mode (Cont.)

## Movie

- Press the ▲/▼ buttons to select Movie in the menu, then press **OK** to enter. Movie files can only be played in this menu category.
- Use the ▲/▼/◀/▶ buttons to navigate to the folder or file, then press **OK** to select and press the **OK** button for playback.



### *When Playing Movie Files:*

- Press the **MENU** button on the remote control to hide/display the tool bar.
- Press the ◀/▶ buttons to select the preferred function, then press **OK** to confirm.

### *Remote Operations when Playing Multimedia Files:*

- Press the ▶|| button to play or pause playing.
- Press the ■ button to stop playing.
- Press the ◀◀ button to move fast backward.
- Press the ▶▶ button to move fast forward.
- Press the ◀◀ button to play the previous file.
- Press the ▶▶ button to play the next file.


**NOTE:** To play your multimedia files, make sure you have selected the correct icon in the main media playback menu.

# Menus

This TV set contains different settings menus where you can program your preferred settings. Once you have programmed any settings, the unit will retain them in its memory until you change them, even when switching the unit to standby mode. This means you can always operate the system under the same conditions.

## Menu Navigation


- Press the **MENU** button on the back panel, or on the remote control, to display the main menu.
- Press the ◀ / ▶ buttons to select different sub-menus.
- Press **OK** or ▶ to enter the sub-menu page.
- Press the ▲ / ▼ buttons to select the preferred option.
- Press the ◀ / ▶ buttons to adjust the value.
- Press the **MENU** button to return to the previous menu page.
- Press the **EXIT** button to exit the menu page.

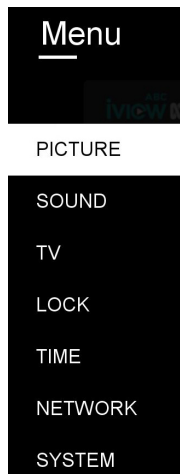

# Menus (Cont.)

## Picture

To access the Picture menu, press the **MENU** button, select **PICTURE** and then press **OK**

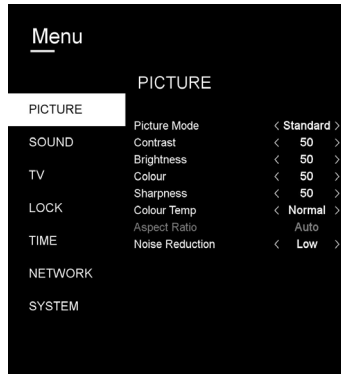


ITEM	SETTING OPTIONS	EXPLANATION
<b>Picture mode</b>	Standard / Mild / Movie / Personal / Dynamic	Select Picture mode. When 'Personal' setting is selected, you can adjust the Contrast, Brightness, Colour and Sharpness settings.
<b>Contrast</b>	0-100	Adjust picture contrast.
<b>Brightness</b>	0-100	Adjust picture brightness.
<b>Colour</b>	0-100	Adjust picture colour saturation.
<b>Sharpness</b>	0-100	Adjust picture sharpness.
<b>Colour Temperature</b>	Normal / Warm / Cold	Adjust picture colour temperature.
<b>Aspect Ratio</b>	Auto / 4:3 / 16:9 / Zoom1 / Zoom2 / Just Scan*	Adjust picture size. *HDMI mode only
<b>Noise Reduction</b>	Low, Middle, High, Off	Adjust picture noise reduction settings.

# Menus (Cont.)

## Sound

To access the Sound menu, Press the **MENU** button, select **SOUND** and then press **OK**.

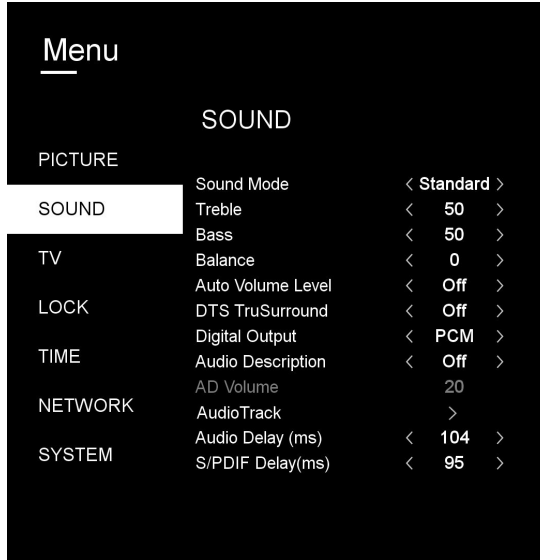

# Menus (Cont.)

SOUND		
ITEM	SETTING OPTIONS	EXPLANATION
<b>Sound Mode</b>	Standard / Music / Movie / Sports / Personal	Select Sound mode. When 'Personal' setting is selected, you can adjust the Treble and Bass settings.
<b>Treble</b>	0-100	Adjust Treble.
<b>Bass</b>	0-100	Adjust Bass.
<b>Balance</b>	-50 - +50	Adjust the audio output between left and right speakers.
<b>Auto Volume Level</b>	Off/On	Auto volume On/Off.
<b>DTS TruSurround</b>	Off / On	Turn DTS TruSurround simulation On/Off.
<b>Digital Output</b>	PCM / Auto / Off	Select the digital audio output type.
<b>Audio Description</b>	Off / On	Audio Description for visual presentation works only with programs that contain related narration information (for people with vision impairments).
<b>AD Volume</b>	0-100	Only when AD switch is set to ON, can it be adjusted.
<b>Audio Delay (ms)</b>	0-200	Adjust the setting to fix any lip sync issues.
<b>S/PDIF Delay (ms)</b>	0-200	Adjust the setting to fix any lip sync issues when the TV is connected to an external amplifier.

# Menus (Cont.)

## TV

To access the TV menu, press the **MENU** button, select TV and then press OK. From this menu you can access the following options: Auto Tuning, Digital Manual Tuning, Channel Edit, Signal Information, Recorded List and Schedule List.



## Auto Tuning


Press the **OK** button to enter. Then select your Country, Time Zone, Tuner Type, and then press **OK** to start scanning.



# Menus (Cont.)

## DTV Manual Tuning

Press the **OK** button to enter. Press the **◀ / ▶** buttons to select the channel. Press **OK** to start scanning.

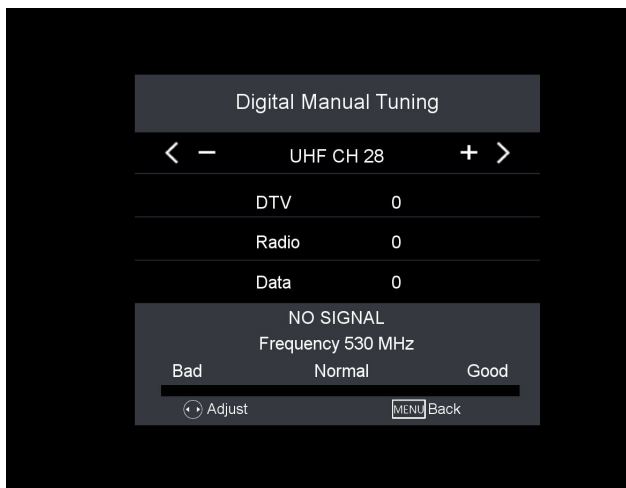

## Channel edit

Press the **OK** button to enter.

- Press the **▲ / ▼** buttons to highlight the desired channel.
- Press the **RED** button to delete a channel from the channel list and EPG.
- Press the **BLUE** button to skip a channel when using **CH +/-** buttons.
- Press the **FAV** button to add a channel to your Favourites List; press the **FAV** button again to remove the channel from the Favourites List.





# Menus (Cont.)

## Signal Information

This item is used to display signal details such as Channel Number, Frequency, Quality and Strength.

## Recorded List

Shows the list of recorded programs (you can also use the **INDEX** key on the remote to access this page).

- Press ▲ / ▼ buttons to highlight the desired program and press **OK** to watch in full screen.
- Press the  **RED** button to delete a recorded program.
- Press the  **GREEN** button to reverse the ordering of recorded programs.
- Press **EXIT** to exit the Recordings List.





# Menus (Cont.)

## Schedule List

Shows the list of programs scheduled to be recorded. (For instructions on how to schedule a recording, please see 'Scheduled Recording' section on page 19.)

- Press the **BLUE** button repeatedly to sort the scheduled list by scheduled time or Channel name.
- Press the **RED** button to delete the scheduled recording.
- Press the **GREEN** button to modify the scheduled recording.
  - Press the up / down to select Minute / Hour / Month / Date / Mode settings and press the left / right buttons to adjust their setting values. Then press OK to confirm the new schedule.

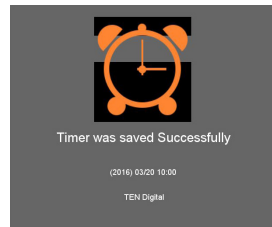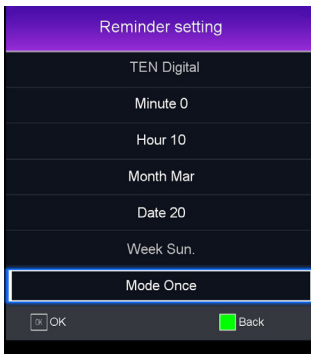


- Or, press the **GREEN** button again to go back to Schedule List.

# Menus (Cont.)

## Lock Menu

- To access the Lock menu, press the MENU button, select Lock and then press OK.
- Input the factory default password “0000” using the number buttons on the remote control.
- NOTE:** If you forget the password, use the master password “4711”.

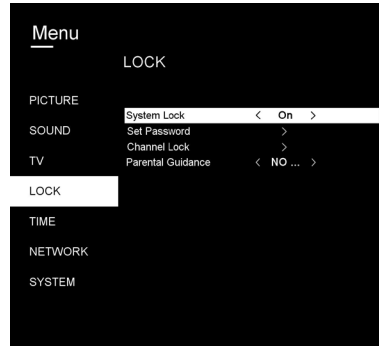


LOCK		
ITEM	SETTING OPTIONS	EXPLANATION
<b>System Lock</b>	Off/On	System lock On/Off Default password is 0000. Master password is 4711.
<b>Set Password</b>		Set personal password.
<b>Channel Lock</b>		Press the green button, the lock icon will appear on the selected channel, and the channel is locked. Press the green button again to unlock.
<b>Parental Guidance</b>	No block Block G and above / Block PG and above / Block M and above / Block MA and above / Block AV and above / Block R and above / Block all	Set parental guidance.

# Menus (Cont.)

## Time

- To access the Time menu, press the MENU button, select Time and then press OK.

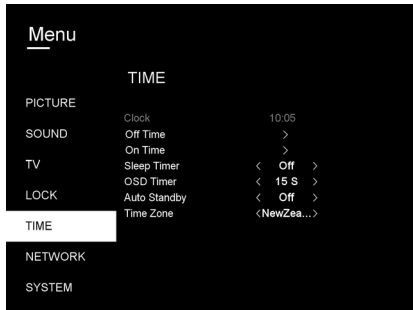

TIME		
ITEM	SETTING OPTIONS	EXPLANATION
<b>Clock</b>		Displays the current time information.
<b>Off Time</b>	Off / Once / Everyday / Mon-Fri / Mon-Sat / Sat-Sun / Sunday	Automatically turn off the TV according to specified days and time.
<b>On Time</b>	Off / Once / Everyday / Mon-Fri / Mon-Sat / Sat-Sun / Sunday	Automatically turn on the TV according to specified days, time, input source, channel and volume.
<b>Sleep Timer</b>	Off / 10 / 20 / 30 / 60 / 90 / 120 / 180 / 240 min	Set the timer in minutes for when you would like the TV to turn off.
<b>OSD Timer</b>	Off / 5 / 15 / 30 / 60 sec	Choose how long you would like the TV menus to be displayed on screen.
<b>Auto Standby</b>	Off / 3h / 4h / 5h	Set the timer in hours to place the TV on Standby.
<b>Time Zone</b>	(NZ) / NSW/ACT / VIC / QLD / TAS / WA / SA / NT	Select your time zone. Default is NZ.

# Menus (Cont.)


## Network Settings

For a stable internet connection, it is recommended that you use a wired connection or place the wireless router close to the TV.


### Wired

#### Wired Connection

For a Wired network connection, make sure to connect the TV to your Internet router using an RJ45 Ethernet cable before starting the setup process.

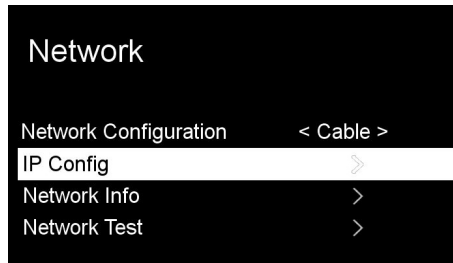

- Press the ◀ / ▶ buttons and select “Wired” network type.
- Then press ▼ to highlight “IP Config”, next press **OK** and the bellow screen will appear.

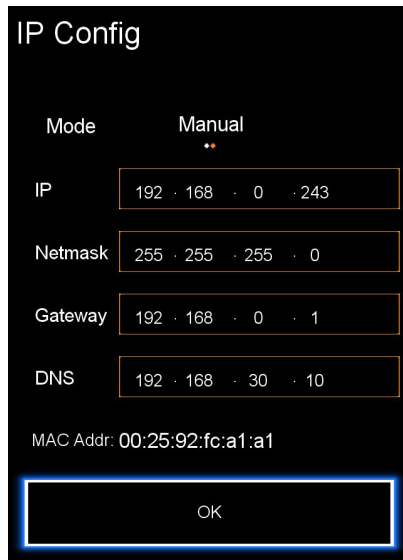

# Menus (Cont.)

Item	Support Mode	Explanation
Internal Protocol Setup	Manual / Auto	Manually set the IP information of the wireless network or automatically acquire IP information of the wireless network.
IP	xxx.xxx.xxx.xxx	Under “Manual” setup enter the IP address using the numerical keypad.
Netmask	xxx.xxx.xxx.xxx	Under “Manual” setup, enter the Netmask address using the numerical Keypad.
Getaway	xxx.xxx.xxx.xxx	Under “Manual” setup enter the Gateway address using the numerical keypad.
DNS	xxx.xxx.xxx.xxx	Under “Manual” Setup enter the DNS address using the numerical keypad.
MAC Address	----	MAC address of the TV.

Press **OK** to save the settings. If the connection is successful, the ‘Connected’ message will appear. Press **MENU** to go back to main Network settings page.


If the connection is unsuccessful, check the accuracy of the information you have entered and your router settings and try again.

- Network Info: View network information
- Network Test: Check the Internet connectivity status

# Menus (Cont.)


## Wi-Fi

For 'Wi-Fi Network Connection', make sure to place your Wi-Fi router close to the TV.

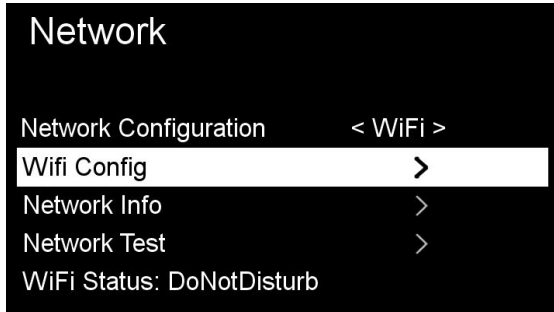


Press the ◀/▶ buttons and select 'Wi-Fi' network type. Then press ▼ to highlight 'Wi-Fi' and press **OK**.

Press the **OK** button on 'Wifi Auto Search' and the TV will automatically begin searching for nearby Wi-Fi Access Points (WAP). This may take up to 2 minutes.

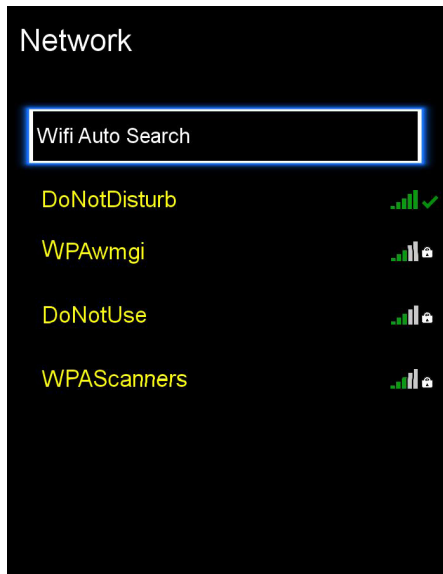

# Menus (Cont.)

- Press the up/down buttons to select your home WAP, and press **OK**.
- If the WAP has a security password, enter the password using the remote control or the on-screen keypad, and then press **OK**.

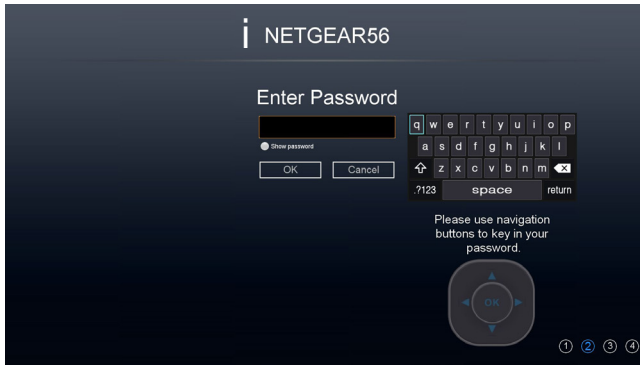


- If the connection is successful, the 'Connected' message will appear. Press the **OK** button to exit.
- If the connection is unsuccessful, the 'Connection Failed' message will appear. Check the security password of your WAP and its security protocol settings and try again.
- Press the **MENU** button to go back to the main Network settings page.
- Network Info: View network information
- Network Test: Check the Internet connectivity status
- Wi-Fi Status Displays the name of the Wireless Access Point

Network Info	
CurService:	WiFi
IP Addr:	192.168.0.146
Mask:	255.255.255.0
Gateway:	192.168.0.1
DNS1:	192.168.30.10
DNS2:	192.168.30.11
MAC Addr:	d8:47:10:6e:43:e3

# Menus (Cont.)

## System

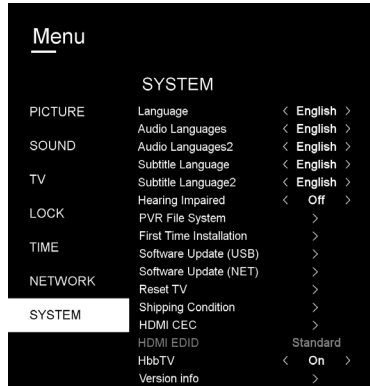

SYSTEM		
ITEM	SETTING OPTIONS	EXPLANATION
Language	English, Spanish, Italian, Dutch, Portuguese	Select the On Screen Display (OSD) language.
Audio languages	Multiple languages	Select the primary audio language (only available in DTV mode and must be supported by viewing program).
Audio Languages 2	Multiple languages	Select the secondary audio language (only available in DTV mode and must be supported by viewing program).
Subtitle Languages	Multiple languages	Select the primary subtitle language (only available in DTV mode and must be supported by viewing program).



# Menus (Cont.)

SYSTEM		
<b>Subtitle Languages 2</b>	Multiple languages	Select the secondary subtitle language (only available in DTV mode and must be supported by viewing program).
<b>Hearing Impaired</b>	On/Off	Turn the Hearing Impaired function On/Off. (Only available in DTV mode and must be supported by viewing program).
<b>PVR File System</b>	Select Disk	If you have multiple USB disks connected, select the disk that you want to use.
	Timeshift Size: 512MB	Sets the size of the time-shift buffer.
	Format	Format the selected USB disk.
	Speed Check	Check the speed of the USB disk.
<b>First Time Installation</b>		Access the First Time Installation wizard.
<b>Software Update (USB)</b>		Update the TV software via USB disk.
<b>Software Update (OTA)</b>		Update the TV software via the Internet.
<b>Reset TV</b>		Reset picture and sound settings to the factory defaults.
<b>Shipping Condition</b>		Reset all settings to the defaults when shipped.

# Menus (Cont.)

<b>SYSTEM</b>		
<b>HDMI CEC</b>	HDMI CEC: On/Off	Turn CEC On/Off. Turn On CEC to activate Auto Standby and ARC settings.
	Auto Standby: On/Off	When turned On, the CEC-enabled external device will go into standby when the TV is placed in standby.
	ARC: On/Off	When turned On, send audio back to the ARC-enabled external audio device.
<b>HDMI UHD</b>	Standard / Enhanced	Set to 'Enhanced' when watching UHD/4K content. Set the setting to 'Standard' when watching HD content. NOTE: These settings can only be adjusted when the TV is receiving UHD/4K signal and the TV is switched to HDMI mode.
<b>HbbTV</b>	On/Off	When turned off, FreeviewPlus features will not be available.
<b>Version Info</b>		Display Software version and phone number for technical support
<b>Usage Mode</b>	Home / Shop	Select usage mode.


# Smart TV

## First Time Setup

Press the Smart TV/TV button on the remote control to switch the unit to Smart TV mode.


When turning to Smart TV mode for the first time, you will be prompted to select the following settings:

### Language

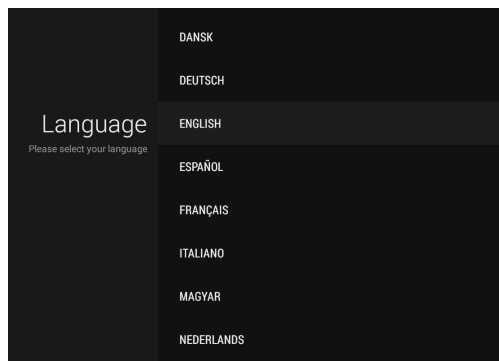


- Use navigation buttons to select your language.
- Press OK button confirm it and enter next page.

### Country

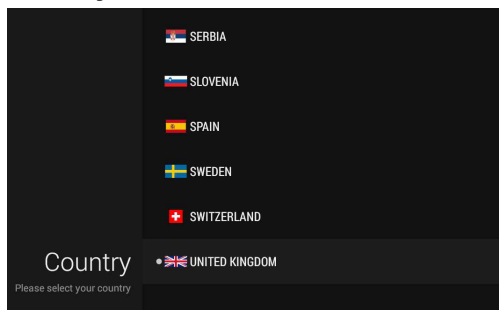

- Use navigation buttons to select your country.
- Press OK button confirm it and enter next page.


### Time Zone

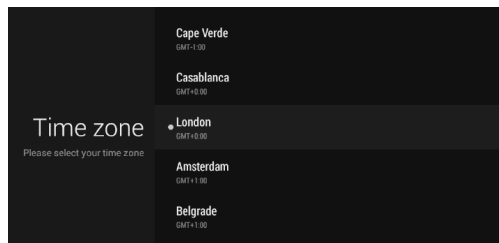

- Use navigation buttons to select local time zone.
- Press OK button confirm it and enter next page.

# Smart TV (Cont.)

## Terms and Conditions

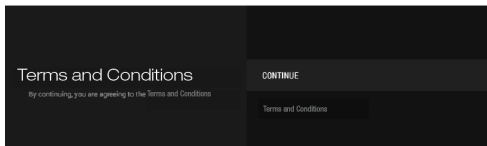

- Use navigation buttons to select an option.
- To skip this step, select “Continue” and press the **OK** button to enter the next page.

## Wi-Fi (only appear when a LAN cable is not connected)



- Use navigation buttons to select an available Wi-Fi account and press OK to open the on-screen keyboard.
- Input correct password (if available) using on-screen keyboard or Remote Control then select “Connect” to connect it.


**NOTE:** This step won't appear if the LAN cable has been connected successfully.

## Setting up a Google account

As a final step, the TV will ask you to add a Google account. You can log into an existing account, or set up a new account in this step. To do this, select either “Existing” or “New” and then press OK. Follow the on-screen directions to add the account.

Agree to the Google Terms of Service, Privacy Policy and Google Play Terms of Service to proceed with the setup.

Once setup has been confirmed, the TV will display the Smart TV home page.

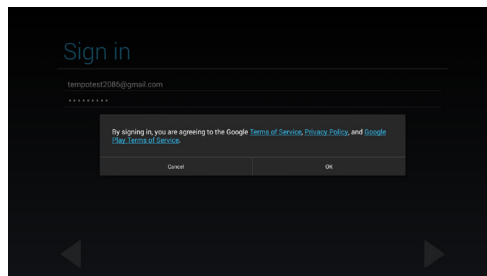

# Smart TV (Cont.)

## Smart TV Operations

- Press the navigation buttons on the remote control to select your desired option, and press the **OK** button to confirm your selection.
- Press the RETURN button on the remote control to return to the previous page.

**NOTE:** For more convenient operation when navigating, you can connect an external mouse and/or keyboard to the USB (Android) slots.

### External Mouse operations:

- Click the LEFT button: Select an option or enter submenu.
- Click the RIGHT button: Back to previous page.


### Before enjoying your internet experience:

- Turn on Wi-Fi (System Settings> Wi-Fi), if a Wi-Fi account is available in your area.
- Or, connect your LAN cable and the TV will connect to the network automatically.

# Smart TV (Cont.)

## 1. Wireless & Network

Select “System Settings” on the home page and press the **OK** button.

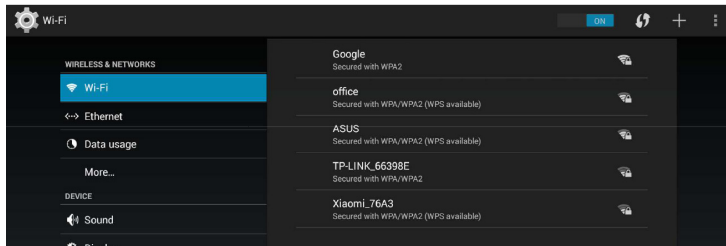


### Wi-Fi:

- Turn on/off Wi-Fi and select an available Wi-Fi account. Then connect a Wi-Fi ID following the on-screen instructions.

### If a password is required:

- Use the navigation buttons to highlight a Wi-Fi account and then press the **OK** button to enter it.
- Move the cursor to “Password” and press the **OK** button to open the on-screen keyboard.
- Use the navigation buttons to type in a password and then select “Connect” to submit it.

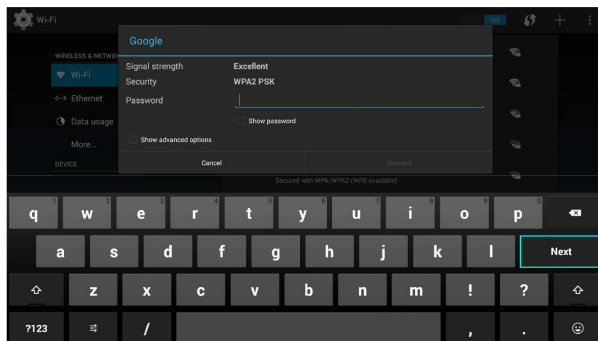

### Ethernet:


- When LAN cable is connected successfully, the Users can set “Proxy & IP settings” and PPPoE settings accordingly.

**NOTE:** Connect your LAN cable to “LAN” port on TV back first before setting Ethernet.

# Smart TV (Cont.)

## 2. Browser

- Use the navigation buttons to highlight (Browser) on the HOME page and press the **OK** button to open it.
- Use the navigation buttons to move the cursor to the URL input field.

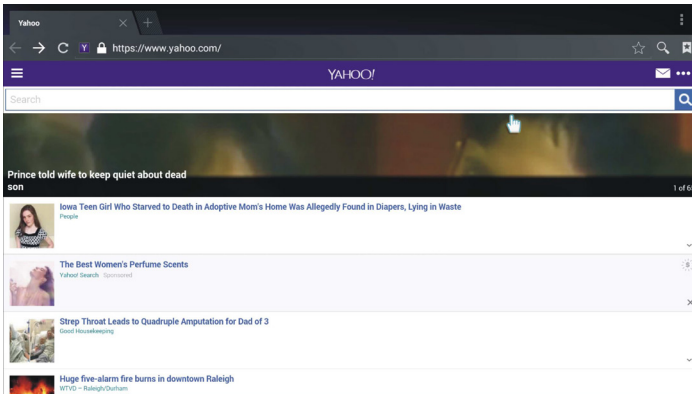

- Press the **OK** button to open the on-screen keyboard.
- To type in the desired URL or search words, use the navigation buttons to select characters from the on-screen keyboard. Press the **OK** button to confirm your entry.
- When your URL entry is complete, select “Go” on the browser screen and press **OK** to load the webpage.

# Smart TV (Cont.)

## 3. Apps

### Downloading and installing apps



- To install apps, click on Google Play Store to browse or search for the desired app.
- Click on **INSTALL** and follow on-screen instructions to install the app.
- Once installed, click on the app icon to start the app.

### Saving an app to Favourites

- Select the app that you would like to add to your favourites.
- While it's selected, press and hold the **OK** button.
- Select "Add to Favourites". The app will appear in your Favourites

### Managing your apps

To manage an installed app, select (Settings>Apps) on the home page and press the **OK** button. From here you can delete the app by following the on-screen instructions.

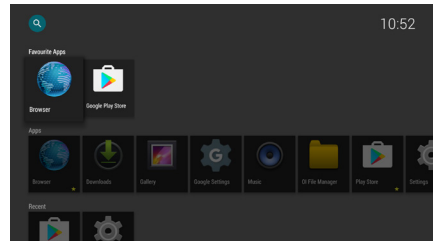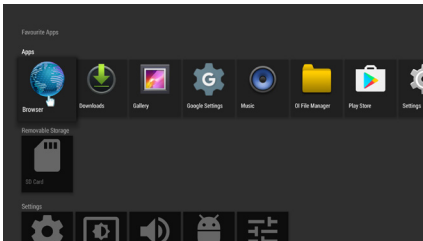

## 4. File Manager

- Insert your USB memory device before following operations.
- Use the navigation buttons to move the cursor to the URL input field.

**NOTE:** Read and accept the Terms and Conditions to open the File Manager.

- Use the navigation buttons to select desired option/folder/file and press the **OK** button to confirm your selection.



# Smart TV (Cont.)

## 5. Settings

Use the navigation buttons to highlight (System Settings) on the home page and press the **OK** button enter it.

### Basic Operations

- Press the ▲/▼ navigation buttons to highlight your desired option.
- Press the **OK** button to enter a submenu.
- Press the ◀/▶ navigation buttons to move the cursor to the left/right column.
- Press the **OK** button to confirm your selection.
- Press the (RETURN) button to return to the previous page.

### Wireless & Network

**Wi-Fi:** Turn on/off Wi-Fi.

**Ethernet:** Configure Ethernet.

**Data usage:** Display data usage.

**More:** Set a portable Wi-Fi hotspot.

### Device

**Sound:** Set default notification sound; turn the press sound on/off.

**Display:** Set the sleep time and font size.

**Storage:** Display all storage information (SD and/or USB storage).

**Apps:** Display “Downloaded, on SD card, Running and All” applications.

### Language & Input

Select your local language and input methods.

### Date & Time

Set the date, time, time zone, time format and date format here.

### Backup & reset

Reset the smart TV to factory default data.

**NOTE:** Back up your personal data before resetting to avoid losing it.

# FAQs (Cont.)

## General Problems with the TV Set (Cont.)

No key operation (by the main unit and/or the remote control) is effective.	Disconnect the power plug and then reconnect it. (The unit may not be operating properly due to lightning, static electricity or some other factors.)
Noise or other interface	Electronic equipment near the unit is causing interface. Relocate the unit or move the equipment.

## Problems Relating to the USB Device

Problem	Solution
My TV does not recognise my USB device or my external hard disk.	Please refer first to the instructions describing how to use USB devices with this unit. If the problem still occurs, your device may not be compatible. This machine has been tested with the majority of Flash memory-based devices and hard disks (Music/Movie players with HDD) on the market; however, it may not be compatible with certain devices, in particular external self-powered hard disks.

# FAQs

If you experience any problems with your TV, check the list below and take any necessary steps before calling for service. If none of the solutions help you solve the problem, turn the power off and contact the After Sales Support line for advice.

## General Problems with the TV Set

Problem	Solution
No power.	Insert the power plug securely into the power outlet and ensure the power outlet is switched on.
No picture.	<ul style="list-style-type: none"><li>• Ensure that the equipment is connected properly. Adjust the antenna or use an external antenna. Relocate the unit to near a window (if inside a building). Move the TV set away from any appliance that causes interference.</li><li>• Auto-tune the unit again.</li><li>• Try another channel.</li></ul>
No sound or distorted sound.	<ul style="list-style-type: none"><li>• Ensure that the equipment is connected properly.</li><li>• Ensure that the input setting for the TV is correct.</li><li>• Ensure the audio settings are properly set.</li><li>• Ensure the volume is not muted. If it is, press the MUTE button to restore the sound.</li><li>• If earphones are connected, unplug them.</li><li>• Adjust the volume to a suitable level by pressing the VOL+/VOL- button.</li></ul>
No operations can be performed with the remote control unit.	<ul style="list-style-type: none"><li>• Check the batteries are correctly installed.</li><li>• The batteries may be exhausted: replace them.</li><li>• Make sure to point the remote control at the remote control sensor and try it again.</li><li>• Make sure to use the remote control at a distance of no more than 6m from the sensor.</li><li>• Remove any obstacles between the remote control and remote control sensor.</li></ul>

# Specifications

Specification	55" 4K Ultra High Definition LED LCD Smart TV	75" 4K Ultra High Definition LED LCD Smart TV	
Screen Size	55" (140 cm)	75" (189 cm)	
Resolution	3840 x 2160	3840 x 2160	
Contrast Ratio	3000:1	3000:1	
Brightness	220 cd/m <sup>2</sup>	220 cd/m <sup>2</sup>	
Aspect Ratio	16:9		
HDMI version	2.0		
HDCP version	2.2		
USB Multimedia Playback Format	<b>Movie</b>	AVI, MPEG, MPEG-4, TS, MKV	
	<b>Music</b>	MP3, WAV	
	<b>Photo</b>	JPEG/PNG/BMP	
Power Input	AC 100-240V, 50/60 Hz	AC 100-240V, 50/60 Hz	
Power Consumption	<145W	<290W	
Dimensions in mm (W x D x H)	With stand: 1240 x 90 x 716	With stand: 1684 x 293 x 1028	
	Without stand: 1240 x 252 x 775	Without stand: 1684 x 71 x 965	
Weight	<b>Net:</b>	14.65 kg	31.4 kg
	<b>Gross:</b>	19.05 kg	43.1 kg

# Responsible Disposal

## Packaging

The packaging of your TV has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

## Television Set

At the end of its working life, do not throw this TV set out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled and used again. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous on the environment and human health.

## Warranty Card

This product is guaranteed against faulty materials and workmanship for a period of three years from the date of purchase with proof of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts or refund when product is returned freight prepaid to the retailer with proof of purchase. This warranty becomes void if the product has been tampered with, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

### **WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS**

Type of Appliance: \_\_\_\_\_

Model No.: \_\_\_\_\_ Purchase Date: \_\_\_\_\_

Product Purchased From: \_\_\_\_\_

\_\_\_\_\_

Your Name: \_\_\_\_\_

Address: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_ Phone Number: \_\_\_\_\_

### **IMPORTANT!**

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer. If service or a warranty claim is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee maybe charged or warranty declined. For technical help contact the helpline.

**CUSTOMER SERVICE LINE: 0800 883 301**