

# Necessities®

2 BAR RADIANT HEATER

## OPERATING INSTRUCTIONS



For Model: TWRH10000

## WARNINGS AND SAFEGUARDS

1. WARNING you must not cover this appliance. Covering this appliance presents fire risk and will activate the safety fuse; permanently disabling the unit.
2. Use only the voltage specified on the rating label of the appliance.
3. Keep all objects at least 1 metre from the front, sides and rear of the appliance.
4. This appliance is intended for household use only and not for commercial or industrial use.
5. Indoor use only.
6. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
7. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
8. Always unplug appliance when not in use.
9. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Necessities Customer Services Team.
10. If your appliance does not work, or is not working properly, contact the place of purchase or the Necessities Customer Services Team.
11. Do not connect the appliance to mains supply until completely assembled and adjusted.
12. Ensure hands are dry before handling the plug or main unit.
13. Do not locate the appliance directly below any power socket outlet.
14. Ensure appliance is on a flat, stable, heat-resistant surface.
15. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
16. Carry out regular checks of the supply cord to ensure no damage is evident.
17. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
18. Do not remove plug from power socket by pulling cord; always grip plug.
19. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
20. It is recommended that this appliance is plugged directly into the wall socket. The use of power boards is not recommended as many power boards are not designed to supply power to high wattage appliances.
21. A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
22. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
23. Do not remove plug from power socket until the appliance has been switched off.
24. Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
25. Do not place appliance on bedding or on thick & long carpet where the openings may get blocked.
26. Switch off and use handle provided when moving.
27. Do not place appliance close to radiant heat source.
28. Never use the appliance to dry clothes.
29. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
30. Do not sit on the appliance.
31. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
32. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
33. Children should be supervised to ensure that they do not play with the appliance.
34. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
35. There are no user serviceable parts installed in the unit.
36. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
37. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.

**YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF  
THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.**

## OPERATING INSTRUCTIONS

Always choose a safe location for the heater keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use. This appliance requires no installation, it should be used solely as a portable appliance.

**WARNING: The heater must not be used if the glass tubes are damaged.**

**WARNING: Keep all objects at least 1 metre from the front, sides and rear of the appliance.**

**WARNING: In order to avoid overheating or risk of fire, do not cover the heater.**

**WARNING: Never leave this appliance unattended when in use.**

**WARNING: Do not use this appliance with a programmer, remote-control system, separate timer or any other device that switches the appliance on automatically.**

**Note: When the appliance is turned on for the first time, it may release a slight odour or smoke. This odour or smoke is a normal occurrence caused by the initial heating of the internal heating elements and should not occur again.**

### HEAT CONTROL SWITCH

The control switch positions are:

O = Off

I = On



1 switch on = Low Heat

2 switches on = High Heat

Check that the heat control switch is set to Off position before plugging the appliance into the mains supply. For greater economy, use the High Heat setting initially and then switch to the Low Heat setting.

### SAFETY DEVICE

This appliance has one safety device being a tilt switch which will automatically turn the appliance off if the appliance is not in the appropriate operating position.

**CAUTION:** The appliance generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

### CARE AND CLEANING

The appliance requires regular cleaning to ensure trouble free operation:

Unplug the appliance from the mains supply before cleaning.

Ensure that the appliance has been allowed to cool down completely before cleaning.

Use a damp cloth (not wet) to wipe the exterior of the appliance to remove dust and dirt.

Never use solutions such as benzene, thinners or polishing agents.

The reflector body can be cleaned by using a dry duster or soft brush through the grill, taking care not to damage the glass tubes.

Use a vacuum cleaner to remove dust and fluff from around the grills.

Ensure the appliance is dry before plugging back into the mains supply.

Do not attempt to dismantle the appliance. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

### TECHNICAL SPECIFICATIONS

Model: TWRH10000

Supply: 220-240VAC 50Hz

Wattage: 800W

### PROOF OF PURCHASE

**To receive warranty retain receipt as proof of purchase.**

# Necessities®

SUPPORT AND TECHNICAL ADVICE

North Shore City, Auckland, New Zealand

Monday – Friday 8am-5pm

Phone: 0800 232 633

# Necessities®

Your Necessities product has been inspected and tested and is guaranteed subject to the following for a period of one year from the date of purchase against defects in workmanship and materials. During this period, such defects will be rectified by repair or replacement of the product purchased. Your product contains no user serviceable components and this warranty becomes invalid if in our opinion the product has been misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges. The warranty does not include any labour or other associated expense that may be involved in removal or installation of the product. Normal wear and tear is expressly excluded.

If your Necessities product fails to operate satisfactorily, please return it to the retailer from whom it was purchased. To obtain a repair or replacement product under this warranty, you will need to produce satisfactory evidence of date of purchase. The completed warranty and purchase receipt must be presented with the product. The warranty should be filled out at the time of purchase. It is in your interest to make sure this is done.

If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied, this shall be guaranteed for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of a value and with such features as we consider appropriate in the circumstances. Necessities Ltd is not responsible for freight forwarding charges, losses or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a qualified electrical technician. Service outside of the warranty period will be at your cost.

Consumers Guarantee Act (1993).

In accordance with the above act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provisions will continue to apply.

## IMPORTANT: PLEASE RETAIN THIS WARRANTY CARD

NAME:

ADDRESS:

PURCHASED FROM:

SUBURB:

DATE OF PURCHASE:

NAME OF PRODUCT:

MODEL No:

ONE YEAR WARRANTY