

LIVING&CO

PANEL HEATER

OPERATING INSTRUCTIONS



For Models: TWFP10000, TWFP10000-2PK

This page is intentionally left blank

General Care and Safety Guide

Thank you for choosing a Living & Co Panel Heater. This Living & Co appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this booklet, will give you years of useful service. Please read these instructions carefully and keep for future reference.

1. **WARNING** you must not cover this appliance. Covering this appliance presents fire risk and will activate the safety fuse; permanently disabling the unit.
2. Use only the voltage specified on the rating label of the appliance.
3. Keep all objects at least 1 metre from the front and 300mm from the sides of the appliance.
4. This appliance is intended for household use only and not for commercial or industrial use.
5. Indoor use only.
6. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
7. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
8. Always unplug appliance when not in use.
9. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Living & Co Customer Services Team.
10. If your appliance does not work, or is not working properly, contact the place of purchase or the Living & Co Customer Services Team.
11. Do not connect the appliance to mains supply until completely assembled and adjusted.
12. Ensure hands are dry before handling the plug or main unit.
13. Do not locate the appliance directly below any power socket outlet.
14. Ensure appliance is on a flat, stable, heat-resistant surface.
15. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
16. Carry out regular checks of the supply cord to ensure no damage is evident.
17. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
18. Do not remove plug from power socket by pulling cord; always grip plug.
19. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
20. It is recommended that this appliance is plugged directly into the wall socket. The use of power boards is not recommended as many power boards are not designed to supply power to high wattage appliances.
21. A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
22. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
23. Do not remove plug from power socket until the appliance has been switched off.
24. Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
25. Do not place appliance on bedding or on thick & long carpet where the openings may get blocked.
26. Switch off and use handle provided when moving.
27. Do not place appliance close to radiant heat source.
28. Never use the appliance to dry clothes.
29. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
30. Do not sit on the appliance.
31. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
32. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
33. Children should be supervised to ensure that they do not play with the appliance.
34. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
35. There are no user serviceable parts installed in the unit.
36. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
37. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.

**YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF
THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.**

Components

CONTENTS (x 2 for 2-Pack)


- 1 x Living & Co Panel Heater
- 1 x Wall mounting accessories pack:
- 2 x Drill bits (1 x 7mm for plasterboard or wooden walls, 1 x 8mm for drilling masonry)
- 4 x Rail fittings
- 4 x Screw bolts
- 4 x Bolt caps



NOTE: Please ensure you use the correct drill bit for the wall surface material you are mounting on to. Please contact your local hardware retailer or builder for advice.

WALL MOUNTING POSITION INSTRUCTIONS

NOTE: Your Living & Co panel heater should be installed with at least 300mm clearance from the floor and any other surrounding parts including other appliances, side walls, ceilings, shelves and soft furnishings.

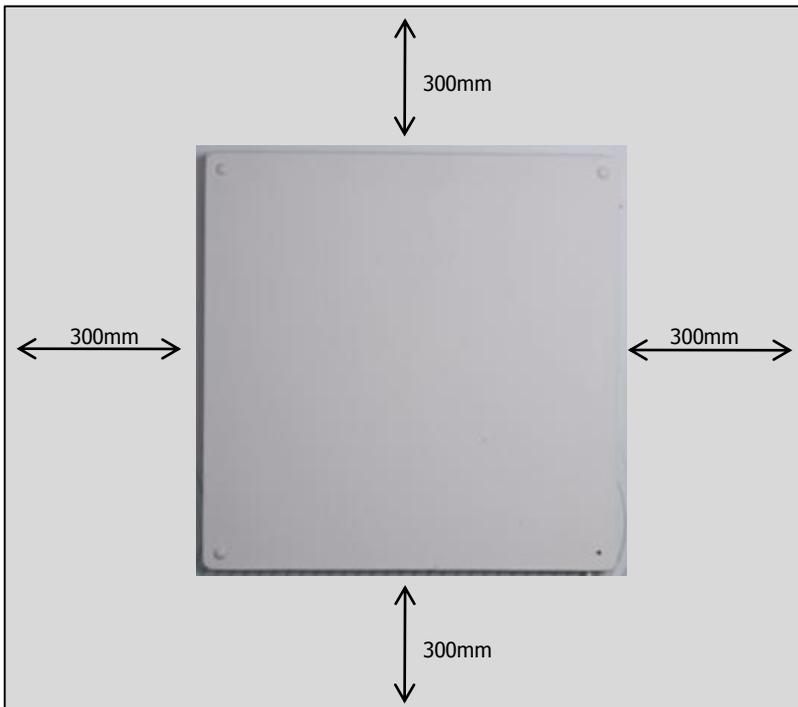







Installation

WALL MOUNTING INSTRUCTIONS

Unpack your panel heater and wall mounting accessories pack.

1. Mark the positions of the four holes to be drilled on the wall. Ensure there is a 300mm clearance on all sides of the heater. With a Spirit Level; check the markings are aligned.
2. Drill holes with an appropriate drill bit for the wall surface you are mounting the heater on to.
3. Insert the plastic rail fittings into the holes.
4. Install the panel heater onto the four rail fittings matching the four holes on the heater.
5. Screw the four screw bolts into the plastic rail fittings.
6. Put the caps onto the end of the screw bolts. It is recommended to use some normal glue to stick the caps onto the bolts steadily.

To remove the unit from the wall, simply remove the bolt caps, unscrew the bolts with a screw driver and take the heater down.

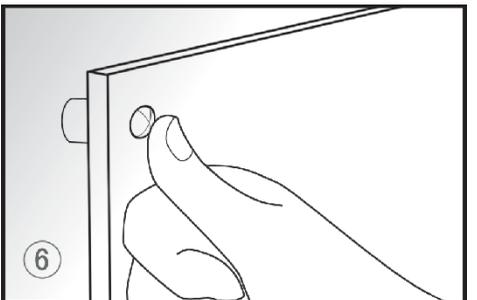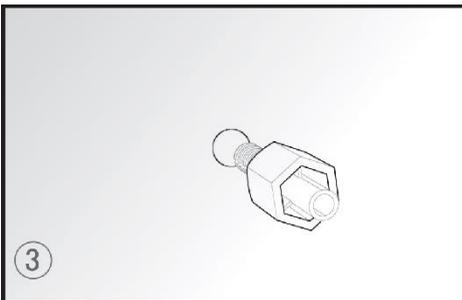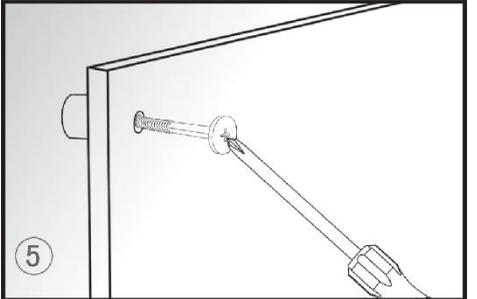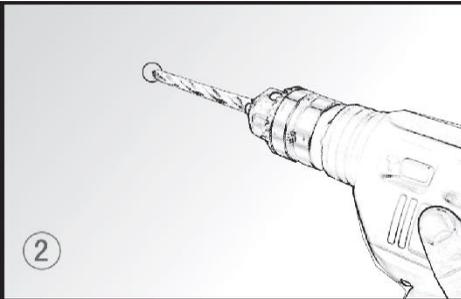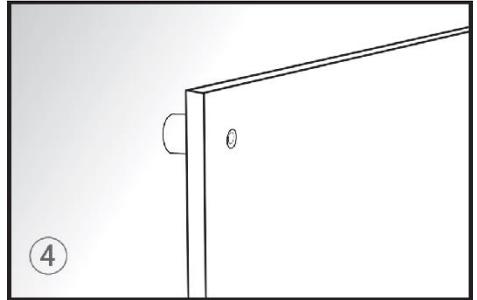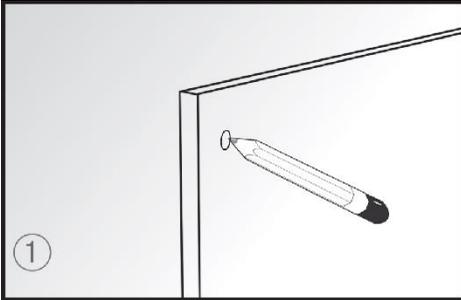

Operating your Appliance

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use.

WARNING: Keep all objects at least 1 metre from the front and 300mm from the sides of the appliance.

WARNING: In order to avoid overheating or risk of fire, do not cover the heater.

WARNING: Never leave this heater unattended when in use.

WARNING: Do not use this appliance with a programmer, remote-control system, separate timer or any other device that switches the appliance on automatically.

- Your Living & Co Panel Heater will provide background warmth.
- Your Panel Heater is designed to take the chill off the room.
- The surface of this Panel Heater can be painted with good quality paint (acrylic or enamel).

Decorating Tip: All wall mounted heaters may cause paint to discolour or wall paper to lift.

OPERATION

1. Before plugging in and using your new Living & Co Panel Heater, check all surfaces to ensure the heater is not damaged in any way.
2. Check that the On/Off switch is set to the Off position before plugging the heater into the mains supply.
3. Use the On/Off switch along the side of the heater to turn your heater on.



SAFETY DEVICES

This appliance has two protection devices:

1. Resettable thermal link - this will automatically disconnect the power to the appliance at a pre-set overheat temperature. After cooling down it will reset and power on again. If this occurs, investigate what is causing the appliance to overheat.
2. Thermal fuse - this disconnects the appliance permanently in case of overheating. (It is non resettable). If this thermal fuse activates it will turn the heater off however the light in the power switch will remain on to let you know there is still power going into the heater. In the event that this happens, turn the heater off at the switch and the wall socket and unplug it. Then contact our Customer Service Team.

CAUTION: The heater generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

WARNING: In order to avoid overheating, do not cover the heater.

Care and Cleaning

CARE AND CLEANING

The appliance requires regular cleaning to ensure trouble free operation:

Unplug the appliance from the mains supply before cleaning.

Ensure that the appliance has been allowed to cool down completely before cleaning.

The outside can be cleaned by wiping it over with a soft dry cloth.

NOTE: Do not use abrasive cleaning agents such as benzene, thinners or polishing agents as this can damage the surface and finish.

Use a vacuum cleaner to remove dust and fluff from behind the heater..

To remove the unit from the wall, simply remove the bolt caps, unscrew the bolts with a screw driver and then take the heater down.

For short term non-use, simply turn off the unit with the power switch on the side of the heater and disconnect the mains power supply at the wall.

Do not attempt to dismantle the heater. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase.

TECHNICAL SPECIFICATION

Model No: TWFP10000, TWFP10000-2PK

Supply: 220-240VAC 50Hz

Wattage: 425W

LIVING&CO

SUPPORT AND TECHNICAL ADVICE
North Shore City, Auckland, New Zealand
Monday – Friday 8am-5pm
Phone: 0800 232 633

LIVING&CO

Your Living & Co product has been inspected and tested and is guaranteed subject to the following for a period of one year from the date of purchase against defects in workmanship and materials. During this period, such defects will be rectified by repair or replacement of the product purchased. Your product contains no user serviceable components and this warranty becomes invalid if in our opinion the product has been misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges. The warranty does not include any labour or other associated expense that may be involved in removal or installation of the product. Normal wear and tear is expressly excluded.

If your Living & Co product fails to operate satisfactorily, please return it to the retailer from whom it was purchased. To obtain a repair or replacement product under this warranty, you will need to produce satisfactory evidence of date of purchase. The completed warranty and purchase receipt must be presented with the product. The warranty should be filled out at the time of purchase. It is in your interest to make sure this is done.

If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied, this shall be guaranteed for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of a value and with such features as we consider appropriate in the circumstances. Living & Co Ltd is not responsible for freight forwarding charges, losses or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a qualified electrical technician. Service outside of the warranty period will be at your cost.

Consumers Guarantee Act (1993).

In accordance with the above act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provisions will continue to apply.

IMPORTANT: PLEASE RETAIN THIS WARRANTY CARD

NAME:

ADDRESS:

PURCHASED FROM:

SUBURB:

DATE OF PURCHASE:

NAME OF PRODUCT:

MODEL No:

ONE YEAR WARRANTY