


Height Adjustable Home Office Desk

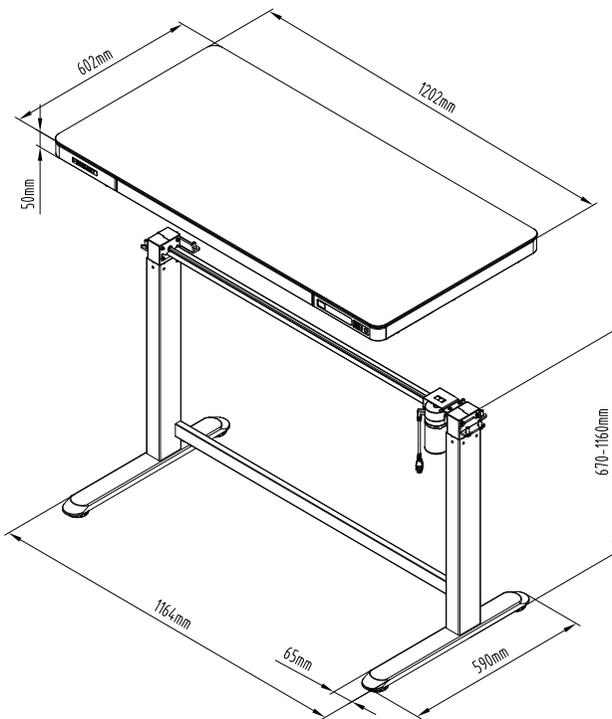

INSTRUCTION MANUAL

The Maximum Weight this product can hold - up to 50 kgs

Important Safety Instructions

- Do not place TVs or other heavy objects on top of this product.
- Never allow children to climb or hang from the top.

Assembly Details

 
60 min

Approximate Assembly Time



2 Person Assembly

*Floor Area
2 x 2 meters*



Required Assembly Space


Tips before you start

 
1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product. Only use power tools as stated in the manual.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.

Care and maintenance

- ✓ Please periodically check all fittings and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- ✓ Please do not place hot items (eg. hot drinks) directly on to the surface.
- ✓ Please do not drag and pull your furniture.


Part Name

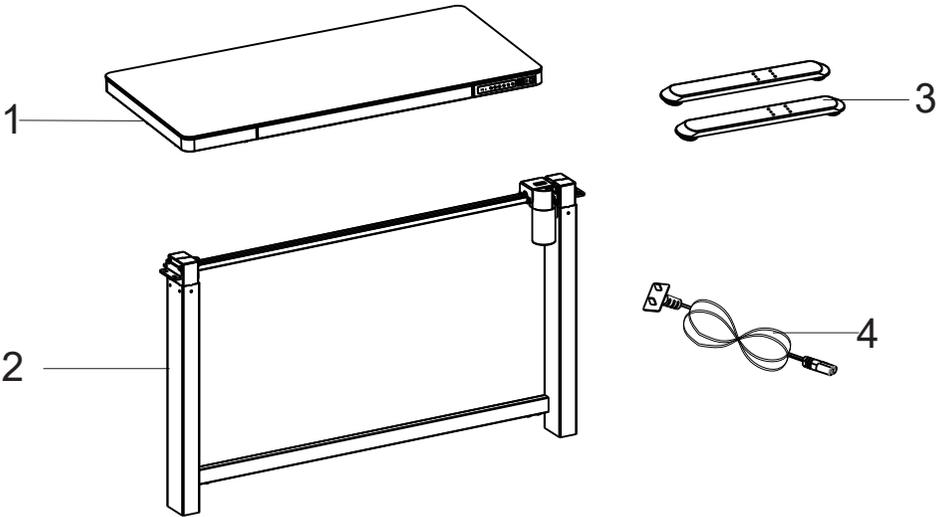

<p>A x 8 pcs</p>  <p>M6</p>	<p>B x 8 pcs</p>  <p>M8</p>	<p>C x 1 pc</p>  <p>5x5</p>	<p>D x 2 pcs</p>  <p>Cable clamp</p>
--	--	--	---

Assembly

Install the tabletop and the lifting columns

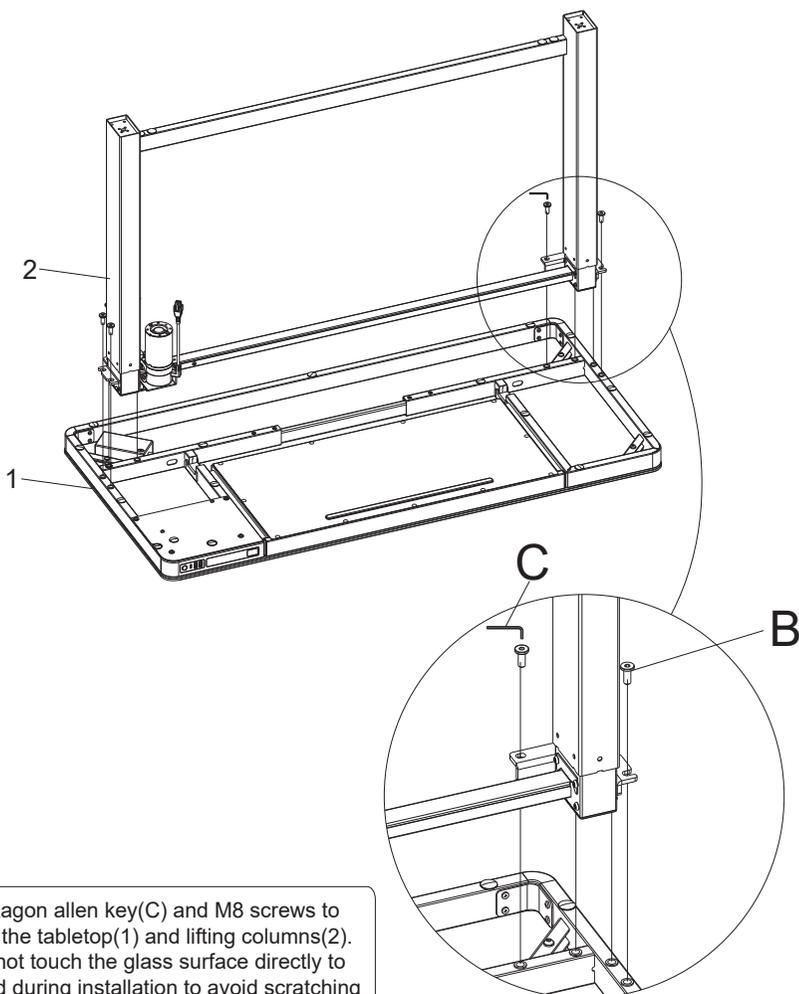


Use a hexagon allen key(C) and M8 screws to assemble the tabletop(1) and lifting columns(2).
Note: Do not touch the glass surface directly to the ground during installation to avoid scratching the tabletop by sharp objects. Please be careful when installing the columns to avoid damaging the glass.

B
8 PCS

C
5x5


Assembly

Install the feet

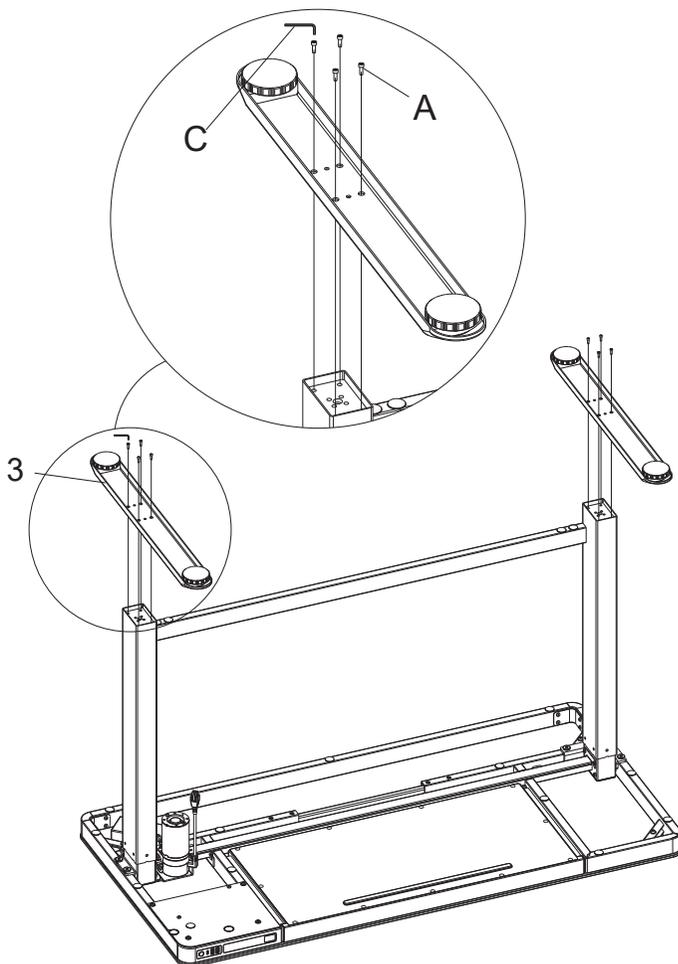


Use a hexagon allen key(C) and M6 screws(Ax8) to install the feet to the lifting columns.

Note: Please be careful during installation to avoid falling and damaging the glass; pay attention to the orientation.

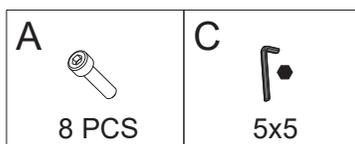

Assembly


Install the motor and power lines

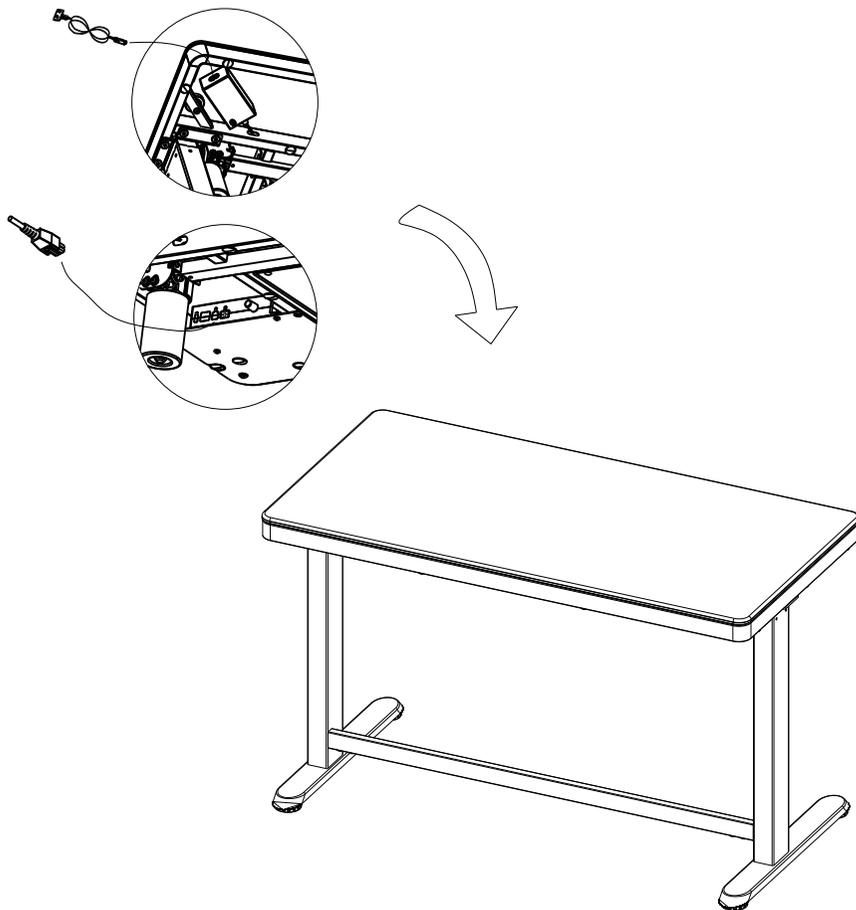

Connect the motor plug to the control box, then connect one side of the adapter plug to the adapter, another side to the power line.
Caution: the motor and power lines can be fixed by cable clamp according to actual use.

Assembly

Key button

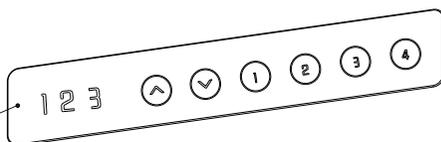

LED Screen

1. Long press the up/down buttons to adjust the height of the desk; The screen will show "bot" when the desktop runs to its lowest point; and it will show "top" when the desktop runs to its highest point.
2. key button: 1,2,3,4 are the four height memory buttons, long press the button about 3s can record the current height;
3. Press the 3 and 4 buttons at the same time, long press 5 seconds, the RST reset indication will appear. Continue to press the "▼" down button until the lifting table lowers to the lowest position and rebounds to rise to a stop. The display shows the lowest height "bot", release "▼" down button, the reset is over and the table can be used normally.
4. The desk has two USB ports and one type-C port, they can supply power to other electronics and support charging protocol. Type-C Output: 5V3A/9V2A/12V1.5A; Type-A Output: 3.6-6.5V2.4A/6.5-9V2A/12V1.5A; Total output power of single port: 18W Max. When the desk is lifting, the output will be stopped; when lifting stops, the output will be restarted.
5. Short press the "LOCK" button to achieve the child lock function, so as to avoid accidentally touch and guarantee the safety of children; The child lock button is switchable, screen will show "Loc" when the desk is locked.
6. Long press the up and down button to switch the sensitivity level. When the screen shows "A-0", it means the anti-collision function is off, "A-1" means the anti-collision sensitivity is in level 1, "A-2" means the anti-collision sensitivity is in level 2, "A-3" means the anti-collision sensitivity is in level 3, level 3 means the highest sensitivity.

● Troubleshooting:

- a. Reset: When the LED shows "RST", press "▼" button until the desk reaches its lowest height and rebounds to stop, it means the reset has been finished.
- b. When it doesn't work and the LED shows "E01" or "E02", please retry 18 mins later.
- c. If the "▼" button doesn't work, please check the cable connection and then cut off the power for at least 10 seconds. Reconnect to the power and press "▼" button to start the reset process when it shows the "RST".
- d. If all these above process are inefficient, plz contact our customer service.



Assembly

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method
No response while long pressing down arrow after connected with a power supply	1. Check if all the cables be connected well
	2. Contact your supplier or dealer
No response while pressing up arrow/ down arrow after connected with a power supply	1. Check if all the cables be connected well
	2. Contact your supplier or dealer
Rising in a low speed	1. Check if overloaded, max loading: 50kg;
	2. Contact your supplier or dealer
The motor not move as instructed	1. Contact your supplier or dealer
Go down but not go up	1. Reposition
	2. Contact your supplier or dealer
Downward sliding	1. Check if overloaded, max loading: 50kg;
	2. Contact your supplier or dealer
Frequently Reposition	1. Check if overloaded, max loading: 50kg;
	2. Contact your supplier or dealer
Overwork (Duty cycle: Max 2min on/18min OFF)	1. Restart after suspend for 18mins while connecting with power;
	2. Contact your supplier or dealer;
Insufficient ascent and descent height	1. Press the "3" + "4" buttons at the same time for more than 3 seconds and hear the buzzer beep twice, reset again
	2. Contact your supplier or distributor

Assembly

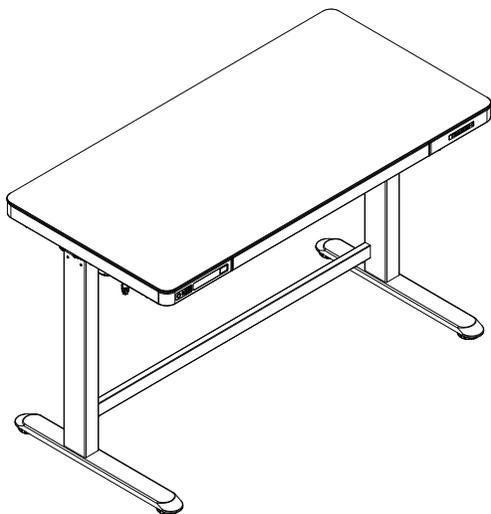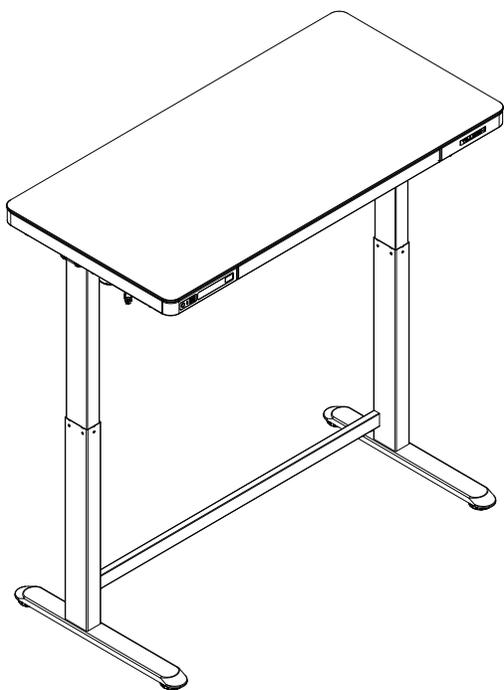



WORK SPACE[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 2-year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 222 246 This Product is covered by 2-year warranty when accompanied by proof of purchase.