

living & co.

IONIC HAIR DRYER



INSTRUCTION MANUAL

CL-5909

AFTER SALES SUPPORT

☎ (NZ) 0800 422 274

CONTENTS

TECHNICAL DATA	2
PRODUCT OVERVIEW	2
SAFETY WARNINGS	3
HOW TO USE	4
CLEANING	4 - 5
DISPOSAL	5
WARRANTY	6

TECHNICAL DATA:

Type: CL-5909

Power: 220-240V ~ 50/60Hz

Capacity: 1800-2200W

Motor: DC

PRODUCT OVERVIEW:



A - Concentrator

B - Cool switch

C - Heater switch

G - Diffuser

D - Speed switch

E – Cord guard with storage loop

F - Removable inlet grille

SAFETY WARNINGS:

- Do not switch on before checking that voltage on the specifications plates is the same as that in your home;
- Switch off when not in use, even if for a moment;
- If the supply cord is damaged, it must be replaced by the manufacturer of its service agent or a similarly qualified person in order to avoid a hazard.
- For additional protection, the installation of a residual current device with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- Never submerge or wet the dryer.
- **WARNING-** When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
-  : Not to be used in bath or shower.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- This appliance is intended to be used in household and indoor.
- Do not use the appliance with wet hands.
- Always ensure that the air inlet and output are not blocked during use.

HOW TO USE

- Make sure that your hands are completely dry before plugging in.
- Plug in and set switch to the required position.
- Once your hair is dry set the switch (D) to the off '0' position and unplug the dryer.

Heater switch:

Position  low temperature

Position  medium temperature gentle drying and shaping

Position  high temperature for rapid drying

Speed switch:

Position **0** off

Position  gentle stream of air

Position  strong stream of air

Cool switch:



With this switch you can stop the heating and allow cool air flow

CLEANING

- **WARNING-** always unplug your appliance before cleaning.
- Your hair dryer requires very little attention. You can clean it together with its accessories, using a slightly damp cloth.
- The air inlet grille can be removed periodically as shown in the following image, use a damp cloth or vacuum to remove any dust deposits.
- Never clean your appliance with solvent based cleaners or abrasive cleaners.
- Never immerse your appliance or its accessories in water.
- Carefully dry all parts you have just cleaned.

CLEANING (CONTINUED)

AIR INLET GRILLE REMOVAL:



NOTE: Always ensure the grille is clean / dry and refitted before operating the appliance.

DISPOSAL



Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

living & co.



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we back them up with a 2 year warranty when accompanied with proof of purchase. Now you too can relax knowing that you are covered. Customer Helpline NZ: 0800422274