

LIVING & CO[®]

7kg CLOTHES DRYER



INSTRUCTION MANUAL

Model Number: CD7-LVC

AFTER SALES SUPPORT

☎ (NZ) 0800 422 274



Contents

- 03 Important Safety Instructions
- 06 Product Overview
- 08 Installation
- 14 Getting Started
- 15 Instructions
- 19 FAQs and Troubleshooting Guide
- 21 Other Useful Information

Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, the safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the packaging carton. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- **Voltage:** Make sure your outlet voltage and circuit frequency correspond to the voltage indicated on the appliance rating label and your outlet socket is properly earthed. If this is not the case, do not use the dryer.
- **Separate circuit:** We strongly recommend you connect the appliance to a separate circuit serving only this appliance. This provides the best performance and prevents overloading the house wiring circuits that could cause a fire hazard from overheating.
- **Electrical hazard:** Do not insert any objects into the appliance.
- **No extension cord:** Do not use this appliance with a power adaptor or extension cord.
CAUTION: If such a device must be used, the cord or outlet device must be positioned so that it is not subject to splashing or ingress of moisture.
- **Protect the power cord.** Do not kink or damage the cord. Position it out of the way so no one steps on or places anything on the cord or against it. Do not run the cord under floor coverings. Arrange it away from traffic areas where it will not become a trip hazard.
- **Damage:** Do not operate the appliance after it malfunctions or has been dropped or damaged. In case of damage, contact our after sales support centre for advice.
- **Damaged cord:** If the power supply cord is damaged, do not attempt to change it yourself. A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard.
- **Disconnect:** Unplug the clothes dryer from the power supply after use, before cleaning, servicing or moving the appliance. To disconnect, turn the appliance off, switch off the power outlet and remove the plug from the power outlet. Grip the plug when disconnecting; do not pull on the cord. After disconnection, wait at least two minutes before turning the appliance back on again.
- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

Usage conditions and restrictions

- **Domestic use only:** This dryer is intended for household use only. It is not suitable for commercial, industrial or trade use. Do not use it for anything other than its intended purpose (drying domestic quantities of washing), and only use it as described in this manual.

Important Safety Instructions (Cont.)

- **Indoor use only:** Do not use the appliance outdoors.
- **Usage restriction:** The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** Supervise children to ensure they do not play with the dryer. Close supervision is necessary when any appliance is used by or near children.
- **Installation requirements:** Do not install the appliance in a tight fitting cabinet. Do not install it near heat sources such as radiators, heaters, air ducts or direct sunlight. If the clothes dryer is not wall-mounted, place it on a flat, firm, dry and stable floor in a well ventilated area. Use the adjustable legs to assist in levelling the dryer if required. Do not place it on any soft material such as foam or plastic. For more important installation advice, please refer to pages 8–13 in this manual.
- **Ventilation:** Do not block any ventilation openings. Ensure that vents are not covered by newspapers, tablecloths, curtains, carpet, etc.
- **Before use:** Make sure to remove transport packaging at the rear of the dryer. **WARNING:** Before loading the dryer, always ensure no pet or young child has climbed into it. Do not overload the clothes dryer; it has a drying capacity of 7kg.
- **Suitability for tumble drying:** Only load suitable items into the clothes dryer. See the box on the opposite page for which items and materials are unsuitable for the clothes dryer and may present a fire risk.
- **Preparation:** Make sure all pockets of clothing to be dried are empty. Hard, sharp objects such as coins, safety pins, bra wires, nails, screws, lighters or matches must be removed as they can cause extensive damage to the dryer.
WARNING: Any damage or malfunction resulting from foreign objects is not covered by your warranty and may lead to expensive repairs.
- **No open flames:** Do not place open flame sources such as candles on the dryer.
- **Hot surface:** The door window may be hot after a long drying cycle. Always ensure children are kept away from the machine. Do not store plastic, paper or clothing that may burn or melt on top of the dryer during operation.
- **Cool down:** The final part of a clothes dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that will not damage them. **WARNING:** Never stop the clothes dryer before the end of the drying cycle unless all items are removed quickly and spread out so the heat is dissipated.
- **Subsequent cycles:** After turning off the power supply to the clothes dryer, wait at least two minutes before turning it back on again.
- **WARNING!** Ensure the **lint filter** is in place when drying and cleaned before/after each use.
- **Service/repair:** Except for the filters that require cleaning, this appliance contains no user-serviceable parts inside. Do not attempt to open, disassemble or repair it yourself; only have it serviced by qualified personnel. Do not tilt or turn the dryer sideways during use or maintenance.

Important Safety Instructions (Cont.)

- **No timer:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- **Misuse:** Improper use or installation may result in the risk of fire, electric shock and/or injury. We accept no liability for any eventual damages caused by improper use or handling, or by any other noncompliance with the instructions in this manual.

CAUTION!

The items listed below are UNSUITABLE for clothes drying. They can cause fire in the dryer or extensive damage. DO NOT place them in the clothes dryer.

- ☒ Items containing foam rubber (also known as latex foam) or similarly textured rubber-like materials — when heated, these materials can spontaneously combust and cause a fire.
- ☒ Items that have been spotted or soaked with cooking oil, or with highly flammable substances — these substances constitute a fire hazard. Highly flammable substances used in domestic environments include acetone, alcohol, petrol, kerosene, some stain removers, dry-cleaning solvents, turpentine, waxes, wax removers and some hair care products. (This also includes items that have previously been cleaned or spotted with dry-cleaning solvents or other flammable or explosive substances.)
- ☒ If it is unavoidable that fabrics that contain vegetable or cooking oil, or that have been contaminated by hair care products, be placed in a tumble dryer, they should first be washed in hot water with extra detergent — this will reduce, but not eliminate, the hazard. The 'cool down' cycle of a clothes dryer should be used to reduce the temperature of the items. They should not be removed from the clothes dryer or piled or stacked while hot.
- ☒ Undergarments that contain metal reinforcements (such as underwire bras), which can come loose during drying and damage the clothes dryer.
- ☒ Plastic articles such as shower caps or waterproof baby bibs.
- ☒ Rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber coated tennis shoes.
- ☒ Fabric softeners or similar products, unless specifically recommended by the product manufacturer for use in a clothes dryer to eliminate the effects of static electricity.

CAUTION!

- Do not use the tumble dryer if industrial chemicals have been used for cleaning.
- Do not dry unwashed items in the tumble dryer.
- Do not allow lint to accumulate around the tumble dryer. Clean the lint trap after every use.
- Adequate ventilation has to be provided to avoid the backflow of gases into the room from appliances burning other fuels, including open fires.



WARNING: Risk of fire

This symbol alerts you to take care as oil-affected items can ignite spontaneously, especially when exposed to heat, such as in a clothes dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

Product Overview

SCOPE OF DELIVERY: CLOTHES DRYER




- 1 Control panel
- 2 Door
- 3 Door locking mechanism
- 4 Front vent flange
- 5 Lint filter
- 6 Drying drum

NOTE: Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

Product Overview (Cont.)

CONTROL PANEL

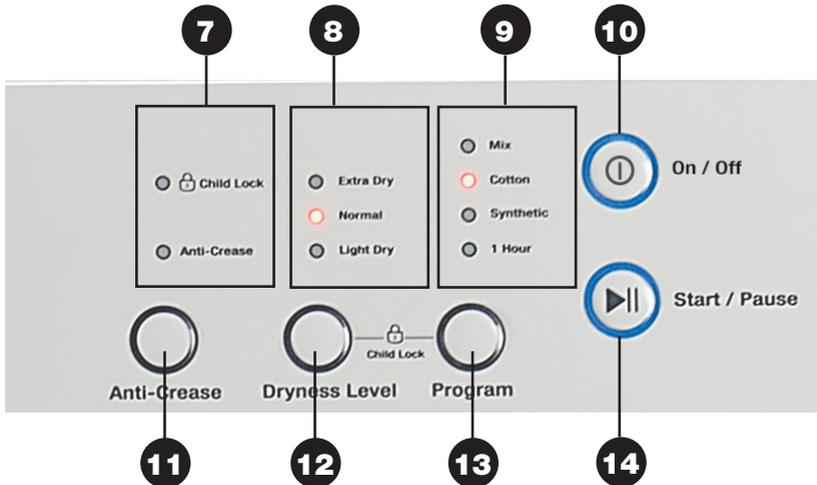

- 7 Child lock and Anti-Crease indicators
- 8 Dryness level indicators
- 9 Program indicators
- 10 On / Off button
- 11 ANTI-CREASE button
- 12 DRYNESS level button
- 13 PROGRAM button
- 14 START/PAUSE button

Wall-mounting kit and venting kit (not shown)

- 2 Hanging brackets
- 4 Expansion bolts
- 2 Spacers
- 1 Positioning paper (template)
- 1 Extra printed control panel sticker (for upside down use)
- 1 Air vent adaptor (packaged separately)
- 1 Air vent pipe (packaged separately)

Documentation (not shown)

- Instruction manual
- Warranty certificate

Installation

UNPACKING

- This product has been packaged to protect it against transportation damage. Remove all packaging materials from around the appliance and from the inside.
- Keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the carton is to be disposed of, please recycle all packaging materials where possible.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Inspect the cord and plug for damage or wear before each use. Do not use the appliance if the appliance or its cord have been damaged or are not working properly. In case of damage, contact our after sales support centre.
- Read all instructions in this manual and make sure you understand all warnings.
- Wipe the inside of the drum with a damp cloth to remove any dust from transport.


IMPORTANT NOTES REGARDING INSTALLATION

- This clothes dryer can be installed freestanding (on floor level), or wall-mounted, or wall-mounted upside down. If you are wall-mounting it, please follow the instructions on the next pages. Wall-mounting it upside down will bring the control panel in easier reach—use the extra control panel label (supplied), so the printing is the right way up.
- Do NOT install the appliance:
 - Behind a lockable door, sliding door or a door with a hinge on the opposite side of the dryer, in such a way that a full opening of the tumble dryer door is restricted.
 - In a tight fitting cabinet.
 - In an area where it will be exposed to temperatures below freezing, or exposed to water or weather, which could cause permanent damage and invalidate the warranty.
 - In an area where gas or flammable substances are used.
- The plug must be accessible after installation.
- Ensure that all electrical connections are made by qualified personnel and all instructions in this manual as well as local safety regulations are observed.
- Place the dryer in a dry, well ventilated area, away from heat and direct sunlight.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- **CAUTION: HEAVY!** Ensure you have at least one helper to move and install the dryer.

Installation (Cont.)

FREESTANDING, FLOOR LEVEL INSTALLATION

- If you want to use the dryer on the floor level, place the appliance in a ventilated area.
- Make sure the floor surface is firm, flat, dry and stable, and there is an appropriate electrical outlet on a nearby wall. Do not place the appliance on soft material such as foam, plastic or carpet, as this will block the air intake.
- At least 10cm of clear space is required between the dryer and any wall(s) (Fig. 1).
- For ventilation purposes, we recommend that there are no obstacles within 1.5m in front of the dryer.
- The appliance must be installed level, otherwise its operation will be impaired. Use a spirit level to ensure it is level. If your floor is slightly uneven, adjust the height using the adjustable levelling feet at the bottom of the appliance.
- Do not place the back of the dryer near curtains or similar that can get caught up in the exhaust air.

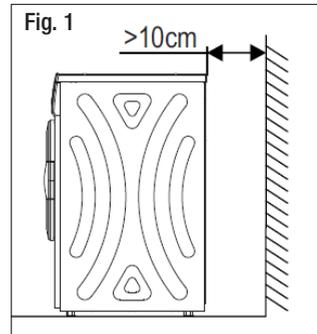

WALL-MOUNTED INSTALLATION

IMPORTANT!

- Only mount this dryer on a structurally sound wall area that is strong enough to hold the weight of the appliance. If in doubt, consult a builder.
- The supplied installation hardware (and the following instructions) are for wall-mounting the dryer onto a solid (masonry) wall. Please obtain expert advice (from a builder or similarly qualified person) if you intend to mount the appliance onto any other type of wall.
- Allow at least 5cm space between the top of the dryer and the ceiling for ease of installation.
- Allow sufficient room to open the lid of a top load washer, if wall-mounting the dryer above a washing machine.
NOTE: This dryer is NOT suitable for placement directly on top of a washing machine.
- Ensure the dryer is unplugged from the power supply before installation.

Installation (Cont.)

STEP-BY-STEP WALL-MOUNTING INSTRUCTIONS

Step 1: Parts required

- Confirm that you have all the components from the wall-mounting kit (Fig. 2), plus one extra printed control panel sticker (for use if wall-mounting upside down).



- Confirm that you have the following extra tools required:
 - Drill (with a $\varnothing 14\text{mm}$ drill bit)
 - Phillips head screwdriver
 - Another person to help you lift the dryer onto the wall.

Step 2: Preparation

- This dryer must only be installed on a solid wall. The distance in front of the wall must be more than 1.5m.
- If you intend to wall-mount the dryer upside down, take the additional printed control panel (supplied) and affix it over the existing panel so that the printing is the right way up when installed upside down.

Step 3: Wall preparation

- Determine the dryer position on the wall and, using a spirit level, draw a level line the length of the positioning paper (Fig. 3-A).

NOTE: Ensure the screw holes are in an appropriate position: they must not overlap with any power outlets, cabling or taps.


The bottom edge of the positioning paper must be at least 45cm+ above floor level.

- Remove the adhesive paper from the back of the position paper and paste the paper horizontally to the wall (Fig. 3-B).



Installation (Cont.)

- Using a drill with a $\varnothing 14\text{mm}$ drill bit, drill four holes for the expansion bolts according to the drawing on the positioning paper (Fig. 4). The hole depth must be 60mm.

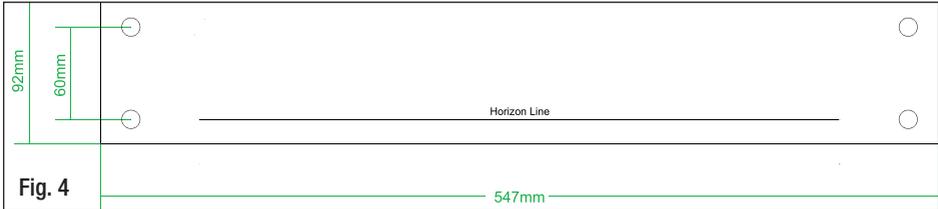


NOTE: If you are installing the appliance on a tiled wall, use a special $\varnothing 14\text{mm}$ drill bit for use on tiles (Fig. 5).




Step 4: Bracket installation

- Attach the brackets to the wall using the four expansion bolts. The expansion bolts consist of a bolt, an expansion tube, a nut and washers.
 - Insert a bolt and expansion tube into each of the four drilled holes and then thread a nut onto the end of the bolts. To prevent the thread being damaged, do not expose the end-thread of the bolt. Then hammer the four bolts into the holes (Fig. 6).

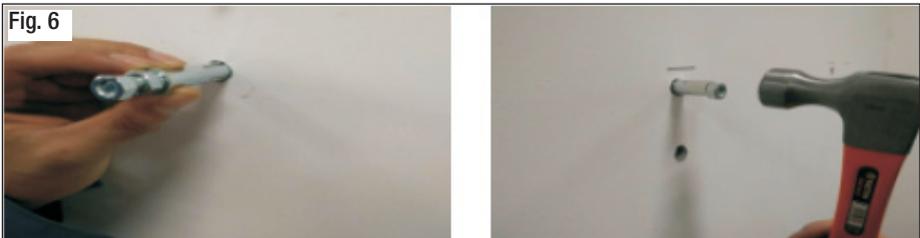

Installation (Cont.)

- b. After you have hammered the bolts into the wall, remove the nut and washers. Attach the hanging brackets to the bolts, then put the washers back on: first the flat washer, then the spring washer, then the nut.
- c. Tighten the brackets with a socket or a wrench (Fig. 7).

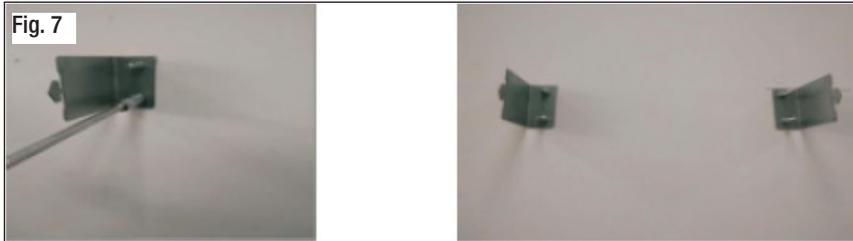

Step 5: Attaching the spacers



- Place the unpacked dryer on the floor and unscrew the two screws at the back of the dryer using a Phillips head screwdriver (Fig. 8).

NOTE: Remove the top screws if installing the dryer upside down, or the bottom screws if wall-mounting it as is (Fig. 8).

- Insert the screws through the holes in the spacers and then fasten them into the original screw holes.

Step 6: Hanging the dryer on the wall

- With assistance, mount the clothes dryer onto the wall brackets. To do so, lift the dryer and align the slots at the back of the machine with the wall brackets. Then carefully hang the dryer onto the brackets (Fig. 9).

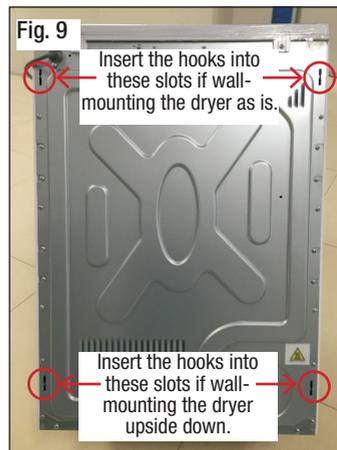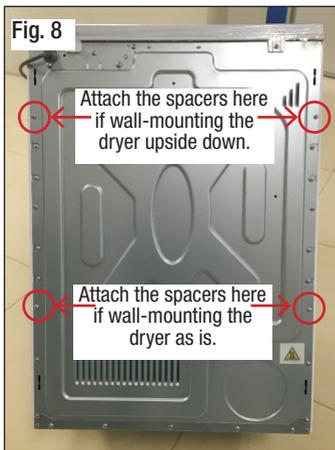

Installation (Cont.)

- Make sure the hooks of the brackets are firmly inserted into the slots (Fig. 10).



EXHAUST AIR VENT INSTALLATION

- Using a Phillips head screwdriver, remove the front vent flange from the front of the clothes dryer (Fig. 11).
- Attach the air vent adaptor with the screws you just removed (Fig. 12).
- Attach the air vent pipe to the air vent adaptor by twisting it into the thread of the adaptor (Fig. 13).
- Lead the end of the air vent pipe to the outside.



ELECTRICAL CONNECTION

- Once the clothes dryer is properly installed, plug the electrical cord into an appropriately earthed three pin wall socket, switch on power at the socket and try the machine (see page 18 for usage instructions).

Getting Started


QUICK START GUIDE

The pictorial quick start guide below only contains basic information. For detailed operating instructions, please read the corresponding content on the following pages of the manual.


CAUTION!

Please ensure the dryer is properly and securely installed before using it.


Preparation

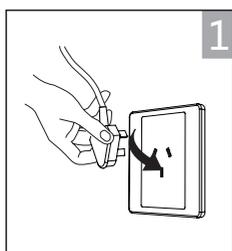

Plug in

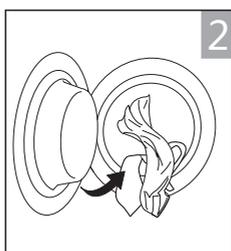

Load

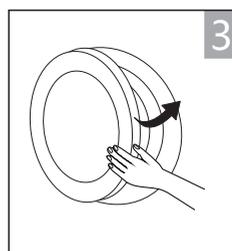

Close door

Drying



On / Off




Select function
or default




Start/pause


After drying

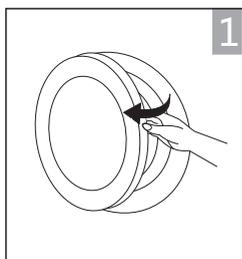

Unload

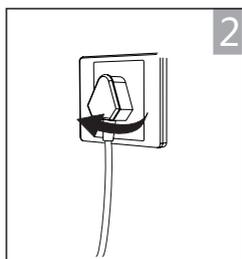

Unplug and switch off power

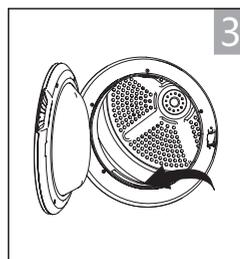


Clean filter

Instructions

BEFORE EACH DRYING

- Make sure you have read all safety precautions in this manual and are aware of the items (listed on page 5) that cause a hazard if placed in the clothes dryer.
- The clothes dryer is intended only for drying textile material that has been washed in water and well spin-dried. Thoroughly spin the laundry in your washing machine on a high spin speed, which can reduce the drying time and save energy consumption.
- Make sure the lint filter is clean and properly in place.
- Check and ensure that none of the items to be dried have the following symbols anywhere on them, which indicate that items are UNSUITABLE for clothes drying:

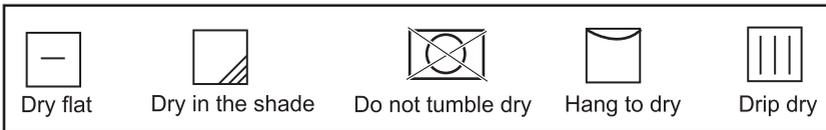


- As the dryer heat may permanently set stains, check and ensure your washing is clean and free of stains.
- For uniform drying results, sort the laundry according to fabric type and drying program. Separate dark and light coloured items as you would do when washing.
- Ensure that the items to be dried do not have combustible materials or foreign objects (such as lighters, hair pins, coins) inside pockets.
- Turn items with zippers inside out, close zippers, hooks and eyelets, fasten buckles and tie fabric belts. This will also help reduce impact noise when the items hit against the turning drum.
- Place small, delicate items in a mesh bag, but do not add too many to one bag. (It is not recommended to dry underwire bras in a clothes dryer.)
- To avoid items getting tangled up in the dryer, which results in uneven drying, we recommend placing items into the dryer one at a time.
- When closing the dryer door prior to starting the unit, ensure that items are not jammed in the door.
- **CAUTION:** Do not overload the dryer: the maximum amount of dry textile material that can be dried in one load is 7kg (see the table below for some reference weights).

 Single bedsheet (about 600g cotton)	 Jeans (about 800g)	 Sleepwear (about 200g)	 Long sleeve shirt (about 300g cotton)
 Short sleeve shirt (about 180g cotton)	 Short pants (about 70g cotton)	 Socks (about 50g mixed weave)	 Jacket (about 800g cotton)

Instructions (Cont.)

CONTROL PANEL

The control panel at the front of the clothes dryer has easy to use press buttons for machine operation and indicator lights for the selected programs, dryness level, child lock and anti-crease function.

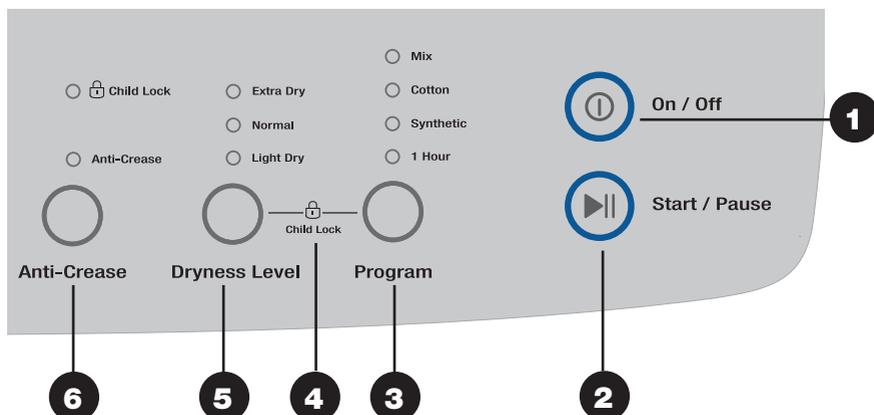

- 1 On / Off button**
Press to turn on.
- 2 START/PAUSE button**
Press to start or pause the drying cycle.
- 3 PROGRAM button**
Press repeatedly to select your desired drying program from the following options: Mix, Cotton, Synthetic, 1 Hour. The selected option will be illuminated above.
- 4 CHILD LOCK**
The child lock function can be set after pressing the START/PAUSE button, when the appliance is running.
 - * Press and hold the PROGRAM and DRYNESS LEVEL buttons simultaneously for more than 3 seconds to lock all buttons (except the On / Off button).
 - * To cancel the child lock, press and hold the PROGRAM and DRYNESS LEVEL buttons simultaneously for more than 3 seconds.
- 5 DRYNESS LEVEL button**
Press, repeatedly, to select your desired dryness level from the following options: Extra Dry, Normal, Light Dry. The selected option will be illuminated above.
- 6 ANTI-CREASE button**
Press to activate the anti-crease function. After the drying program has finished, the dryer will continue rotating the drum (without heat output) for a maximum time of 2 hours, or until the door is opened, to help minimise creasing of your load.

Instructions (Cont.)

DRYING PROGRAMS

The drying programs automatically sense the moisture level of your load and adjust the drying time according to the dryness level selected.

Thoroughly spin the laundry in your washing machine on a high spin speed before drying in the clothes dryer.

Program	Textiles to be dried *	Capacity (kg)	Dryness level options
Cotton #	Cotton	7	Extra Dry
Cotton		7	Normal
Cotton		7	Light Dry
Mix	Blended fabrics	7	Extra Dry
		7	Normal
Synthetic	Synthetics	3.5	Extra Dry
		3.5	Normal
1 Hour	Cotton	1 (or less)	n/a

Notes:

* Always check your clothes labels for recommended drying times and temperatures.

The Cotton program and Extra Dry were used for testing the appliance to the standard.

n/a The dryness level cannot be set in the 1 Hour program.

Cotton: Use this program for your cotton towels, sheets, pillowcases, quilt covers, etc. Choose Extra Dry for full drying, or Normal or Light Dry if you prefer to retain some residual moisture to help with ironing.

Mix: This program is suitable for a mixed load containing items made from cotton and other materials, for example, polyester cotton shirts or easy iron clothing. “Extra Dry” and “Normal” dryness level options are available in these programs.

Synthetic: Use this program for synthetic clothing. “Extra Dry” and “Normal” dryness level options are available in these programs.

1 Hour: This one-hour program is suitable for a smaller load of cotton items. A dryness level cannot be selected for this program.

NOTE: If your load is not dry enough for your purposes at the end of the program, please select a higher dryness level.

Instructions (Cont.)

USING THE DRYER

- **Connect:** Make sure the dryer is properly installed, plugged in and power is supplied to the appliance. Then press the On / Off button on the control panel.
- **Load:** Open the door and load the dryer following the guidelines on page 15.
 - The total weight of the load to be dried should not exceed the appliance's rated drying capacity of 7kg.
 - Textiles made of wool or silk are NOT suitable for drying in the clothes dryer.
 - Items must be properly spin dried on high speed before drying in a clothes dryer. Then close the door and ensure that no items are caught in the door.
- **Program selection:** Select your desired program, dryness level and anti-crease function, if desired, then press the START/PAUSE button to start the program. Do not dry items for longer than required. Over-dried clothes can easily crease.
- **Door opening:** While you can open the door during operation to add an item you forgot, we recommend you do NOT open the door until the program has finished to avoid getting scalded, as parts of the machine will be hot during operation. If the door is opened during operation, the dryer will automatically stop. To restart it, you must close the door securely and press START/PAUSE.
- **Cool down:** To help prevent creasing and cool the items just dried, the motor will generate cool air for the last 3 minutes of the drying programs (10 minutes in the 1 Hour program).
- **At the end of the program:** A buzzer will alert you that the program has finished. Press the On / Off button and unplug the dryer from the power supply.
- **Unload:** One or two minutes after the program has finished and the dryer has stopped operation, take out the dry clothes.
- **After use:** Clean the filter after every use. Cleaning instructions follow on page 21.

CAUTION!

- **CAUTION: HOT SURFACE!** To avoid scalding and creating a fire risk, do not stop the clothes dryer before the end of the drying cycle, as parts of the appliance do get hot during use.
- If you must remove items during the drying cycle, open the door, remove them quickly, and spread them out so that the heat is dissipated.
- Do not use any combustible substances (for example, spray cans) close to the dryer while it is in operation. If gas has escaped from the can, do not touch the plug or start/pause the appliance.

FAQs & Troubleshooting Guide

TROUBLESHOOTING GUIDE

If your clothes dryer has a fault, is not working properly, or you think it should work better, use the list below to identify and solve any problems. If you cannot solve the problem, please contact our after sales support centre. Do not attempt to dismantle or repair the dryer yourself.

Problem	Possible cause	Solution
The dryer does not start.	Is there a power failure? Is the power plug inserted firmly? Is the door closed? Is the power switched on at the wall socket? Is your drying load too large?	Check and try again when the power is back. Insert the power plug firmly. Close the door securely. Switch on power at the wall socket. The dryer has a load capacity of 7kg (dry clothes) and the items must be well spin dried.
The dryer is hot or "smells hot".	Is the lint filter dirty? Is the front vent flange dirty? Is the ventilation grille dirty?	Check and clean the filter. Check and clean the front vent. Check and clean the ventilation grille at the back of the dryer.
Clothes shrink.	Are the clothes are unsuitable for drying in the clothes dryer? Have the clothes been dried at too high heat?	Check the clothes label and hang dry if recommended. If the clothes are suitable for tumble drying, choose a different program and Light Dry.
The washing is not thoroughly dried.	Is the filter clogged? Is there too much washing in the dryer? Have items been added while the dryer is in operation? Has the washing been twisted while drying? Is the dryer operating in a small and poorly ventilated area?	Check and clean the filter. Reduce the amount of washing in the dryer. Dry damp items again for a little longer. Untwist the items and dry them for a little longer. The dryer should be installed in a well-ventilated area.
There are some strange noises.	Heavy, wet clothes, and the steam generated when drying, can cause bumping noises when the drum is turning.	These noises are normal. Make sure your drying load is properly spin dried to limit the noises.

FAQs & Troubleshooting Guide (Cont.)

SAFETY RESET

The dryer has a safety cut-out switch, which shuts down the power supply to the unit if the temperature inside the unit is too high. Should this happen, proceed as follows:

- Unplug the dryer and let it cool down for 10 minutes.
- Reset the safety cut-out switch. It is located at the back panel of the unit (Fig. 14-A).
- Check and ensure that the filter is clean and that nothing is obstructing the air intake and outlet grilles (see “Prevent overheating”, below).
- Plug in the dryer and restart it.

If the dryer still does not work properly, or the problem occurs repeatedly, please contact our after sales support centre, or a qualified service technician.

Prevent overheating

- The most common reason for the dryer to overheat is a blocked lint filter (Fig. 15-A). Check the filter and ensure nothing is blocking it – for example, a lightweight item such as a handkerchief might have been sucked over the filter. Clean the filter after each drying load. Cleaning instructions follow on the next page.
- Also ensure that the front vent flange (Fig. 15-B) and the ventilation grille at the back of the unit (Fig. 14-B) are clean and free of obstructions. Use a cloth, soft brush or the brush attachment of a vacuum cleaner to clean the grilles.
- Other reasons for the dryer to overheat include poor ventilation in the laundry – make sure you have a window or door open when you are using the clothes dryer.



Other Useful Information

CLEANING AND MAINTENANCE

WARNING!


- Before cleaning or maintenance, unplug the dryer from the wall socket.
- The lint filter must be in place when drying. It must be cleaned before or after each use.

Keeping your clothes dryer in good, clean condition will prolong its service life.

Cleaning the lint filter

- Before cleaning the dryer or any of its parts, make sure it has cooled down and is safe to touch.
- To remove the filter, open the door to the clothes dryer, grip the filter and pull it straight up and out of the drum (Fig. 16).
- To clean the filter, wipe it with a soft, damp cloth, or wash it gently under running water.
- Let the filter dry completely before reinstalling it back into its space. Press down gently to secure it into place.

Fig. 16

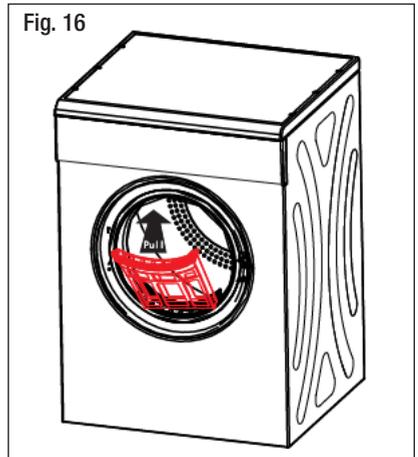

Cleaning the cabinet and drum

- Use a soft, dry or damp cloth to wipe the dryer cabinet and/or the drum, if necessary.
- If using a damp cloth, make sure it is not too wet. Leave the appliance door open after cleaning to ensure the drum can air dry completely.
- Do not use any type of spray cleaner when cleaning the interior. If the dryer drum becomes stained, clean the drum with a damp cloth. If cleaning the drum has left any residues on the drum, make sure to remove it before drying the next load.
- Use a dry cloth or soft brush, or the soft brush attachment of a vacuum cleaner, to clean the areas around the air intake and exhaust opening. It is important that they are kept clean and free from lint, dust and dirt. Any obstructions around the exhaust opening might reduce the airflow, and/or lead to overheating of the appliance.

WARNING!

- Never wash the exterior or interior of the appliance directly with water.
- Do not use solvents, thinner, alcohol based or harsh or abrasive cleaners on any of the dryer surfaces.

Other Useful Information (Cont.)

STORAGE

If you are not going to use the appliance for an extended period of time, unplug it and store it upright in the original packaging to protect it from dust. Store the unit in a dry place, out of children's reach. Do not place any heavy items on top of appliance during storage as this may result in damage of appliance.

SERVICE AND REPAIR

If the appliance is damaged, **do not attempt to repair it yourself**. Contact our after sales support centre to arrange for examination or repair of the product. Before phoning for a service, please ensure that your dryer is properly plugged in and that both the outlet and the circuit breaker or fuse are working properly. If the power cord is damaged and needs replacing, it must be replaced by a service agent or equivalent qualified person in order to prevent a hazard.

TECHNICAL SPECIFICATIONS

Product	LIVING & CO 7kg Clothes Dryer
Model Number	CD7-LVC
Rated capacity	7kg
Voltage & Frequency	220-240V~ 50Hz
Rated Power	2000W
Motor Input Power	200W
Heating Power	1800W
Ingress Protection	IPX4
Ambient temperature	+5°C to +35°C
Dimensions	595 (W) x 555 (D) x 840 (H) mm
Net Weight	approx. 35kg

Other Useful Information (Cont.)

COMPLIANCE

This product has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.11.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

RESPONSIBLE DISPOSAL

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.



Please read the manual

It will help you get the best out of your product.

Still have questions?

Call After Sales Support

1300 886 649

Or visit www.tempo.org

LIVING & CO[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a comprehensive warranty. Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by a 2 year warranty when accompanied by proof of purchase.

IM-V1.1 July 2019

For an electronic copy of this manual, please contact our after sales support centre.

AFTER SALES SUPPORT

 **NZ** 0800 422 274