


LIVING&CO

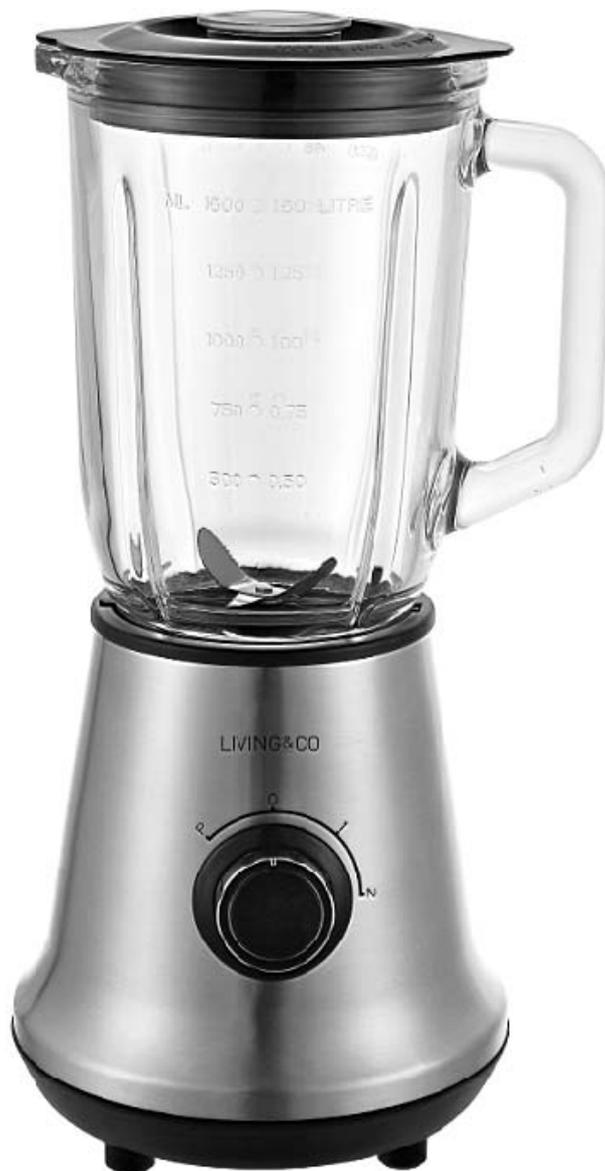

INSTRUCTION MANUAL

MODEL: LBL700S

AFTER SALES SUPPORT

 **(NZ) 0800 422 274**

Read these instructions carefully before using your blender.

If you follow the instructions, your blender will provide you with many years of good service.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

1. Read all instructions before using
2. Before use, check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
3. Do not let the supply cord contact with hot surfaces or hang over the edge of a table or bench top.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. Close supervision is necessary when any appliance is used by or near children.
7. Avoid contacting the moving parts.
8. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender.
9. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
10. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn any control to “off”, then remove plug from wall outlet by grasping the plug, not the cord.
11. To reduce the risk of injury, never place blade assembly on motor unit without the container properly attached.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. Do not leave the machine operating while unattended.
15. When removing the blender from the motor unit, wait until the blades have completely stopped.
16. Always operate blender with cover in place.
17. Always use the appliance on a secure, dry level surface.
18. Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.
19. Do not use outdoors.
20. Do not use appliance for other than its intended use, potential injury exists from misuse.
21. Care should be taken when handling the sharp cutting blades, emptying the bowl and during cleaning. Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to steam.
22. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in normal use.

23. This appliance is not intended for commercial use. It is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.

24. This appliance is not intended for commercial use. It is intended to be used in household and similar applications such as:

25. Never attempt to operate with the jug lid removed.

26. It is recommended to have a residual current device (safety switch) installed in the mains supply socket, by a qualified electrician to provide additional safety protection when using all electrical appliances.

KNOW YOUR BLENDER

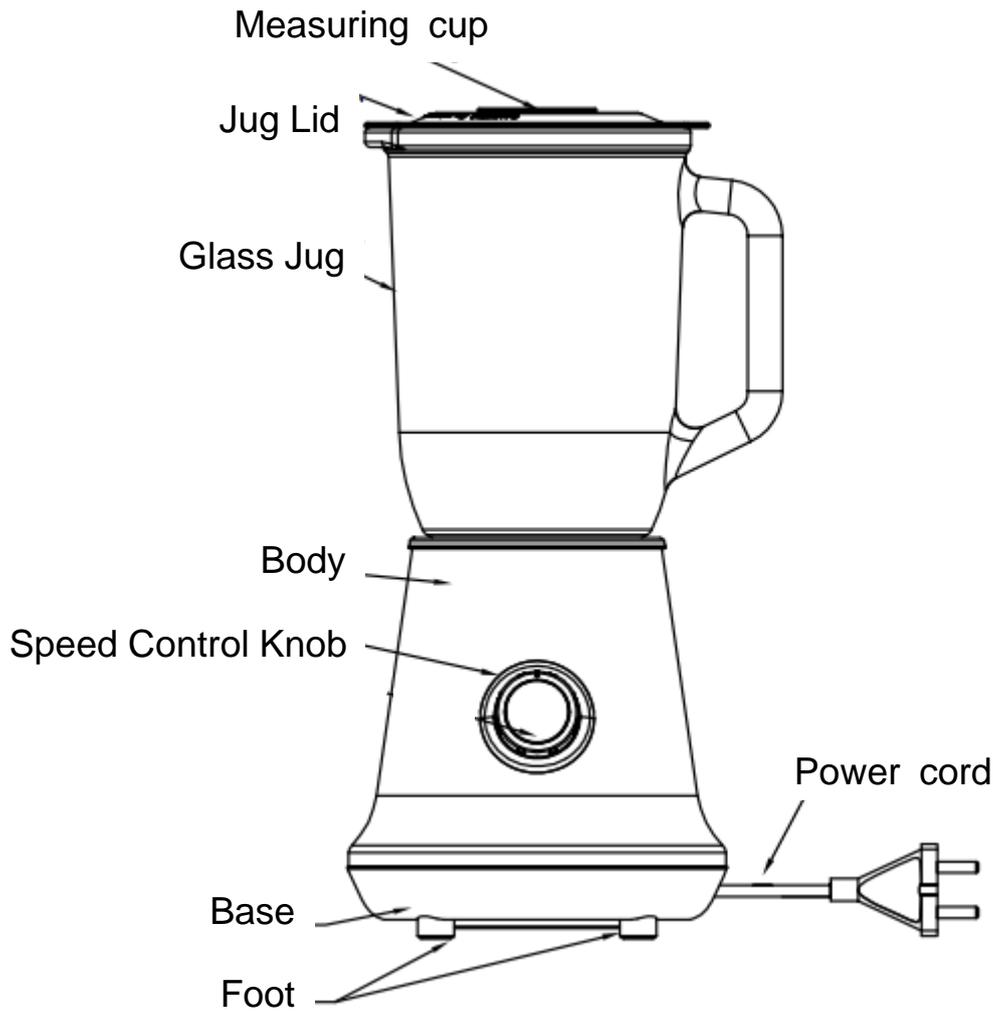


Fig.1

SPEED CONTROL KNOB

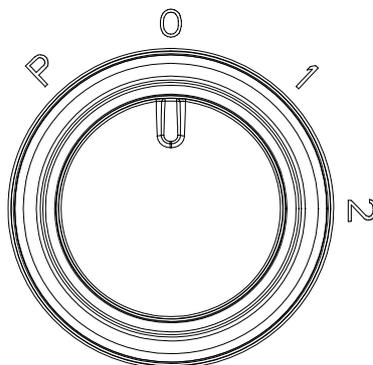


Fig.2

HOW TO USE

Before initial use

- 1). Before first use, unpack the appliance and place all parts on a stable and level surface.
- 2). The blending container assembly (including the measuring cup, lid, upper seal ring, jug, lower seal ring, blade assembly) has already been assembled to the motor unit. Disassemble to wash all detachable parts except the motor unit. Refer to the later chapter CARE AND CLEANING.
- 3). Once all parts have been cleaned and dried thoroughly, reassemble.
- 4). Invert the blending container onto a level surface, holding the Jug handle, put the lower seal ring and blade assembly onto the Jug base and secure the blade assembly by turning it anti-clockwise until tight, note the outer plastic flange remains fixed on the Jug. (See Fig.3)
- 5). Reposition the Jug assembly with its opening upwards. Wrap the upper seal ring around the lower portion of the lid and place the lid onto the Jug. Place the measure cup into the lid by fitting the small projection on the both sides of the cup into the slots of the lid and turning the cup clockwise until tight. (See Fig.4)
- 6). Finally, place the assembled Jug onto the motor unit by aligning the strip on the assembled Jug bottom. (See Fig.5)

CAUTION: Jug and base are now secure. Do not try to twist the jug and base onto motor unit.

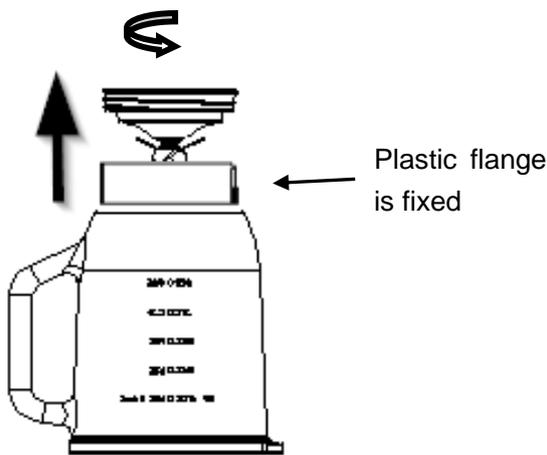


Fig.3

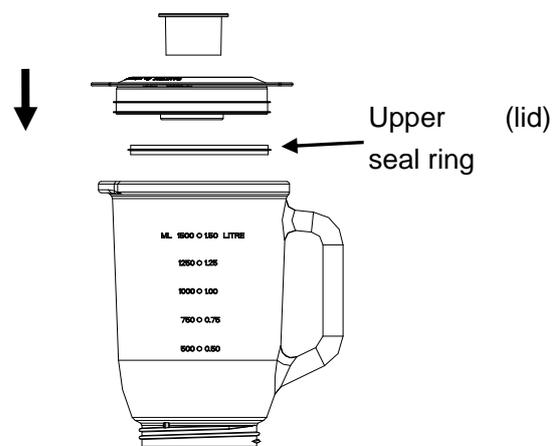


Fig.4

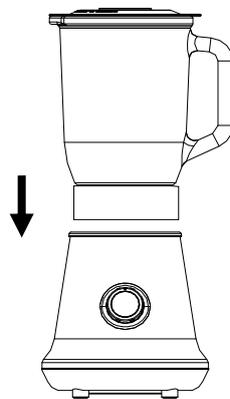


Fig.5

How to use

1. Peel or core the fruit or vegetables and then cut it into small diced pieces.
2. Place the food to be blender into the Jug (See Fig.6) . Additional water should be added to facilitate smooth blending. The proportion of the food and water is typically by a ratio of 2:3. The amount of mixture should not exceed the max level marking as indicated on the Jug.

RECIPE

FOOD TYPE	SPEC	WEIGHT	SPEED
Carrot (apple, pear etc.)	Cut into 15mm*15mm*15mm	Carrot: 600g Water: 900g	High speed

CAUTION: never use boiling liquids or run the appliance empty.

3. Put the lid on the Jug. Be sure the measuring cup is in place.
4. Plug the power cord into a standard wall socket outlet.
5. Turn the speed knob to the appropriate speed setting for your task.
6. For quick or delicate blending tasks, turn the speed knob to P (pulse) position and hold for a few seconds and then release, the knob will reset to O (off) position automatically. Operate several times until the desired consistency has been obtained.
7. If you want to add ingredients while the blender is working, remove the measuring cup and place through the lid opening. (See Fig.7)
8. When crushing ice or hard food, keep one hand firmly on the lid.
9. When the consistency you desire is obtained, turn the knob to O position.

CAUTION: For each use, the consecutive operation time should not exceed 3 minutes. At least 10 minutes rest time must be maintained between two continuous cycles, let the unit cool to room temperature before performing next operation cycle.

Note : If you want to stop the machine during operation, turn the knob to O position at any time.

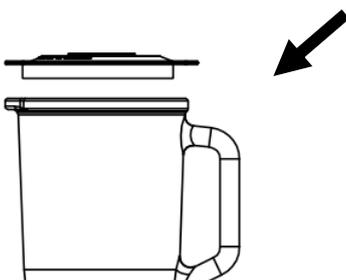


Fig. 6

Before blending, add food to be blender into the Jug.

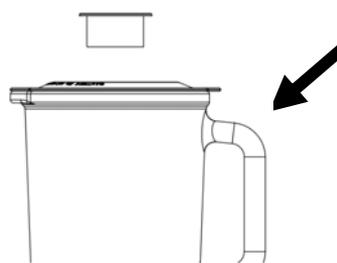


Fig. 7

During blending, add the ingredient through the lid opening.

- For best circulation of foods that are to be blended with liquids, pour the liquid into the Jug first, then add solids.
- Some tasks that cannot be performed as efficiently with a blender are: beating egg whites, whipping cream, mashing potatoes, grinding meat, mixing dough, extracting juice from fruit and vegetable
- The following items should never be placed in the unit as they may cause damage: bones, large pieces of solid, frozen food, or tough foods such as turnips.
- To crush ice, add up to 6 ice cubes. If more ice is needed, remove the cup and add cubes one by one through the lid opening.

CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

1. Before cleaning, unplug the blender.
2. Always wash immediately after use for easier cleaning. Don't let food dry on the Jug assembly as this will make cleaning difficult.
3. Pour a little warm soapy water into the Jug and turn the knob to P (pulse) position for a few seconds and then empty the Jug.
4. Dismantle all detachable parts. Lift the Jug assembly off the motor unit, to detach the blade assembly by turning it clockwise from the Jug base bottom and remove the seal ring 2 and blade assembly (see fig.8). In addition, detach the Jug lid seal ring 1 from the Jug lid.

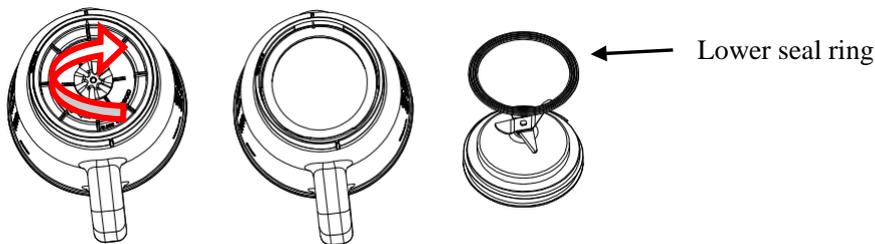


Fig.8

5. Rinse the measure cup, lid, seal ring 1, Jug unit, seal ring 2 and blade assembly by hands or in a dishwasher and then dry. They are dishwasher safe components, but the temperature setting shall not exceed 65°C.
6. Brush the blade clean using warm soapy water, then rinse thoroughly under the tap. Don't touch the sharp blades, handle carefully. **Don't immerse the base unit / motor assembly in water.** Leave to dry upside down away from children.
7. Wipe the motor unit with a damp cloth and dry thoroughly. Remove the stubborn spots by rubbing with non-abrasive cleaner. If liquids spill into the motor unit; first unplug the unit, then wipe with a damp cloth and dry thoroughly.

CAUTION

- 1) Do not immerse the motor unit in liquid to prevent the risk of electric shock.
- 2) Do not use rough scouring pads or cleansers on parts or surfaces.

ENVIRONMENTALLY RESPONSIBLE DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal centre.



LIVING & CO[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty. Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274
This Product is covered by 1 year warranty when accompanied by proof of purchase.