


LIVING&CO

VACUUM CLEANER 2000W

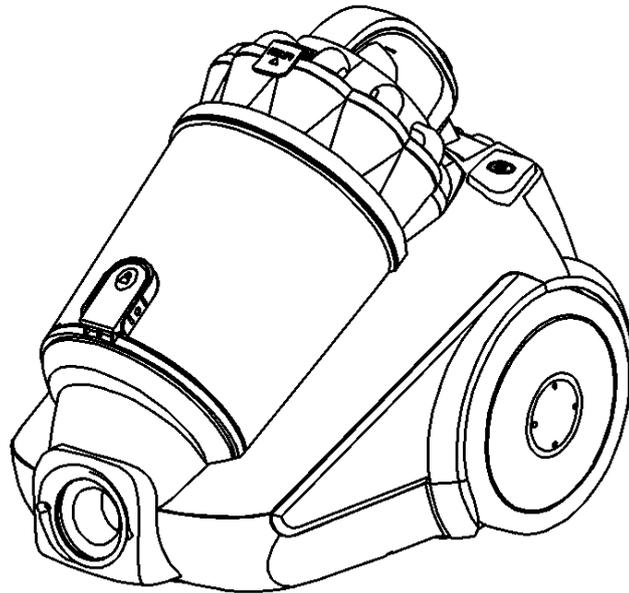

INSTRUCTION MANUAL


LVC2000B

GETTING KNOW THE VACUUM CLEANER

LIVING&CO

AFTER SALES SUPPORT

 (NZ) 0800 422 274

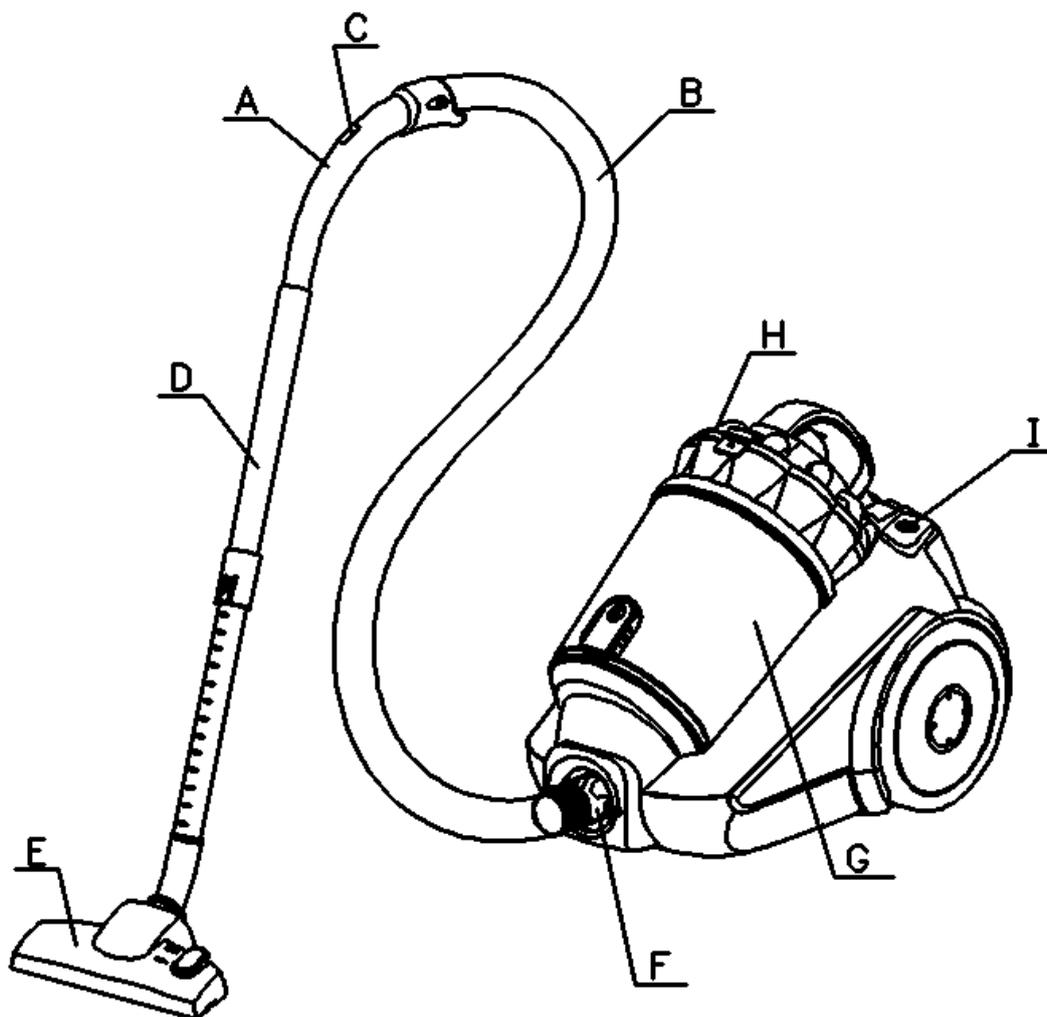

DESCRIPTION

- | | |
|------------------------|-----------------------|
| A. Handle | F. Hose connector |
| B. Hose | G. Dustbin |
| C. wind-force adjuster | H. Power switch |
| D. Tube | I. Cord rewind button |
| E. Floor brush | |

IMPORTANT


LIVING&CO

AFTER SALES SUPPORT


☎ (NZ) 0800 422 274

1. Read this instruction booklet carefully.
2. Before using the appliance, check that the mains power voltage corresponds to the voltage shown on the rating plate.
3. The appliance should be connected to a correctly-earthed 10A power socket.
4. Always remove the plug from the power socket when the appliance is not in use and before cleaning or maintenance.
5. Always remove the plug from the power socket before opening the appliance.
6. Never use methylated spirits or other solvents to clean the appliance.
7. Do not use the appliance to vacuum liquids.
8. Never leave the appliance unattended when it is switched on. Keep the appliance out of the reach of children or the infirm.
9. This appliance is only for household. Use as described in this instruction booklet.
10. Do not switch the appliance on if it appears to be faulty in any way.
11. For repairs or accessories, contact your dealer or an authorized Service Center.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
13. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
14. Keep the appliance and its cord out of reach of children less than 8 years.
15. Do not remove the plug from the socket by pulling the cable or the appliance itself.
16. Do not use the appliance to vacuum lighted matches, cigarette ends and hot ash.
17. Do not use the appliance on wet surfaces.
18. Do not obstruct the air intake or outlet vent.
19. Do not use the appliance to vacuum needles, drawing pins or strings.

Do not remove the plug from
by pulling the cable the or
appliance itself

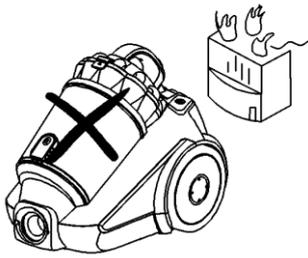

Do not run the appliance
over the power cable

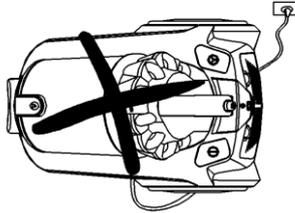


Do not use the appliance to
vacuum lighted matches,
cigarette ends or hot ash.



Do not use the appliance on
wet surfaces.



Do not obstruct the air
intake or outlet vent.

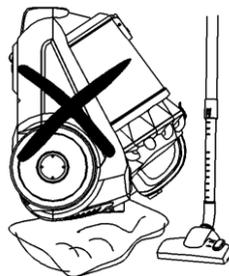

Do not use the appliance to
vacuum needles.
drawing –pins or string.



ASSEMBLING THE VACUUM CLEANER


LIVING&CO

AFTER SALES SUPPORT

 (NZ) 0800 422 274


Removing the flexible tube

Remove the plug from the power socket. Tore the flexible Tube, press the button on the end of the tube and pull the tube Firmly from the air intake duct.

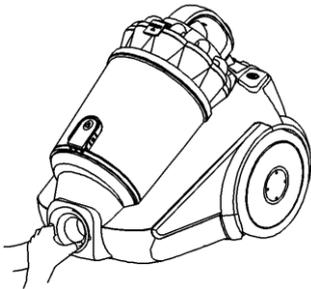


Fitting the extension tubes and accessories


Fitting the extension tube
The handle

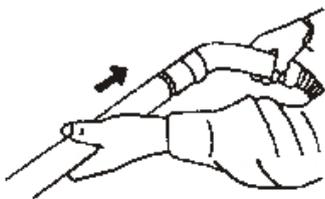

Fitting the extension tubes

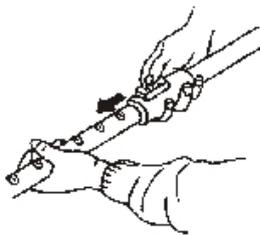

Fitting the accessories to the
extension tube

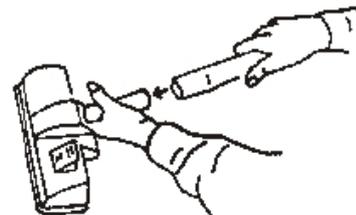

INSTRUCTION FOR USE

LIVING&CO


AFTER SALES SUPPORT

☎ (NZ) 0800 422 274

1, Before using the appliance, unwind length of cable and insert the plug into the power socket. Do not extend the cable beyond the RED mark.

To rewind the power cable, press the rewind button with one hand, and guide the other hand to ensure that it does not whip causing damage


2. Press the ON/OFF button to switch the appliance on .

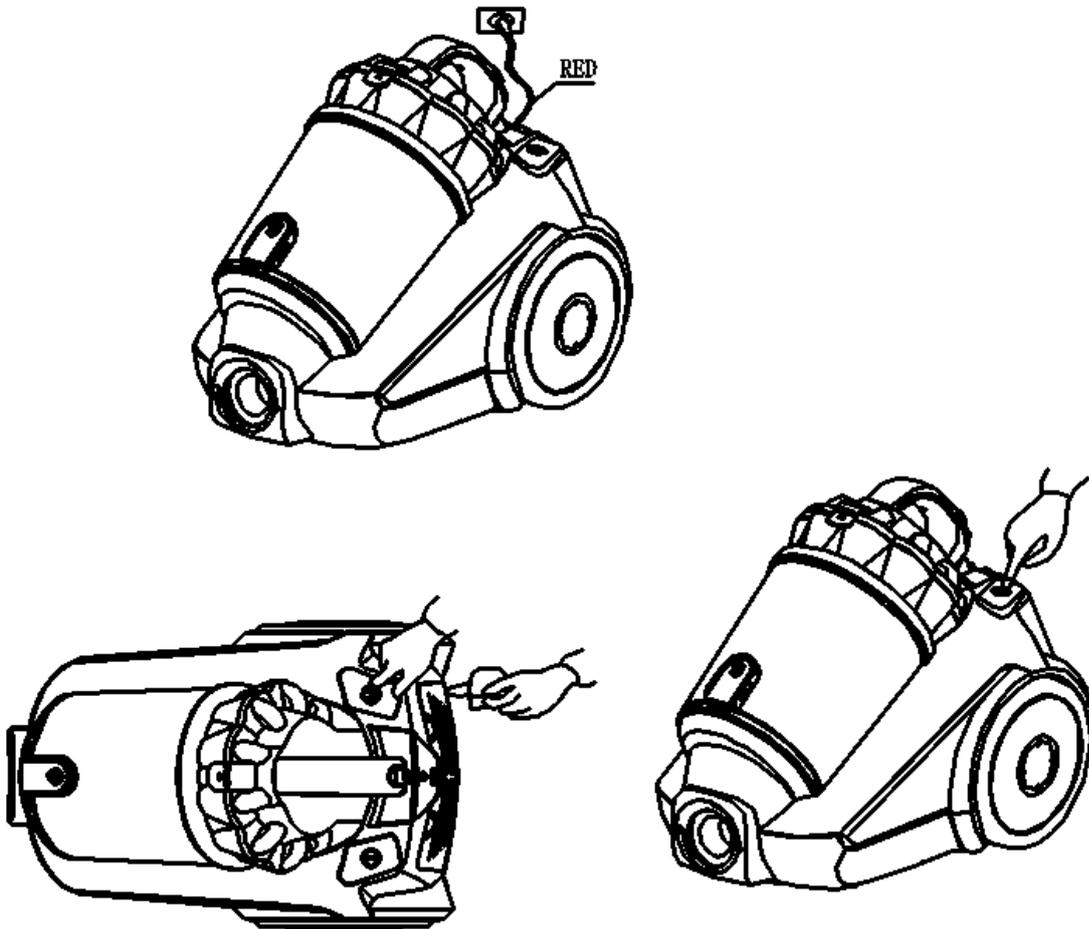


Using the cleaning accessories

. **Dual-position carpet/floor brush.**

Pos. 1: bristles extended. for hard floors

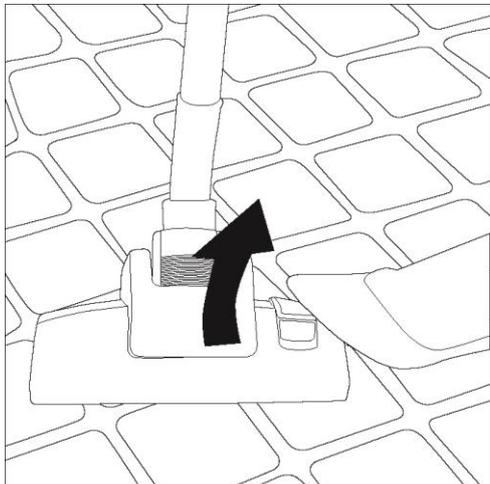

Pos. 2: bristles retracted for carpets

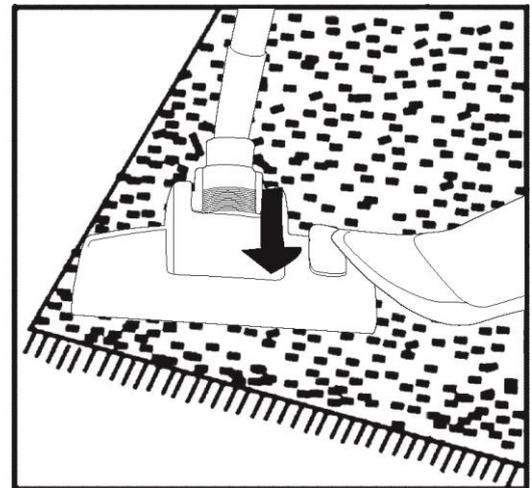

. **Narrow nozzle.**

for cleaning radiators: corners. edges. drawers etc.



Small brush

for cleaning curtains, shelves, books, Inlaid furniture, lamps and other delicate objects.




Clean the dust

LIVING&CO

AFTER SALES SUPPORT

☎ (NZ) 0800 422 274

- 1, Lift the form cover and take out the dust cup.
- 2, Take out the foam form dust cup .
3. clean off the dust inside the dust cup.

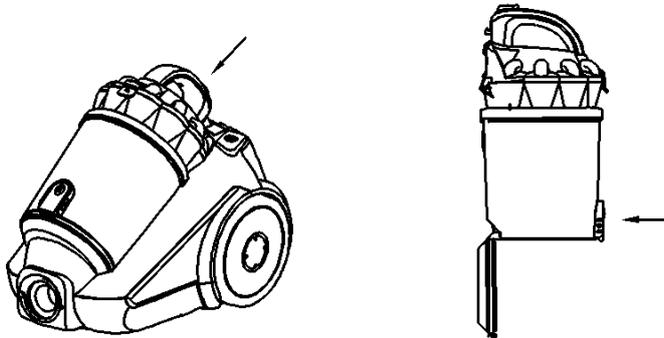

Clean the foam

1. Take out the foam when it's setting dirties
2. clean it in the water .dry it naturally before next use.



LIVING&CO

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty. Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase.