

LIVING&CO

HAIR CUTTING SET 25 PIECE

5.5W



INSTRUCTION MANUAL

LHC25B

Important: Read all instructions carefully before using this appliance. Retain those instructions for further reference.

AFTER SALES SUPPORT

  0800 422 274

2

Contents

03 IMPORTANT SAFEGUARDS

05 PRODUCT FEATURES

06 HOW TO USE

07 GETTING STARTED

10 MAINTENANCE & STORAGE

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be observed, including the following.

DANGER

To reduce the risk of electric shock:

- To avoid danger of electrocution, do not store or leave the clipper in a position where it might fall into a bath-tub, basin or other vessel containing water, even the clipper switch is in the off position.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
-  Do not use while bathing or in the shower.
- Always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
-  The clipper is not washable. Do not try to clean the clipper under a water tap.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- Keep the clipper dry. Never operate the appliance with wet hands.
- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs.
- Use this appliance only for its intended use as described in this manual.
- Keep the cord away from heated surfaces.

IMPORTANT SAFEGUARDS(Cont.)

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorized service center for examination and repair.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area.
- Do not store it in temperatures exceeding 140°F (60°C).
- Do not plug or unplug this appliance when your hands are wet.
- Do not use an extension cord or a voltage converter with this appliance.
- Always attach the plug to the appliance, then to the outlet. To disconnect, turn all controls to OFF, then remove plug from outlet. Detach removable power cords from appliances for storage.
- Do not place this appliance on any surface while operating.
- This power unit is intended to be correctly oriented in a vertical or floor mount position.
- Do not wrap the cord around the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

PRODUCT FEATURES

For best cutting performance we recommend you read these instructions thoroughly and keep them in a safe place.

1. Hair Clipper
2. 1”(25mm)Guide Comb
3. 7/8”(22mm)Guide Comb
4. 3/4”(18mm)Guide Comb
5. 5/8”(16mm)Guide Comb
6. 1/2”(12mm)Guide Comb
7. 3/8”(9mm)Guide Comb
8. 1/4”(6mm)Guide Comb
9. 1/8”(3mm)Guide Comb
10. Right Ear Taper Guide Comb
11. Left Ear Taper Guide Comb
12. Blade Guard
13. Barber Scissors
14. Neck Brush
15. Styling Comb
16. Cleaning Brush
17. Sectioning Clip
18. Sectioning Clip
19. Sectioning Clip
20. Sectioning Clip
21. Sectioning Clip
22. Sectioning Clip
23. Cape
24. Storage Case
25. Lubricating Oil



LIVING&CO

AFTER SALES SUPPORT
 NZ 0800 422 274

6


HOW TO USE

Before cutting hair


We have pre-lubricated and aligned the blades on your hair clipper. Before cutting hair, make sure the sufficient lubrication and good alignment of the blade. They are essential for effective cutting.

The blade can be lubricated and/or re-aligned by following steps:

1. Add a few drops of oil to the blades, turn the clipper on for a few moments;

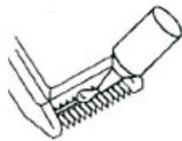

2. Turn off the clipper and unplug from power mains;
3. Loosen the two screws slightly and manually adjust the bottom blade until it is aligned. Re-tighten (but do not over-tighten) the screws.

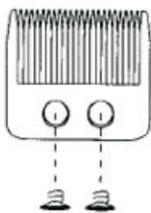

4. Run the clipper again, check that the blade is running smoothly with no fractions.

GETTING STARTED

1. To insert plug, grasp it firmly and guide it into outlet.
2. To disconnect the appliance, grasp the plug and remove it from outlet. Do not pull or yank on the cord or appliance. **Do not wrap the cord around the appliance.**
3. Make sure your hair clipper is running smoothly with a slight vibration.
4. Place the cape around the neck of the person whose hair is being trimmed or cut.
5. This person should be seated so that the top of their head is at your eye level.
6. Comb the hair as it is normally styled.
7. Comb out all knots and tangles.
8. Ensure the hair is dry. Hair clippers perform best with dry hair, making it easier to see how much hair is being cut.
9. Hold the hair clipper in the palm of one hand with your thumb resting firmly on the top of the hair clipper. This grip provides comfortable cutting control. Although the hair clipper may be used with the left or right hand, using it right-handed allows you to access the taper lever more easily.



To Attach Trimming Guides

1. Select the trimming guide that matches the length you want the hair to be after the cut. The trimming guides are numbered and marked with 1/8" (3mm), 1/4" (6mm), 3/8" (9mm), 1/2" (12mm), 5/8" (16mm), 3/4" (18mm), 7/8" (22mm), and 1" (25mm).
2. While the clipper is off, hold the trimming guide with the teeth up. Slide the trimming guide onto the blades until it locks into place.

8

HOW TO USE (Cont.)

Giving a Comfortable, Even Cut

Allow the clipper to cut through the hair without moving it too quickly. Moving the clipper too quickly may create a pulling sensation. Use short strokes when cutting, and initially use the longest trimming guide. You can always use a closer trimming guide later if you want a closer cut.

How To Give a Haircut

1. Start at the back of the head. Holding the clipper as shown, lightly stroke upward making sure you are taking off the desired amount of hair. Work your way up to the crown of the head in layers. When completed, comb the area to remove any loose hair and to determine whether you need any further cutting.



2. Repeat the same procedure for each side of the head. Make sure the length of the hair is trimmed to the same length on both sides of the head.

3. To cut the hair at the top of the head, hold the hair between your fingers and cut a small amount at a time. Cut from the front to the back.



4. Remove the trimming guide and replace with either the left or right ear guide. The shorter guide teeth are designed to be toward the ear. Move the clipper from the back of the head to the front. This creates a tapered effect around the ears and back of the neck.




5. The final trim can be made with the hair clipper or the included scissors. Make sure to check over the entire head for any uneven areas. For styled hair or giving quick trims, you may prefer using your hair clipper without the trimming guide.

LIVING&CO

AFTER SALES SUPPORT
☎ NZ 0800 422 274

HOW TO USE (Cont.)

6. The adjustable taper control lever allows you to gradually change the closeness of your cut, either with or without a trimming guide. When the lever is fully forward the blades will give you the closest cut. Moving the lever gradually backward increases the cut length.

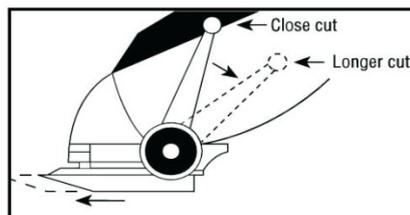

Very short styles

1. Using the 1/2" (12mm) trimming guide, hold the comb flat against the head and move the hair clipper from the back of the neck to the crown of the head.

2. Cut in a similar manner from the side to the top of the head. Then cut from the front to the crown of the head.

3. If a "Flat Top" style is desired, remove the trimming guide and use the barber's comb. Trim a little at a time until a flat look is achieved.



Trimming Beards & Mustaches

1. Comb your beard in the direction it grows.

2. Determine the length you want the beard to remain, and fit the appropriate trimming guide. Remember the 1/8" (3mm) guide will give you the shortest beard while the 1" (25mm) will give you the longest. If you want a longer beard you can use the styling comb as a trimming guide.

3. Start trimming under your chin and work toward your ear and beard line. Cut in different directions for a uniform trim.

4. Lightly stroke the edge of your mustache in a downward movement.



MAINTENANCE

1. Lubrication: The blades on your hair clipper should be lubricated before every haircut. Use only the light grade oil supplied or a suitable alternative like sewing machine oil. Blades will wear prematurely and not cut properly if they are not sufficiently lubricated. There may also be a pulling sensation on the hair.

2. Cleaning: The blades should be cleaned after each haircut. Use the supplied cleaning brush to clean the blades. If necessary, remove the bottom blade and clean the hair between the two blades.

Warning: The clipper is not washable. Do not try to clean the clipper under a water tap.

3. Service: This appliance does not contain any user-serviceable parts. Bring this appliance to an authorized service representative for service.

STORAGE

When not in use, unplug it and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life, and avoid jerking, twisting or straining especially at plug connections.

LIVING&CO

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase.

LIVING&CO

AFTER SALES SUPPORT
 NZ 0800 422 274