

LIVING&CO

**L+C 4 SLICE TOASTER SQUARE SS /
L+C 4 SLICE TOASTER SQUARE SS RED /
L&C 4 Slice Toaster Glossy Black**



INSTRUCTION MANUAL

MODEL: LT4B/LT4R/LT4GB

AFTER SALES SUPPORT

 **NZ** 0800 422 274

2

Read these instructions carefully before using your toaster, and keep it carefully.

If you follow the instructions, your toaster will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY


IMPORTANT SAFEGUARD

1. Read all instruction before using.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug unit from outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
8. Do not let the cord hang over edge of table or counter, or touch hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
12. Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials, they must be watched.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Don't attempt to dislodge food when toaster is in operation.
15. Be sure to take the bread out carefully after toasting so as


to avoid injuries.

16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.
18. Warning: if toast of small bread slices less than 85mm length, you must pay attention to the potential risk of burning when taking out the slices.
19. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
20. Don't use the appliance outdoors.
21. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
22. The Hot surface warning symbol is marked on the appliance means that the appliance may be hot during use.
23. Save these instructions.
24. Never operate the appliance with wet hands.
25. It is recommended to have a residual current device (safety switch) installed by qualified electrician to provide additional safety protection when using all electrical appliances.

KNOW YOUR TOASTER

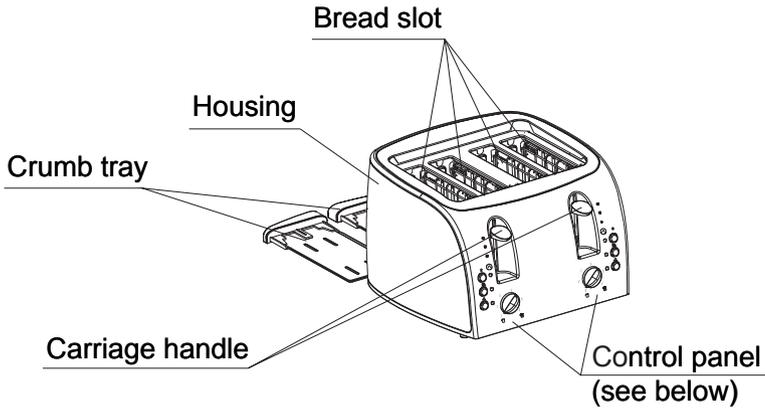

Control panel:

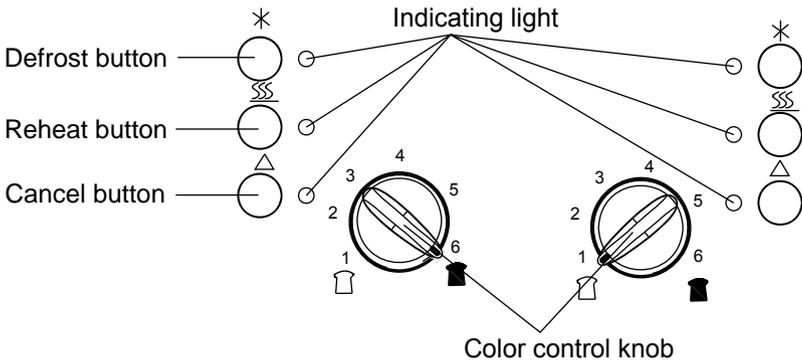

For the first use

As there is manufacturing residue or oil remained in the toaster or heat element, it usually will emit the odor for the first use. It is normal and will not occur after several times use, for the first use it is suggested to operate according to the below steps, except without bread. Then let the toaster cool down and begin toasting the first slice.

Operation:

1. Insert regular bread slice into the bread slot, which can be inserted with two slices at most each time.

Note: Make sure the crumb tray is completely positioned in place before use.

2. Plug the power cord into the outlet.

3. Set color control knob to your desired color. There is 6-position level, the lowest “1” is for light and the highest “6” is for dark. The bread slice can be toasted to golden color at the middle position.

Note:

1). Toasting color for one slice is darker than that for two bread slices at the same level.

2). If toasting continuously, toasting color for the latter bread is darker than that for the anterior bread at the same level.

4. Lower carriage handle down vertically until it is latched in place, the indicator of **Cancel** will be illuminated, and the appliance will begin toasting at once.

Note: The carriage handle can only be latched when the appliance is plugged in.

5. Once the bread has been toasted to the preset color, the carriage handle will automatically pop up. Also you can uplift the carriage handle a little to remove the bread readily.

Note: During toasting, you may also observe the toasting color. If it is satisfactory, you can press the Cancel button to cancel the operation at any time, but never lift carriage handle to cancel toasting.

6. If you want to toast frozen bread, firstly set color control knob to your desired color, and then lower carriage handle down vertically until it is latched in place. then press **Defrost** button and the indicator of **Defrost** button will be illuminated, In this mode bread will be toasted to your desired color.

7. If you want to warm cold toasted bread, firstly lower carriage handle vertically until it is latched in place, and then press the **Reheat** button and the indicator of **Reheat** button will be illuminated, In this mode toasting time is fixed, so long as time runs over, the carriage handle will automatically spring up and end up the reheating process.

Caution:

1. Remove all protective wrappings prior to toasting.

2. If toaster starts to smoke, Press **Cancel** to stop toasting immediately.

3. Avoid toasting the food with extremely runny ingredients such as butter.

4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.


5. The bread slot is only applicable for toasting regular bread slice.

6. In order to achieve uniform color we recommend that you should wait minimum 30s between each toasting so that color control can reset automatically.

Cleaning and maintenance:

1. Before cleaning, unplug from the appliance and let the appliance cool down completely.
2. Wipe the outside with soft dry cloth, never use metal polish.
3. Pull out crumb tray on bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, the power cord may be wound under the bottom of toaster.

Environment friendly disposal

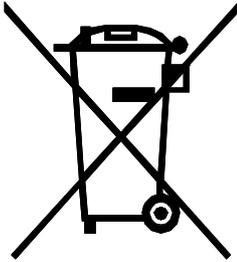

You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

LIVING&CO

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase.