

# LIVING&CO®

## Hand Mixer White 150W



**INSTRUCTION MANUAL**

**MODEL:LHM150W**

**AFTER SALES SUPPORT**



**(NZ) 0800 422 274**



Read these instruction carefully before using your hand mixer, and keep it carefully.

If you follow the instructions, your hand mixer will provide you with many years of good service.

**SAVE THESE INSTRUCTIONS CAREFULLY**

# IMPORTANT SAFEGUARDS

1. Read all instructions before using.
2. Make sure that you outlet voltage corresponds to the stated on the rating label of the mixer.
3. Do not operate mixer with a damaged cord or plug, after the appliance malfunction, or if it is dropped or damaged in any manner. Return the appliance to the nearest authorized Service Center for examination, repair or electrical or mechanical adjustment.
4. Do not leave mixer unattended while it is operating.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet while not in use, before putting on or taking off parts, and before cleaning.
7. The use of attachments not recommended or sold by the

manufacturer may cause fire, electric shock or injury.

8.Remove beaters from mixer before washing.

9.Do not place on or near a hot gas or electric burner or in a heated oven.

10.Always check that the control is OFF before plugging cord into wall outlet. To disconnect, turn the control to OFF, then remove plug from wall outlet.

11.Avoid contacting with moving parts.

12.Keep hands, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons, and/or damage to the mixer.

13.To protect against risk of electrical shock, do not put mixer in water or other liquid. This may cause personal injury or damage to the product.

14.Do not use mixer for other than intended use.

15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

16. Children should be supervised to ensure that they do not play with the appliance.

17. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.

18. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

19. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move

in use.

20. This appliance is intended to be used in household and similar applications such as:


- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.

21. Do not use outdoors.

22. Never operate the appliance with wet hands.

23. It is recommended to have a residual current device (safety switch) installed by qualified electrician to provide additional safety protection when using all electrical appliances.

## KNOW YOUR MIXER

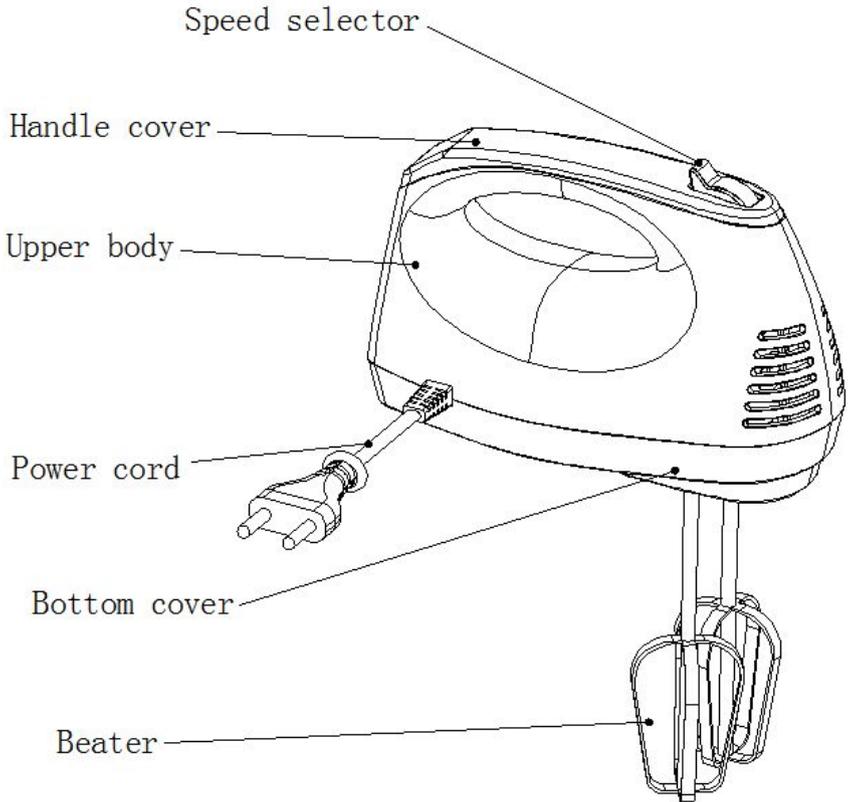

## USING YOUR MIXER

1. For the first use, cleaning the beaters.
2. Assemble beaters into mixer. Beaters are used for beating eggs or similar food.

Note: Beaters can be inserted in either socket.

3. Ensure that the unit is at the 0 setting, then plug in the power source.
4. Turn the speed selector to your desired setting, there is 5 setting. The appliance will start working.

Warning: Do not stick knife, metal spoons, fork and so on into bowl when operating.

5. The max operation time per time shall not exceed 3 minutes. Minimum 20 minutes rest time must be maintained between continuous two cycles.
6. When mixing is completed, turn the speed selector to 0 position, unplug the cord from power outlet.
7. If necessary you can scrape the excess food particles from the beaters by rubber or wooden spatula.
8. Hold the beaters with one hand and press the Ejection button firmly down with the other hand, remove the beater.

Note: Remove the beaters only at the 0 setting. Never pressing the Ejector button when the appliance is operating.

## Cleaning and Maintenance

1. Unplug the appliance and wait it completely cool down

before cleaning.

2. Wipe over the outside surface of the head with a dampened cloth and polish with a soft dry cloth.
3. Wipe any excess food particles from the power cord.
4. Wash the beaters in warm soapy water and wipe dry. The beaters may be washed in the dishwasher.

**Caution:** the mixer cannot be immersed in water or other liquid.

**Warning:** Any other serving should be performed by an authorized service representative.

## COOKERY TIPS

1. Refrigerated ingredients, such as butter and eggs, them should be at room temperature before mixing begins. Set these ingredients out ahead of time.
2. To eliminate the possibility of shells or deteriorated-off eggs in your recipe, break eggs into separate container first, then adding to the mixture.
3. Do not over-beat. Be careful that you only mix/blend mixtures until recommended in your recipe. Fold into dry ingredients only until just combined. Always use the low speed.

4. Climatic conditions. Seasonal temperature changes, temperature of ingredients and their texture variation from area to area all play a part in the required mixing time and the results achieved.
5. Always start mixing at lower speed. Gradually increase to the recommended speed as stated in the recipe.
6. The mixer with beaters can not used for beat sour paste and other stiff mixtures

## ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!  
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

# LIVING & CO<sup>®</sup>

## Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase.