

说明书技术要求				
选择项打 <input checked="" type="checkbox"/>				
编 码	华胜做，无编码			制作   付伟
工厂型号/客户型号	LRC25W			
客户名称	TWL			
环 保	<input type="checkbox"/> 环保	<input checked="" type="checkbox"/> 不环保		
印刷颜色	<input checked="" type="checkbox"/> 单色	<input type="checkbox"/> 双色	<input type="checkbox"/> 三色	<input type="checkbox"/> 四色
专 色	<input checked="" type="checkbox"/> 无	<input type="checkbox"/> 有 ( <input type="checkbox"/> 1个 <input type="checkbox"/> 2个 <input type="checkbox"/> 3个 )		
尺寸规格 ( 单位 :mm )	145x210			
钉装或胶装	<input checked="" type="checkbox"/> 钉装		<input type="checkbox"/> 胶装	
材 质	100G双胶纸			
其他要求	共7P 封面，倒数第二页四色，内页单黑印刷 ( pantone black c )			
变更记录	A0 : 20171206			

注意:P3警语大写字母字高大于3mm

# LIVING & CO<sup>®</sup>

## Rice Cooker



### INSTRUCTION MANUAL

MODEL: SR08316

---

**AFTER SALES SUPPORT**

 **NZ** 0800 422 274

# Table of Contents

IMPORTANT SAFEGUARDS .....	1
Part Names.....	4
Product Specifications.....	4
Operating .....	5
Safeguards .....	7
Cleaning And Maintenance .....	7
Troubleshooting .....	8
Circuit .....	9
Environmental protection .....	10

# IMPORTANT SAFEGUARDS

## Caution

For safety reasons and to avoid damage to the appliance or injuries to people, please follow all the safety instructions below. Ignoring safety warnings may result in injuries.

This appliance does not take into consideration the following situations:

- Use by children or disabled people without supervision;
  - children treating it as a toy.
1. Read all instructions.
  2. This appliance is for household use only. Do not use outdoors.
  3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
  4. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning.
  5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
  6. Children should be supervised to ensure that they do not play with the appliance
  7. The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
  8. Please turn off and unplug the appliance before cleaning, maintenance or relocation and whenever it is not in use.

## IMPORTANT SAFEGUARDS

### Caution


9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot food, water or other hot liquids.
12. Do not use the appliance for other than intended use.
13. Lift and open cover carefully to avoid scalding, and allow water to drip into unit.
14. To disconnect turn the control to OFF, then remove plug from wall outlet.
15. Containers are designed for use with this appliance only. They must never be used on a range top. Do not set a hot container on a wet or cold surface. Do not use a cracked container.
16. Do not immerse the appliance in water or any other liquid.
17. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
18. Children shall not play with the appliance. The surfaces of the appliance are liable to get hot during use.
19. To protect against electrical shock, do not immerse cord, plug or appliance in water or other liquid.
20. The heating element surface is subject to residual heat after use, do not touch.
21. Warning: Misuse may cause potential injury

## IMPORTANT SAFEGUARDS

### Caution

22. Do not touch hot surfaces. Use handles or knobs. Use potholders when removing cover or handling hot containers.
23. Do not place on or near a hot gas or electric burner, or in a heated oven.

## Part Name

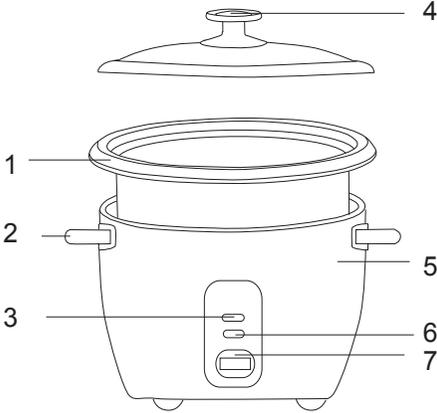


No.	Description
1	Inner Pot
2	Handle
3	Keep Warm Light
4	Lid
5	Outer Body
6	Indicator Light
7	Operating Switch

## Product Specifications


Model No.	Rated voltage	Rated frequency	Rated power	Capacity	Cooking method
SRO8316	220-240V~	50/60Hz	450-536W	2.5L	Direct heating
Accessories	Spoon 		Measuring Cup 		

## Operating

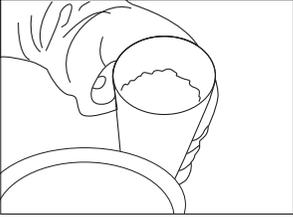

1. Measure the desired amount of rice with the measuring cup supplied with this rice cooker. Rinse the rice several times until the water in the bowl becomes relatively clear.

- One cup of rice weight 0.18L (About 150g)
- **DO NOT** rinse rice in the inner cooking pot as damage may occur to the special surface or deformation creating poor contact to the heating plate.

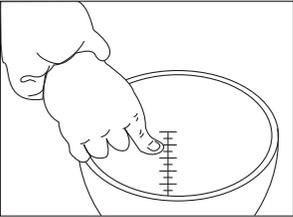


2. Put the rice into the inner pot and water up to the level which corresponds to the measure of rice used.

- The line on the pot is water line. The right line corresponds to litres of rice. The left line corresponds to cups of rice.
- The water line on the cooking pot is a standard guide, it can be adjusted depending on your taste.
- Pour one more cup of water than water mark when cooking 8-10 cups of South Asian rice to get the best performance.
- **NEVER** add water higher than the maximum water line.




3. Wipe any excess water from the outside of the inner pot, install the pot into the cooker, turn it slightly from left to right to ensure that the pot makes good contact with the heating plate, and levels the rice inside the pot.

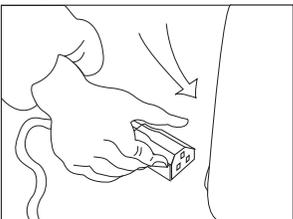


4. When ready to cook, Connect the power supply cord to the cooker first, then plug into an AC wall outlet.

- **DO NOT** plug the cord in until cooking is ready.


## Operating

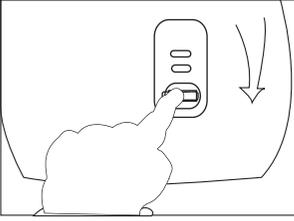


5. Press down the "cooking" switch. The rice will start to cook. The "Cook" Light will illuminate.  
**NOTE:** You must push down the "Cook" switch to start the cooking process and ensure the appliance is connected to a mains outlet.  
 If the switch is not pushed down, the "Warm" light will light up after 1-2 minutes. The cooker will be in keep warm function.

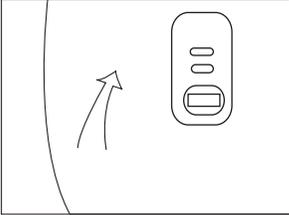

6. When the cooking has finished. the "cooking" switch will pop up and a click will be heard. At the same time, the cooking light will go out and the keep warm light will illuminate.
- After the cooking cycle ends, keep the lid closed for a further 15 minutes.
  - Remove the lid and stir the rice well with a plastic or wooden spoon. Serve the rice immediately or leave on the keep warm function until ready.

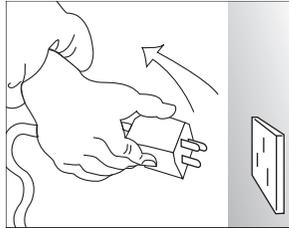

**Caution:** It is recommended once the cooking has completed that the cord is unplugged before serving.

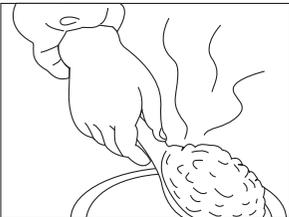

**Warning:** Only use the spoon supplied with this cooker. Do not use a metal scoop or an metal utensil as to avoid scratching the non-stick coating.

## Safeguards

1. The power cord must properly plugged into an earthed wall outlet.
2. Always keep the cooker unplugged when not in use or without cooking pot.
3. Do not place the cooker on a wet or unstable place, or near a fire. heating range, if not, the cooker will deform or malfunction.
4. In order to avoid deforming, do not run the pot with hard objects, or heat the pot on other stove. Never use other container instead of pot to cook.
5. Do not cover the cooker with a cloth; this may warp or discolor the outer lid.
6. The steam vent is very hot during cooking, keep face and hands away from outer lid and steam vent.
7. To protect against electric shock, do not immerse the appliance and electric cord in water or any liquid, or do not allow any liquid to fall on the electric parts.
8. The power cord must be replaced by the appliance manufacturer when it is damaged.


## Cleaning And Maintenance

1. Before cleaning, first switch off the appliance and then disconnect the power plug from the power outlet.
2. Wash the Inner pot tray in warm and soapy water using a sponge or cloth and rinse thoroughly. Wipe dry. Do not clean with any abrasive brushes to avoid damaging the non-stick coating.
3. Occasionally rice grains or other residue may stick onto the heating plate. Ensure a proper contact is made with the Inner pot and rub the grains/residues away from the heating plate and then wipe clean.

## Troubleshooting

No.	ISSUE		CAUSES	REMEDY
1	The light is off.	Heating plate is not hot.	Cooker is not connected to a mains power supply.	Check the switch, outlet, fuse, cord and connect it correctly.
2	The light is on.	Heating plate is not hot.	1. Heating plate failure.	1. Discuss with an Authorised Service Center.
3	The rice is half-cooked or cooking time is too long.		<p>Cooking pot is not in contact with the thermostat properly.</p> <ol style="list-style-type: none"> <li>Cooking pot is deformed.</li> <li>Heating plate is deformed.</li> <li>The cooker pot is tilted to one side, not fully touching the heating plate.</li> <li>Foreign substance between the inner pot and the heating plate.</li> </ol>	<ol style="list-style-type: none"> <li>Replace the inner pot</li> <li>If it is a little deformed, polish the heating plate with fine sand paper.</li> <li>Turn the cooking pot round slightly until it is level to the heating plate properly.</li> <li>Polish the foreign matter with fine sand paper.</li> </ol>
4	The rice is cooked brown.		<ol style="list-style-type: none"> <li>Operating switch button or its holder are obstructed.</li> <li>The thermostat has malfunctioned.</li> </ol>	<ol style="list-style-type: none"> <li>Remove obstruction.</li> <li>Discuss with an Authorised Service Centre</li> </ol>
5	Does not warm automatically.		The warm thermostat has malfunctioned	Discuss with an Authorised Service Centre.

## Circuit

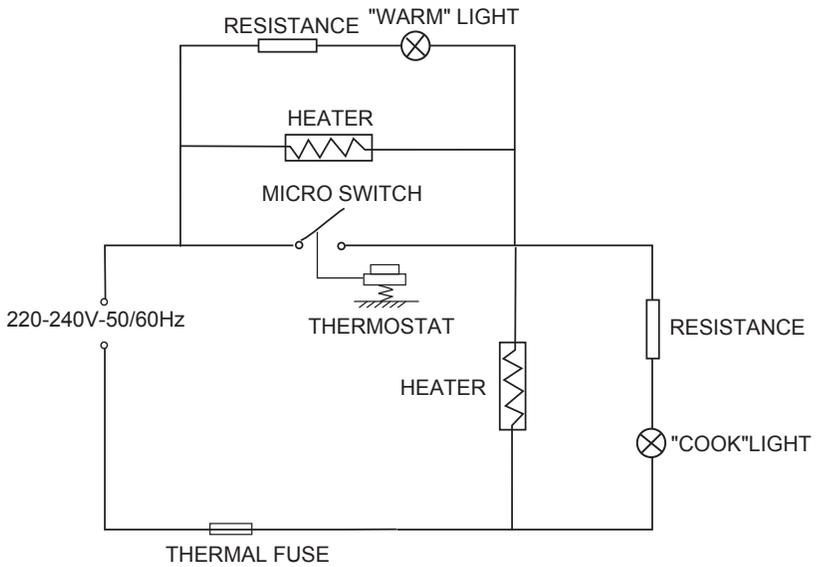

## Environmental protection

### Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.



# LIVING & CO<sup>®</sup>

## Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase.