

LIVING & CO[®]

TWO-SLICE STAINLESS TOASTER



Instruction Manual

MODEL: TA01308A-SA

LIVING & CO

AFTER SALES SUPPORT
☎ NZ 0800 422 274

IMPORTANT SAFETY INSTRUCTIONS

Thank you for choosing a Living & Co Toaster. This Living & Co appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this booklet, will give you years of useful service. Please read these instructions carefully and keep for future reference.

When using electrical appliance. Basic safety precautions should always be followed including the following:


1. Read all instruction before using.
2. Make sure that your socket outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug unit from socket outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
8. Do not let the cord hang over edge of table or counter, or touch hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
12. Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials, they must be watched.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Don't attempt to dislodge food when toaster is in operation
15. Be sure to take the bread out carefully after toasting so as to avoid injuries

IMPORTANT SAFETY INSTRUCTIONS

16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure they do not play with the appliance.
18. Keep the appliance and its cord out of reach of children less than 8 years.
19. Warning: take extra care when attempting to remove small bread / toast slices less than 85mm in length.
20. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
21. Don't use the appliance outdoors.
22. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
23. Save these instructions.
24. It is recommended to have a residual current device (RCD safety switch) installed by a qualified electrician to provide additional safety protection when using all electrical appliances.
25. Never operate the appliance with wet hands.
26. Do not leave the toaster unattended when it is switched on and operating.

YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.

PRODUCT OVERVIEW / OPERATION

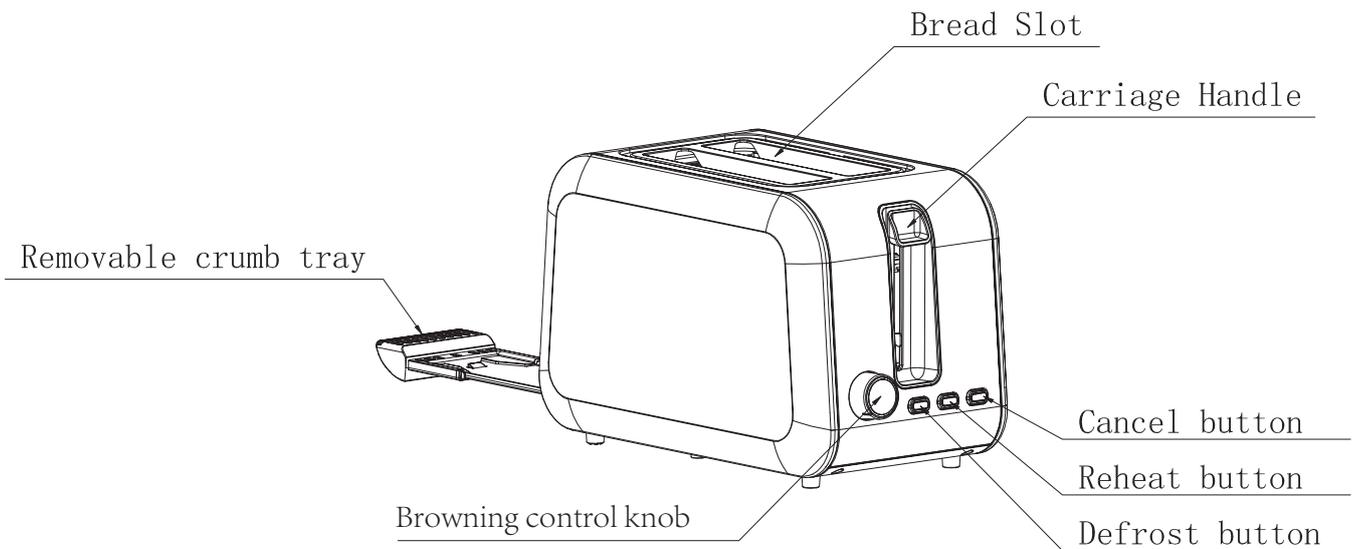

WHEN USING THE TOASTER FOR THE FIRST TIME

NOTE: The toaster may emit a small amount of smoke and odour when used for the first time. This is normal and caused by the lubricant on the heating element during the production process. It is non-toxic. We recommend first operation without bread and within a well ventilated area. The appliance should then be left to cool before toasting the first slice/s of bread.

OPERATION:

1. Insert standard bread slice/s into the bread slot/s, each slot can accommodate one piece of bread.

NOTE: Make sure the crumb tray is correctly positioned in place before using.

2. Insert the supply plug into the power socket outlet and switch on.

3. Set browning control knob to your desired setting. There is a 7-position level, the lowest is for very light toasting and the highest is for darker toasting. Variation will exist depending on the type of bread and thickness however, in general the bread can be toasted to golden color at the position of "4".

NOTES:

- 1) Toasting colour for one slice is darker than that for two bread slices at the same level.**
- 2) If toasting continuously, toasting colour for the latter bread is darker than the colour of previous cycle at the same level.**

PRODUCT OVERVIEW / OPERATION (CONT.)

4. Press the bread carriage lever down vertically until it is latched in place, the Cancel indicator button will be illuminated, and the appliance will begin toasting.

NOTE: The bread carriage lever can only be latched when the appliance is plugged in to the mains supply.

5. Once the bread has been toasted to the preset colour, the carriage lever will automatically move up. When in the up position, you can manually lift the carriage lever up a little to assist with bread removal.

NOTE: During toasting, you may also observe the toasting colour. If it is satisfactory, you can press the Cancel button to end the operation at any time, but never try to manually lift the carriage lever to try and cancel toasting.

6. If the bread has just been taken out from the freezer. Set browning control knob to your desired colour, Press carriage lever down vertically until it is latched in place, then press DEFROST button. The indicator light of the DEFROST button will illuminate. In this mode, it will toast to your desired colour.

7. If you want to reheat cold toasted bread press the carriage lever down vertically until it is positioned in place, then press REHEAT button, the indicator light of REHEAT will be illuminated. In this mode, the toasting time is fixed. When the time expires, the carriage lever will automatically move up and end the reheating process.

CAUTION:

1. Remove all protective wrappings and packaging prior to operation.
2. If the toaster starts to emit smoke, Press the Cancel button to stop toasting immediately.
3. Avoid toasting food with ingredients which can melt easily (such as butter).
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical socket outlet first. Take care not to damage the internal mechanism or heating elements when removing bread (direct contact should always be avoided).
5. The bread slots are only suitable for toasting regular bread slices.
6. In order to achieve uniform toasting colour, we recommend that you should wait at least 30 seconds between each toasting so that browning control can cool and reset automatically.

CLEANING AND MAINTENANCE:

GENERAL:

1. Before cleaning, unplug from the appliance plug from the power outlet and let it cool down completely.
2. Wipe the outside of the enclosure with a soft dry cloth.
3. Pull out the crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not in use or during storage, the power cord may be wound under the bottom of toaster.

CAUTION:

1. Never immerse toaster in water or any other liquid for cleaning. Water and liquids must never enter the toaster.
2. Never clean the inside of the toaster, as this may damage the heating elements.
3. Never use a metal scouring pad, abrasive materials, harsh chemical cleaners or hard objects for cleaning any surface of the toaster.
4. Do not put the crumb tray in the dishwasher.
5. Always let the toaster cool down completely prior to storing, especially if it is stored in a tightly enclosed space.

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.



LIVING & CO[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase.

IM Version 1.0 - October 2018