


工厂型号	客 户 型 号		改稿日期	制 稿 人
LQ-3501B	LQ-3501B		2022/12/21	myl
尺 寸		材 质		印 刷 颜 色
145x210mm		双胶纸，具体以采购合同为准		单色
备 注	/	/		
<div><div></div><div>注：印刷前请与此文件仔细核对。如有疑问，请及时与我联系！ (如未发源文件，请对照“改稿日期”“版本”信息，对上再进行安排)</div></div>				





STOP

BEFORE RETURNING TO STORE

Read the manual

It will help you get the best out of your product. Still have questions? Call After Sales Support

0800 422 274

living & co.

Warranty

 
We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 2 years warranty. Now you too can relax knowing that you are covered. Customer Helpline NZ: 0800 422 274 This Product is covered by 2 years warranty when accompanied by proof of purchase.

living & co.

AFTER SALES SUPPORT

living & co.

AIR FRYER

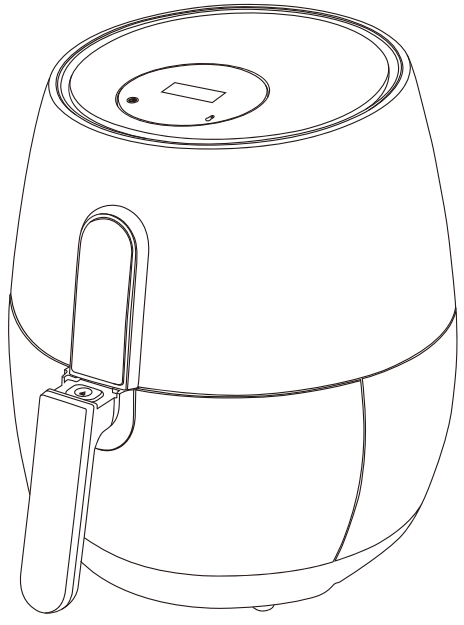

INSTRUCTION MANUAL

MODEL: LQ-3501B

living & co.

AFTER SALES SUPPORT

living & co.

CONTENT

IMPORTANT SAFEGUARDS ..... 1-3  
PRODUCT OVERVIEW / DESCRIPTION..... 4-5  
GETTING STARTED ..... 6  
OPERATING INSTRUCTIONS ..... 7-9  
CLEANING ..... 10  
STORAGE..... 10  
APPLIANCE SPECIFICATION..... 10  
COOKING GUIDE ..... 11  
TROUBLE SHOOTING ..... 12-13

living & co.

AFTER SALES SUPPORT

living & co.

IMPORTANT SAFEGUARDS

⚠ Caution

Please read this manual carefully before using the appliance as danger may occur under incorrect operation.  
1. Do not immerse the housing in water or rinse under the tap due to the electronic and heating components.  
2. Avoid any liquid entering the appliance to prevent electric shock or short-circuit.  
3. Keep all food ingredients in the basket to prevent any contact from the heating elements.  
4. Do not cover the air inlet or the air outlet when the appliance is operating.  
5. Do not fill the pan with oil. Filling the pan with oil may cause a fire hazard.  
6. Do not touch the inside of the appliance while it is operating.  
7. Check if the voltage indicated on the appliance is compatible with the local mains voltage.  
8. Never let the power cord hang over the edge of a counter of table, or touch hot surfaces.  
9. Keep the appliance and its mains cord out of the reach of children.  
10. Keep the mains cord away from hot surfaces.  
11. Do not connect appliance to an external timer switch.  
12. Do not place the appliance on or near combustible materials such as a tablecloth or curtain.  
13. Do not place the appliance against a wall or against another appliance. Leave at least 10cm free space on the back and sides and 10cm free space above the appliance.

living & co.

AFTER SALES SUPPORT

living & co.

IMPORTANT SAFEGUARDS

⚠ Caution

14. Do not place anything on top of the appliance.  
15. Do not use the appliance for any other purpose than described in this manual.  
16. Do not operate the appliance unattended.  
17. During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings.  
18. Be careful of hot steam and air when you remove the pan from the appliance.  
19. Young children should be supervised to ensure that they do not play with the appliance.  
20. Ensure the appliance in placed on a horizontal, even and stable surface.  
21. The use of accessories is not recommended by the appliance manufacturer as it may cause injuries.  
22. This appliance is designed for household use only. It may not suitable to be safely used in environments such as staff kitchens, farms, motels, and other non-residential environments.  
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.  
24. Appliance not intended to be operated by means of an external timer or separate remote control system.

living & co.

AFTER SALES SUPPORT

living & co.

IMPORTANT SAFEGUARDS

⚠ Caution

25. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.  
26. If you see dark smoke coming out of the appliance, immediately unplug the Appliance, wait for the smoke emission to stop before you remove the pan from the appliance.  
27. Always unplug the appliance while not using. The appliance needs approximately 30 minutes to cool before handing or cleaning safety.

 
FOR HOUSEHOLD USE ONLY  
DO NOT THROW AWAY INSTRUCTIONS

living & co.

AFTER SALES SUPPORT

living & co.

PRODUCT OVERVIEW

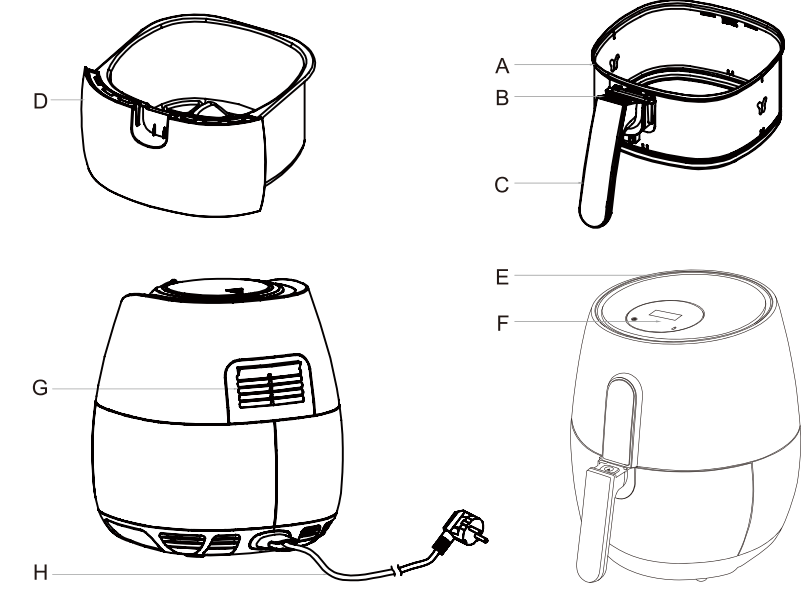

DESCRIPTION


A. Cooking Basket  
B. Basket release button (lift plastic cover to activate)  
C. Basket handle  
D. Detachable tray  
E. Air inlet  
F. Display control panel  
G. Hot air outlet  
H. Power cord

living & co.

AFTER SALES SUPPORT

living & co.

CONTROL DISPLAY PANEL



DESCRIPTION

1. Heating indicator - will illuminate when element is on  
2. Fan indicator - will illuminate when the fan is on  
3. Temperature / Timer display- will alternate between the temperature and timer functions when ON  
4. Temperature increase button  
5. Temperature decrease button  
6. Preset mode button  
7. Power ON/OFF button  
8. Timer decrease button  
9. Timer increase button  
10. Symbols (top perimeter) illuminate to indicate auto preset default cooking programs for specific food types

living & co.

AFTER SALES SUPPORT

living & co.

GETTING STARTED

Before first use

1. Remove all packaging materials and stickers or labels.  
2. Remove the frying basket by lifting the plastic cover and pressing the basket release button, then lift up and out of the pan.  
Clean the basket and detachable pan with warm, soapy water, then rinse and dry thoroughly. Do not immerse the main unit in water or any other liquid.  
3. Never use harsh or abrasive cleaning detergents or scourers to clean air fryer or its accessories, as this could cause damage.  
4. Place the appliance on a stable, horizontal and even surface.  
Warning: Do not place the appliance on a non-heat-resistant surface.



Note: When using the air fryer for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside.

living & co.

AFTER SALES SUPPORT

living & co.

OPERATING INSTRUCTIONS

• Place the appliance on a stable, horizontal and even surface, ensuring adequate clearance from the top and sides (refer important safeguards earlier in this manual).  
• Insert the supply plug into the mains socket outlet and switch on the air fryer at the mains power supply. The control panel displays .  
• Carefully remove the detachable pan (with heating basket) by pulling outwards. (Fig.1) Place the pan on a flat, stable, heat-resistant surface.  
• Place the ingredients into the non-stick coated cooking basket, then slide the pan back into the Air Fryer. (Fig.2).  
• Press , to activate the control panel. The display panel will show the default temperature setting of 180°C and time setting of 15 minutes.

Temperature Setting  
Press "+" or "-" to adjust the temperature by +/- 5°C increments (minimum of 80° C to a maximum of 200° C).  
Timer Setting  
Press "+" or "-" to adjust the timer by +/- 1 minute increments (minimum of 1 minute to a maximum of 30 minutes).  
Auto Preset Options  
For extra convenience, the Air fryer features auto presets to make using the Air Fryer even easier.  
To enter auto preset mode, press the preset mode button (M). The display panel will show the default preset option of chips. Press the button (M) again to scroll through the auto preset menu. Select the auto preset option of your choice.








living & co.

AFTER SALES SUPPORT



living & co.

OPERATING INSTRUCTIONS

The default temperature and timer for the presets are listed in the table below

Type	Temp (°C)	Time (Min)	Remark
	200	18	Automatically stops after 18 minutes
	200	12	Automatically stops after 12 minutes
	165	8	Automatically stops after 8 minutes
	155	30	Automatically stops after 30 minutes
	180	20	Automatically stops after 20 minutes
	175	25	Automatically stops after 25 minutes
	175	10	Automatically stops after 10 minutes

  CAUTION: Never use the pan without the basket in it. Do not touch the pan during or immediately after use, as it gets very hot. Only hold the pan by the handle.

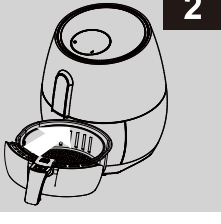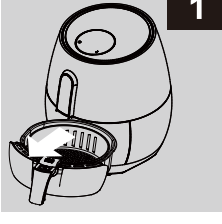


WARNING  
Always unplug the appliance from the electrical outlet before assembling, disassembling, relocating, servicing, or cleaning it.


living & co.

AFTER SALES SUPPORT

living & co.

 OPERATING INSTRUCTIONS

• The timer starts counting down the set preparation time.  
• During the air frying process, the " heating" (and fan) indicator () comes on and goes out from time to time.  
• This indicates that the heating element is cycling on and off to maintain the set temperature .  
• Some ingredients require shaking halfway during the cooking time, pull the pan out of the appliance by the handle and shake it. Then slide the pan back into the main unit.  
• Caution: Do not press the button on the handle during shaking. (fig.3)

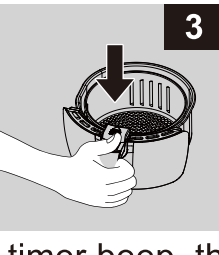 

• When you hear the timer beep, the set preparation time has elapsed. Pull the pan out of the appliance and place it on the heat-resistant holder.  
• Check if the ingredients are ready.  
• If the food is not ready yet, simply slide the pan back into the appliance and set the timer for a few extra minutes. To remove small ingredients (e.g. fries), press the basket release button and lift the basket out of the pan. Don't turn over the pan, otherwise, the oil collected on the bottom of the pan will leak onto the ingredients. The pan and the ingredients are hot after hot air frying.  
• Depending on the type of the ingredients in the air fryer, steam may escape from the pan.  
Empty the basket into a bowl or onto a plate.  
• Tip: To remove large or fragile ingredients, lift the ingredients out of the basket by a pair of tongs. When a batch of ingredients has completed, the air fryer can be used immediately for preparing another batch.

living & co.

AFTER SALES SUPPORT

living & co.

CLEANING

• WARNING: Unplug the appliance from the electrical outlet before cleaning.  
• Clean the appliance after every use.  
• Make sure your appliance has cooled down completely.  
• Wipe the outside of the appliance with a moist cloth.  
• Clean the basket and detachable tray with warm, soapy water, then rinse and dry thoroughly.

CAUTION: Do not immerse the main unit in water or any other liquid.  
Tip: If cooked food is stuck to the basket or the bottom of the pan, fill the pan with warm water with some washing-up liquid. Put the basket in the pan and let the pan and the basket soak for about 10 minutes.  
Note: The pan and basket are dishwasher-proof. Never use harsh or abrasive cleaning detergents or scourers to clean air fryer or its accessories, as this could cause damage.

STORAGE

• Ensure all parts are dry before storage.  
• Store the appliance in a dry box or in a clean, dry place.  
• Never store the appliance while it is still wet or dirty.  
• Never wrap the power cord around the appliance.

APPLIANCE SPECIFICATION

220-240VAC 50/60HZ  
1300-1500W

living & co.

AFTER SALES SUPPORT

living & co.

COOKING GUIDE

	Min-max Amount (g)	Time (min)	Temperature (°C)	Shake	Extra information
Potatoes & fries					
Thin frozen fries	300-700	9-16	200	shake	
Thick frozen fries	300-700	11-20	200	shake	
Home-made fries (8x8mm)	300-800	16-10	200	shake	Add 1/2 tbsp of oil
Home-made potato wedges	300-800	18-22	180	shake	Add 1/2 tbsp of oil
Home-made potato cubes	300-750	12-18	180	shake	Add 1/2 tbsp of oil
Rosti	250	15-18	180	shake	
Potato gratin	500	15-18	200	shake	
Meat & Poultry					
Steak	100-500	10-15	200		
Pork chops	100-500	20-30	175		
Hamburger	100-500	7-14	180		
Sausage roll	100-500	13-15	200		
Drumsticks	100-500	18-22	180		
Chicken breast	100-500	10-15	180		
Snacks					
Spring rolls	100-400	8-10	200	shake	Use oven-ready
Frozen chicken nuggets	100-500	6-10	200	shake	Use oven-ready
Frozen fish fingers	100-400	6-10	200		Use oven-ready
Frozen bread crumbed cheese snacks	100-400	8-10	180		Use oven-ready
Stuffed vegetables	100-400	10	160		
Baking					Use baking tin
Cake	300	20-25	160		Use baking tin/oven dish
Quiche	400	20-22	180		Use baking tin
Muffins	300	15-18	200		Use baking tin/oven dish
Sweet snacks	400	20	160		

living & co.

AFTER SALES SUPPORT

living & co.

TROUBLE SHOOTING

Problem	Possible cause	Solution
The AIR FRYER does not work.	The appliance is not plugged in.	Put the mains plug in an earthed wall socket.
	You have not set the Timer.	Turn the timer knob to the required cooking time to switch on the appliance
The food fried with the AIR FRYER are not done.	The quantity of food in the basket is too much.	Put smaller batches of food in the basket. Smaller batches are fried move evenly.
	The set temperature is too low.	Turn the temperature control knob to the required. Temperature setting - refer to the cooking guide for reference.
The food is fried unevenly in the AIR FRYER.	Certain food types need to be shaken halfway through the cooking time.	Food that lie on top of or across each other (e.g. fries) need to be shaken halfway through the cooking time.
Fried snacks are not crispy when they come out of the AIR FRYER.	Incorrect food type used.	Refer food manufactures cooking instructions.
I cannot slide the pan / basket into the appliance.	Basket over-loaded.	Do not fill the basket beyond the MAX indication.
	The basket is not placed in the pan correctly.	Push the basket down into the pan until you hear a click.
White smoke Comes out from the Appliance.	food with high oil content has been used. Oil has been added to the food.	Do not use food groups with high oil content or add extra oil that is not required. An air fryer uses technology where low or no oil is required.

living & co.

AFTER SALES SUPPORT

living & co.

TROUBLE SHOOTING

Problem	Possible cause	Solution
White smoke comes out from the Appliance.	The pan still contains grease residues from previous use.	White smoke is caused by grease heating up in the pan. Make sure you clean the pan correctly after each use.
Error message "E1" displayed	Internal connection failure of the NTC (temperature sensor) or thermal fuse	Contact after sales support.
Error message "E2" displayed	Internal short circuit failure of the NTC (temperature sensor)	Contact after sales support.

living & co.

AFTER SALES SUPPORT