

19-01-24

145.00 mm

LIVING & CO[®]

**2 SLICE SANDWICH MAKER
750W**



INSTRUCTION MANUAL

MODEL: SLS1022

AFTER SALES SUPPORT
  0800 422 274

--	--



Read the manual

It will help you get the best out of your product.
Still have questions?
Call After Sales Support

0800 422 274

LIVING & CO[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase

8 LIVING & CO[®]

AFTER SALES SUPPORT

  0800 422 274

1 LIVING & CO[®]

AFTER SALES SUPPORT

  0800 422 274

CONTENTS

	Page
IMPORTANT SAFEGUARDS	3
PARTS DESCRIPTION	4
DURING FIRST USE	5
HOW TO USE	5
HINTS FOR BEST RESULTS	6
CLEANING AND CARE	6
STORAGE	6
ENVIRONMENTAL PROTECTION	7

ENVIRONMENTAL PROTECTION

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

HINTS FOR BEST RESULTS

1. Always preheat before use.
2. For soft or liquid sandwich fillings use medium sliced bread, white or brown. If small amounts of filling are used, then use toasting bread.
3. Suggested garnishes for sandwiches include, lettuce, parsley, mint, cress, stuffed olive halves, onion, tomato etc.
4. A teaspoon of sugar sprinkled on the outside makes toasted sandwiches crisper (especially with fruit fillings).

CLEANING AND CARE

- After use and before cleaning, remove the plug, wait for sandwich toaster to cool.
- Wipe the inside and the edges of the plates with absorbent kitchen paper toweling or a soft cloth.
- Should any filling be difficult to remove, pour a little cooking oil onto the plates and wipe off after 5 mins when the filling is softened.
- Wipe the outside with only a slightly moistened cloth ensuring that no moisture, oil or grease enter the cooling slots.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.
- After cleaning, close the plates and use the "handle lock" to secure shut.
- Never attempt to place the appliance under running water.
- Never immerse the appliance in liquid.
- Do not place in a dishwasher.

STORAGE


- Always unplug your sandwich toaster before storage.
- Always make sure your sandwich toaster is cool and dry before storage.
- Never wrap the power cord around the appliance.
- Store the appliance in a cool dry place out of reach from children. It can be placed vertically to minimise the storage space.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against risk of electrical shock, do not immerse cord, plugs or cooking unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. The appliance is not intended for use by young children or infirm persons without supervision.
6. Young children should be supervised to ensure that they do not play with the appliance.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliances to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
9. The use of accessory attachments, not recommended or sold by the appliance manufacturer, may cause hazards.
10. Do not use outdoors.
11. Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot substances.
14. To disconnect, remove plug from wall outlet.
15. Do not use appliance other than for its intended use.
16. If the external flexible cable or cord of this appliance is damaged, it shall be exclusively replaced by the manufacture or service agent or a similar qualified person in order to avoid a hazard.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
18. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
19. Not intended for unattended use.
20. Do not clean surfaces with cleansers, steel wool pads or other abrasive material.
21. This appliance is intended to be used in household and similar applications such as
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
22. We recommend regular inspection of the supply cord, if damage is noted the product should not be used until the unit has been checked by an authorised repairer.

PARTS DESCRIPTION

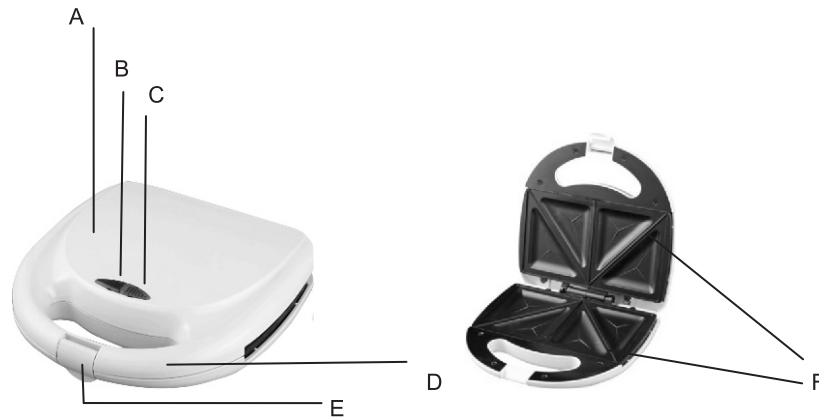

- A. Top Cover
- B. "Power" indicator light (red)
- C. "Ready" indicator light (green)
- D. Handle
- E. Handle Lock
- F. Heated Plates

Specifications

Model	SLS1022
Power Consumption	750W
Rated Voltage	220-240VAC 50/60Hz

DURING FIRST USE

NOTE 1: For the first use, wipe the surface of the plates with a damp cloth and dry with a cloth, paper towel etc. Then smear the plates with butter, margarine or cooking fat.

NOTE 2: When using the sandwich toaster for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the sandwich toaster.

HOW TO USE

- Place the appliance on a stable / level bench away from walls and other objects sensitive to heat.
- Fit the supply plug into the wall socket and switch on, the "Power" indicator light (red coloured) will come on.
- Close the sandwich maker and prepare sandwich while toaster is heating.
- When the sandwich maker has pre-heated and is ready for use (after about 2 minutes), the "Ready" indicator light (green coloured) will come on.
- Fully open the sandwich maker. Place a slice of bread in the bottom half with the buttered side against the plate.
- Fill the sandwich, pressing the bottom half into the heated plate.
- Place the top slice of bread with the buttered side up and carefully close the two plates together. Do not force shut. Steam will be ejected from between the plates while doing this and care must be taken to ensure that fingers do not come into contact with steam.
- During toasting the "Ready" indicator light (green) will cycle on and off while the thermostat regulates the heated plates at the right temperature.
- Your sandwich will be toasted in approximately 2-3 mins. Toasting times will however vary depending on personal preference / quantity of fillings and type of bread used. Open the plates and remove sandwich using plastic or wooden spatula. Never use metal knife as this may damage the non-stick coating.
- Close the lid to preserve the heat until ready to toast the next sandwiches.
- Prepare further sandwiches if required while the one is cooking.
- After use, remove the plug from the wall socket and allow to cool before attempting to wipe clean or move.

NOTE 1: A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a long cord. An extension cord may be used with care. The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled by children or tripped over.

NOTE 2: If too much food is inserted into the appliance, the sandwich maker plates cannot be closed. Never attempt to close it with undue force as this may damage the handle.