

LIVING&CO®

Nose Hair Trimmer



INSTRUCTION MANUAL

Model: CL-NT08

LIVING&CO®

AFTER SALES SUPPORT
☎️ 0800 422274

Contents

SAFETY INSTRUCTIONS	1
ASSEMBLY & PART IDENTIFICATION	2
PART NAMES	2
OPERATION	3
CLEANING AND LONG-TERM STORAGE	3
FAULT FINDING	3
PRODUCT SPECIFICATIONS	3
ENVIRONMENTAL PROTECTION	4

LIVING&CO®

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ.0800 422 274

This Product is covered 1 year warranty when accompanied by proof of purchase.

ENVIRONMENTAL PROTECTION

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area. Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.



SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed to reduce the risk of electric shock, fire and injury to persons or property, including the following:

1. Keep the appliance out of the reach of children.
2. This trimmer is designed for cutting nose and ear hairs. Do not attempt to use it for any other purpose.
3. For hygiene reasons, do not share this product with other people.
4. If you have an injury or infection in the nose or ear area that requires treatment, please be careful when using the appliance or consult your doctor.
5. Never use the appliance if the cutting parts are damaged or broken.
6. If the appliance is not used for long periods of time, do not leave the battery inserted (danger of leakage).
7. Please make sure that the old batteries are disposed of at an officially assigned location.

2

ASSEMBLY & PART IDENTIFICATION



PART NAMES

1. Cap
2. Outer cutter
3. Cutting head frame
4. Inner cutter
5. Switch
6. Battery cover

3

OPERATION

1. Remove the cap and slide the on/off switch to the on position.
2. Carefully guide the cutting head to the hairs to be trimmed so that they press into the cutter. Please avoid inserting the trimmer more than (5mm) into nose or ear.

Inserting the battery

This appliance operates with one AA 1.5V battery.

1. Make sure the appliance is turned off.
2. Twist the battery cover and Remove -
3. Insert the battery with (+ve) pole first (so -ve pole is closest to the battery cover as per marking) and replace the battery cover.

CLEANING AND LONG-TERM STORAGE

1. Remove the cutting head frame by turning counter-clockwise.
2. Clean the cutting head frame, the outer cutter and the inner cutter under running water.
3. After cleaning, leave the cutting parts to dry before reassembling.
4. Apply a drop of light machine oil below the inner cutter twice a year or more often if you clean the appliance with water.

FAULT FINDING

Problem	Cause	Solution
The trimmer does not work	The battery has run flat	Please replace the battery

PRODUCT SPECIFICATIONS

Model No	CL-NT08
Rated power	D.C 1.5V

This product is intended for household use only.