

145X210MM 2019-7-10 CCZ



LIVING & CO®

Warranty
We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty. Now you too can relax knowing that you are covered. Customer Helpline NZ: 0800 422 274
This Product is covered by 1 year warranty when accompanied by proof of purchase

AFTER SALES SUPPORT
☎ 0800 422 274

LIVING & CO 8

LIVING & CO®

POPCORN MAKER 1200W



INSTRUCTION MANUAL MODEL: LPM1W

1 LIVING & CO

AFTER SALES SUPPORT
☎ 0800 422 274

CONTENTS

	Page
IMPORTANT SAFEGUARDS	3-4
PART DESCRIPTION	5
OPERATING INSTRUCTIONS	6
CLEANING AND CARE	7
STORGE	7

AFTER SALES SUPPORT
☎ 0800 422 274

LIVING & CO 2

OPERATING INSTRUCTIONS (CONT.)

- If more Popcorn is required, remove any Popcorn remaining in the Aluminum Heat Chamber. Take care when handling the Top Cover or Measuring Cup as these parts get very hot when the Popcorn Maker is functioning.

NOTE : 1 measuring cup of corns makes approximately 4 cups of popcorn. After use, wait for approx. 10 to 15 minutes before using the Popcorn Maker again.

WARNING!

- Popcorn and kernels may become hot during use.
- Never put the butter into the Aluminum Heat Chamber.

CLEANING AND CARE

- Before cleaning, remove the supply plug from the mains electrical supply.
- Make sure the Popcorn Maker has cooled down completely before cleaning.
- Clean the plastic parts of the Popcorn maker with a damp cloth. Never use abrasive products as they could damage the Popcorn maker.
- The Top Cover and the Measuring Cup can be cleaned in warm soapy water.
- Never immerse the body of the appliance in liquid!

STORAGE

When the Popcorn Maker is not in use, disconnect from the electrical supply and store in a safe, dry place, out of reach of children.

7 LIVING & CO

AFTER SALES SUPPORT
☎ 0800 422 274

OPERATING INSTRUCTIONS

- Place the Popcorn Maker on a level surface.
- Before first use, it is recommended to wipe the external surfaces of the Popcorn Maker and the accessories with a damp cloth.
- Ensure the main on/off switch is in the off position, then connect the supply plug to the mains supply socket.
- Measure corn kernels using the Measuring Cup provided. One full measure per session is enough. More than one full measure could overflow the Popcorn Maker and affect the correct functioning of the Popcorn Maker.
- Preheating of the appliance is not necessary.
- Do not add any other ingredients such as: oil, shortening, butter, margarine, salt or sugar, as damage will occur.
- Pour the corn kernels into the Aluminum Heat Chamber
- Place the top cover back on the main body.
- Replace the Measuring Cup into position inside the Top Cover after every use.
- If buttered popcorn is desired, place 2-3 tablespoons of room temperature butter, cut into 4 equally sized parts, into the measuring cup.
Note: Do not use refrigerated butter as it will not melt completely during the short popping cycle.
- DO NOT remove the measuring / butter cup during the popping cycle. If unbuttered popcorn is desired, it is still necessary to place the measuring cup into the cover. Never run the popcorn popper without the cover and measuring cup in place
- Place a large bowl under the Spout so that the edge of the bowl is touching the body of the Popcorn Maker. It is important that the Popcorn ejects down the Spout into the bowl and not redirected, blocked or interfered with.
- Switch on the Popcorn Maker. After a few moments the continuous popping action will automatically feed Popcorn from the Aluminum Heat Chamber out through the Spout until all the kernels has popped. This process will last about 2-3 minutes.
- Switch off the Popcorn Maker and remove the mains plug from the mains supply when popping has stopped.
- If butter was melted in the measuring cup, pour over the top of the popped corn and sprinkle with salt or other popcorn seasonings as desired.

AFTER SALES SUPPORT
☎ 0800 422 274

LIVING & CO 6

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

Read all Instructions.

- The temperature of accessible surfaces may be high when the appliance is operating. To protect against fire, electric shock and injury, do not immerse cord, plug or the popcorn maker in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the cord from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- DO NOT operate the Popcorn Maker with a damaged cord or plug.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- To reduce the risk or injury, use only accessory attachments as recommended by the appliance manufacturer.
- Do not use the popcorn maker outdoors
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- For use only on 220-240VAC 50Hz rated voltage. Use an outlet with a good ground connection.
- Do not use appliance for other than intended use.
- Do not leave the popcorn maker unattended while in use.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug. Do not pull on the cord.

3 LIVING & CO

AFTER SALES SUPPORT
☎ 0800 422 274

IMPORTANT SAFEGUARDS (CONT.)


15. Extreme caution must be used when unloading popcorn. Always turn the unit over a counter-top so that residual hot oil or water running out will not cause burns.

- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Young children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- This popper uses hot air to pop the corn. DO NOT place anything other than popcorn kernels into the popping chamber.
- A small amount of smoke and /or odour may occur during initial use due to the release of manufacturing oils – this is normal.

AFTER SALES SUPPORT
☎ 0800 422 274

LIVING & CO 4

PART DESCRIPTION

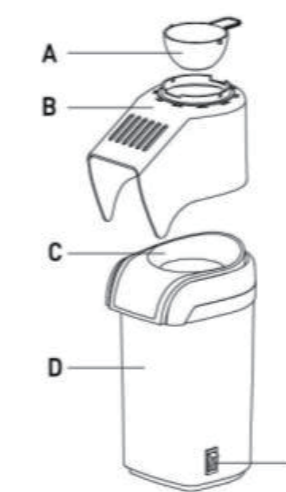

- A. Measuring cup / Butter cup
- B. Top cover
- C. Aluminum heat chamber
- D. Plastic body
- E. Switch

TECHNICAL SPECIFICATIONS

Model	LPM1W
Power Consumption	1200W
Rated Voltage	220-240VAC 50Hz

5 LIVING & CO

AFTER SALES SUPPORT
☎ 0800 422 274