


# LIVING & CO<sup>®</sup>

## WET & DRY HAIR STRAIGHTENER

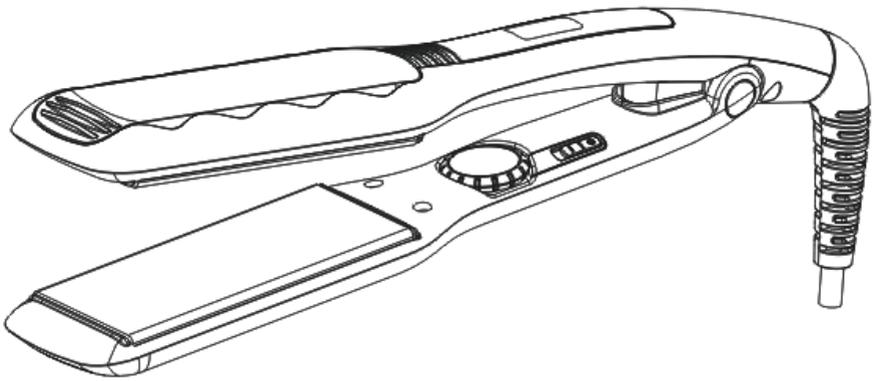

**INSTRUCTION MANUAL**

**CL-HS612F**

---

**AFTER SALES SUPPORT**

**☎ NZ 0800 422 274**

# CONTENTS

<b>SPECIFICATION</b>	<b>2</b>
<b>IMPORTANT SAFETY INSTRUCTIONS</b>	<b>2-4</b>
<b>PRODUCT FEATURES</b>	<b>4-5</b>
<b>HOW TO USE</b>	<b>5</b>
<b>USAGE TIPS</b>	<b>5-6</b>
<b>CLEANING AND MAINTENANCE</b>	<b>7</b>
<b>WARRANTY</b>	<b>8</b>

## **SPECIFICATIONS:**

110 - 240V ~ 50-60Hz, 65W

## **IMPORTANT SAFETY INSTRUCTIONS:**


**The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.**

1. Do not operate this appliance if the cable or plug becomes damaged. A qualified electrician must always carry out any repairs that are necessary.
2. If the appliance stops unexpectedly or appears to malfunction, switch off the power supply, unplug from the mains and stop using immediately. Seek professional advice to rectify the fault or make repairs.
3. Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
4. Ensure the appliance is switched OFF before connecting to the mains power supply.
5. Be aware that some surfaces may become hot. Do not touch and supervise others accordingly. The unit is VERY HOT when in use. Take care to avoid contact between the hot surface of the heating plate and bare skin, particularly around the ears, face and neck when in use.
6. Care should be taken not to touch this part of the appliance when it is switched on or just after it has been turned off. **ALLOW AT LEAST 30 MINUTES TO COOL DOWN BEFORE PUTTING AWAY**

7. Electrical appliances must always be stored in a secure place, out of reach of children.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Close supervision is necessary when the appliance is being used near children.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. To protect against electric shock, never allow the appliance, the mains cable or plug to come into contact with water or any other liquid.
12. Never reach for any appliance that has fallen into water. Switch off the power supply at the mains immediately and unplug. Do not re-use until the product has been inspected and approved by a qualified electrician.
13. Keep the appliance away from non-heat-resistance surfaces and never cover the appliance with anything (e.g. clothing or towels) when it is hot.
14. Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and mains supply connections.
15. Keep the appliance away from water. Do not use it near or over water contained in bath, washbasins, shower etc.
16. Never leave the appliance unattended when connected to the mains power supply. To disconnect, first ensure that all controls are in the OFF position, then remove the plug from the electricity supply.

17. Never wrap the mains cord around the appliance. Do not hang up by the power cord.
18. Regularly check the mains cord for wear and damage, particularly where it enters the product and the plug.
19. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if, they have been given supervision or instruction concerning use of the appliance and understand the hazards involved.
20. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

## PRODUCT FEATURES

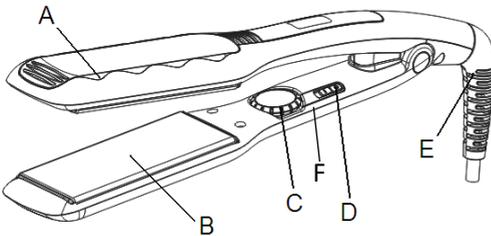

- A. Vent Channel**-releases excess moisture as steam
- B. Ceramic plates**
- C. Temperature control dial**
- D. ON/OFF switch**
- E. 360°swivel cord inlet**
- F. Indicator light**

### Unique steam vent and channel design:

Unique steam vent and channels allow this styler to be safely used on wet or dry hair. The channels extract moisture from damp hair and allow steam to escape through the vents, drying hair and sealing the cuticle at the same time. Creates salon straight, shiny hair in less time, with less damage.

**Ceramic plates:** Ceramic protect against damaging hot spots with high, even heat to lock in moisture and create long-lasting styles.

### **Automatic shutoff:**

This styler is equipped with automatic shut off. This safety feature turns the unit off after 60 minutes, in case you accidentally leave it on after styling your hair.

## **HOW TO USE**

### **Styler settings**

Take extra care when using a professional styler. To prevent hair damage, make sure to use the correct settings for your hair type.

### **Wet/Dry Setting**

This styler can be used on wet or dry hair. When the light is red, it is safe to use on dry hair. When the light is green, it is safe to use on damp/wet hair.

## **USAGE TIPS**

### **TO STRAIGHTEN HAIR**

1. Gently towel dry (pat) hair to remove excess water. Avoid rubbing hair with a towel, as this creates split ends and frizziness. Detangle hair with a wide-toothed comb.
2. Plug the styler into a electrical outlet. Push the on/off switch to turn the styler on. The indicator light will begin to glow.
3. Adjust the temperature using the dial.
4. Divide hair into manageable sections and clip the upper layers on top of your head and out of the way. Work with the underneath layers first.
5. Test the styler on a small section of hair, and then adjust the temperature up or down before styling the rest of your hair.

#### **NOTE:**

If you find that you need a higher temperature setting while styling your hair, simply adjust the dial to a higher number.

While styling your hair, if you find that you need a lower temperature, adjust the dial to a lower heating setting.

6. Take a small section of hair and comb through it with a fine-toothed comb. **Pull hair down and away from your scalp**, hold it taut.
7. **Hold the straightener with the steam vents facing away from your scalp.**

Starting at the roots, clamp hair firmly between the plates and run the styler down the entire hair strand, from root to tip, in one smooth stroke. Do not hold it in one area for a long period of time or damage to hair may occur.

8. To speed up drying at the roots, you may wish to run the styler over the first few inches of hair nearest the root several times. Repeatedly run the unit smoothly down the entire stand until hair is fully dried.  
**(Note: The unit may make a steaming/hissing noise when used on damp hair. This is okay! The unique design of this styler will channel the moisture away from hair and out the steam vents).**
9. Repeat with all sections of your hair. Working with the underneath layers first, then the top and side, until you achieve the hair style you desire.
10. When you are finished the styling, press the on/off button to turn the unit off, unplug it, and allow it to cool before storing.

## **TO ADD CURLS OR FLIPS**

Add a soft curl or flip to ends of hair by twisting iron slightly-under to curl, lift up to flip.

## **CLEANING AND MAINTENANCE:**

1. The appliance must be unplugged before cleaning.
2. Let the appliance cool down before touching or cleaning.
3. Use the damp cloth to clean the plates and outer housing. Ensure the cloth is rinsed so that it is not dripping water.
4. Do not use any harsh detergents, abrasives, solvents or cleaners. Never immerse in water to clean.
5. Dry thoroughly before use.
6. Do not attempt to replace the mains supply lead into the appliance – always use an authorized representative or qualified technician.

# LIVING & CO<sup>®</sup>



## Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 1 year warranty when

Accompanied by proof of purchase.

IM Version 1.0 – October, 2019