

LIVING & CO[®]

DIAMOND TOASTER 2 SLICE



INSTRUCTION MANUAL TA1410-SA

AFTER SALES SUPPORT

 **(NZ) 0800 422 274**

Contents

IMPORTANT SAFETY INSTRUCTIONS	3-4
PRODUCT OVERVIEW	4
OPERATION	5
CLEANING AND MAINTENANCE	6

IMPORTANT SAFETY INSTRUCTIONS


When using electrical appliance. Basic safety precautions should always be followed including the following:

- Read all instructions contained in this manual and save this document for future reference.
- Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
- Do not directly touch hot surfaces, take care near the bread apertures. Use handles or knobs only.
- To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug unit from electrical supply socket outlet when not in use and before cleaning.
- Allow the unit to cool completely before cleaning or storing.
- Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
- Do not let the cord hang over edge of the table or counter, or come into contact with hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for other than its intended use.
- Oversized food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
- Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials, and they must be watched.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Use the appliance on a level and stable work surface.
- Don't attempt to dislodge food when the toaster is in operation
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Be sure to take the bread out carefully after toasting so as to avoid injuries
- This appliance is of Class I, earthed construction, please ensure the wall socket outlet in your house is reliably earthed.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

IMPORTANT SAFETY INSTRUCTIONS (continued)

- Do not use the appliance outdoors.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.

PRODUCT OVERVIEW

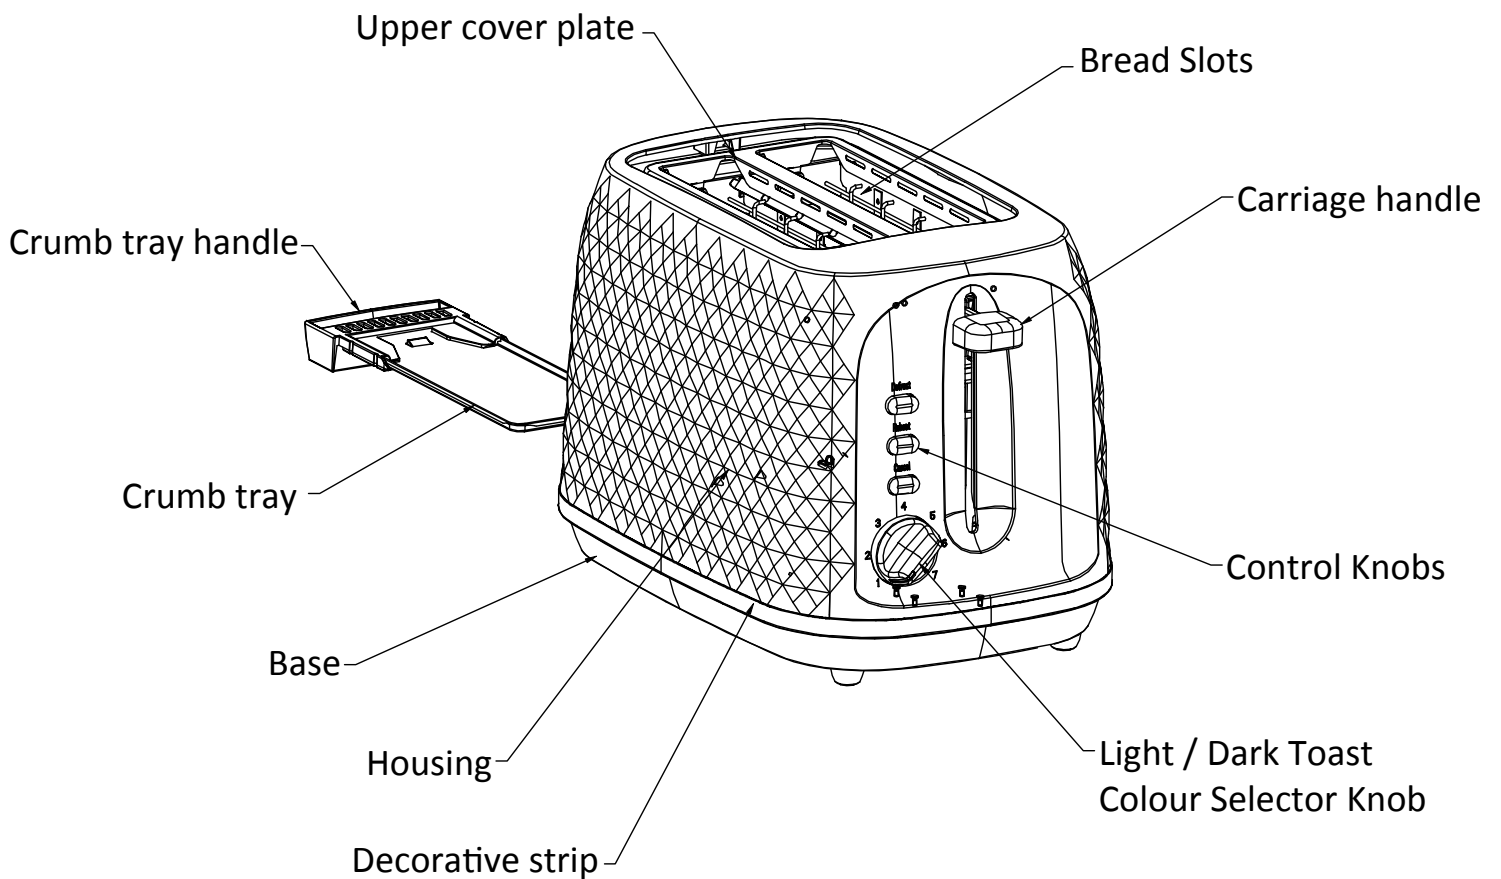

FOR FIRST USE

During manufacturing, traces of oil or lubricant residues can make contact with the heating element, this can result in emission of a slight odour during first use. This is normal and will not occur after several uses, for the first use it is suggested to operate according to the below steps, except without bread. Then allow the toaster cool down before proceeding to toast the first slice.

OPERATION

- Insert bread slices into the bread slots – 1 slice per slot maximum.

Note: Make sure the crumb tray is completely positioned in place before using.

- Plug the power cord / supply plug into the electrical socket outlet and switch the socket on.
- Set the toasting time to your desired setting. There is 7-position level, the lowest “1” is for white (minimal browning) and the highest “7” is for dark (highest browning). The bread slices can generally be toasted to a golden color when in the middle position however this will vary depending on the type of bread used. We suggest adjusting for a low / medium setting first.

Note: 1). Toasting colour for one slice is darker than that for two slices of bread at the same level.

2). If toasted continuously, toasting colour for subsequent bread is darker than that for the initial slices at the same level.

- Press the carriage handle down vertically until it latches into place, the toaster will begin at once. Once the bread has been toasted to the preset color, the carriage handle will automatically spring up.

Note: If the bread carriage lever is not latching this indicates that the toaster is not connected to the socket outlet or the socket outlet is switched off.

- You can lift the carriage handle to observe the toasting color any time, during the toasting process. If the toasting is adequate, you can press the **CANCEL** button to cancel the operation at any time.

Note: Lifting the carriage handle will not interrupt the toasting process.

- If the bread has been taken out from freezer, Set color selector knob to your desired setting, then press the carriage handle down vertically until it is latched in place, then press the **DEFROST** button (the indicator of the button will be illuminated), in this mode it will be toasted to your desired colour as normal despite the bread being initially frozen.
- If you want to reheat the cold toasted bread, press the **REHEAT** button (the indicator light will be illuminated). In this mode toasting time is fixed, once complete, the carriage handle will automatically spring up and end up the reheating process.

CAUTION

- Remove all protective wrappings prior to toasting.
- If toaster starts to smoke, Press the **CANCEL** button to stop toasting immediately.
- Avoid toasting food with extremely runny ingredients such as butter.
- Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first, Be sure not to damage the internal mechanism or heating elements when removing bread.
- The bread slot is only suitable for toasting regular bread slices. Irregular shapes cannot be toasted.
- Most types of breads and pastries can be toasted; such as bagels, tea cakes, thick sliced breads, English muffins, waffles, etc. Slices should **not**, however, be so thick as to cause burning or jamming in the bread slots. If oversized do not attempt to toast.
- In order to achieve uniform colour we recommend that you should wait a minimum of 30 seconds between each toasting so that colour control can reset automatically.

CLEANING AND MAINTENANCE

- Before cleaning, unplug from the appliance and let the appliance cool down completely.
- Wipe the external surfaces with a soft dry cloth, never use metal polish, flammable or abrasive cleaners.
- Empty the crumb tray frequently – this is removed by gently pulling on the crumb tray handle. Crumbs will accumulate in the crumb tray and could catch fire if not emptied periodically. When the toaster has cooled down completely, tap the sides of the toaster lightly to dislodge any crumbs caught in the toaster chamber, remove the crumb tray and empty it. Wipe the tray clean with a damp cloth or place it in the top rack of your dishwasher for cleaning. Tap sides again to ensure proper disposal. Return crumb tray back into the toaster before using again.
- When not used or in storage, the power cord may be wound under the bottom of toaster.



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 2 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 2 year warranty when accompanied by proof of purchase.

IM Version 1.0 – November, 2019

