

# LIVING & CO<sup>®</sup>

## STAINLESS STEEL KETTLE 1L



**INSTRUCTION MANUAL**

**KE01403-GS**

---

**AFTER SALES SUPPORT**

**☎ (NZ) 0800 422 274**

## Contents

<b>IMPORTANT SAFETY INSTRUCTIONS</b>	<b>3</b>
<b>PRODUCT OVERVIEW</b>	<b>4</b>
<b>OPERATION</b>	<b>4-5</b>
<b>CLEANING AND MAINTENANCE</b>	<b>6</b>
<b>REMOVAL OF MINERAL DEPOSITS</b>	<b>6</b>

---


**AFTER SALES SUPPORT**

  **0800 422 274**

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using.
- Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not operate the appliance without anything in it to avoid damaging the heat elements.
- Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
- To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
- While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Take extra care during refilling when the kettle is hot.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not touch the hot surface. Use the handle or the button.
- The separate base must not be used for any other than intended use, The kettle can only use with the stand provided.
- Extreme caution must be used when moving an appliance containing hot water.
- The appliance is not a toy. Do not let the children play it.
- The kettle is for household use only. Do not use outdoors.
- The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
- Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
- To disconnect, switch the boil switch to “off,” then remove plug from wall outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not use the appliance for other than intended use.
- If the kettle is overfilled, boiling water may spill out.
- Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
- Avoid liquid spillage on the base connector.
- Be care of potential injury from misuse.
- The heating element surface is subject to residual heat after use.
- CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.
- CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- Save these instructions.

## PRODUCT OVERVIEW

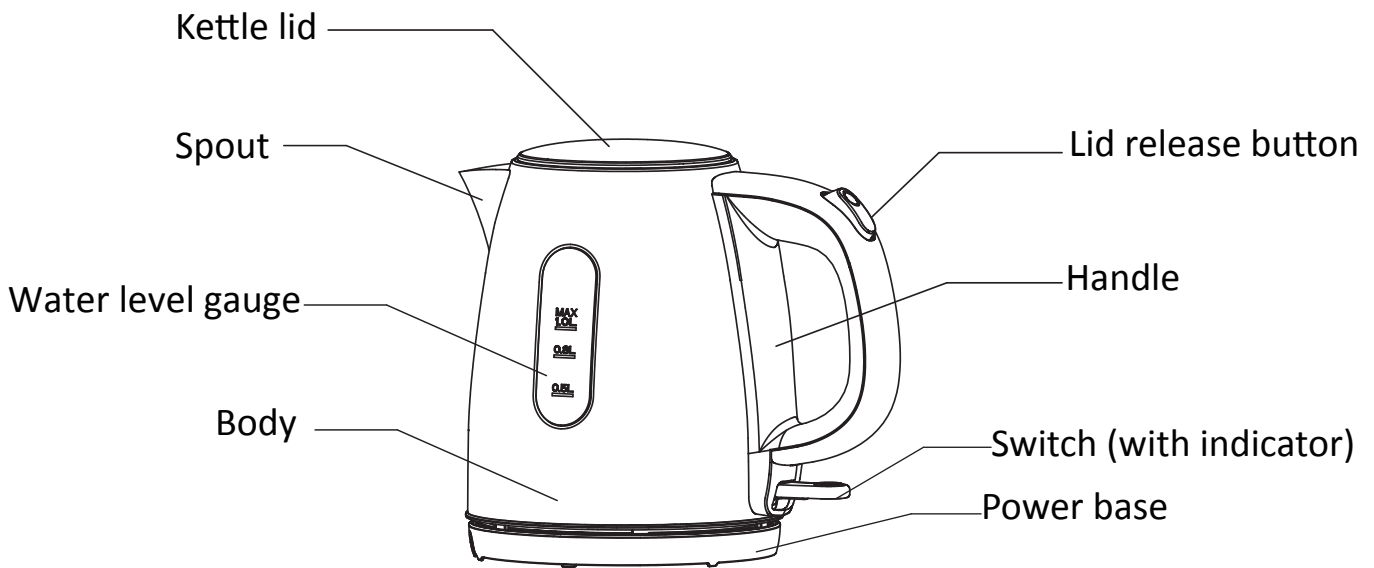

## BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water twice. Wipe the surface with a damp cloth.

**NOTE:** The max capacity of kettle is 1.0L, never full beyond the maximum mark.

## OPERATION

- Place the kettle on a flat, level and stable surface.
- To fill the kettle, remove it from the power base and open the lid by pressing down lid release button, then fill the kettle with the desired amount of water and close the lid. The water level must be within the Min and the Max level. Too little water will cause the kettle switching off before the water has boiled.

**NOTE:** Do not fill with water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

---

**AFTER SALES SUPPORT**

 **(NZ) 0800 422 274**

## OPERATION (Continued)

- Position the kettle on the power base.
- Connect the plug into a power outlet. Press down the boil switch and the indicator will illuminate, the kettle will then start to boil the water. The kettle will switch off automatically once the water has boiled. If immediate re-boil is required, it may take 30 seconds before the switch can be reset. You may switch the kettle off by lifting the boil switch up or directly lifting the kettle from the power base at any moment to stop boiling process.

### NOTES:

- Ensure that switch is free of obstructions and the lid is firmly closed, the kettle will not turn off if the switch is constrained or if the lid is opening.
- Lift the kettle from the power base and then pour the water.
- Take extreme care when pouring the water from your kettle as boiling water can scald
- Do not open the lid while the water in the kettle is in operation or still hot.
- The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.
- Always disconnect the power supply when not use.

## BOIL-DRY PROTECTION

Should you accidentally let the kettle operate without water, the boil-dry protection feature will automatically switch off the supply power. If this occurs, allow the kettle to cool prior to filling with cold water before re-boiling.

## **CLEANING AND MAINTENANCE**

Always disconnect the appliance from the power outlet and cool it down completely before cleaning.

- Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
- Wipe the external surfaces of the body with a damp warm cloth with soapy water. Never use abrasive or chemical cleaners or scouring pads.
- When not in use or in storage, the power cord may be wound under the bottom of the power base.

## **REMOVAL OF MINERAL DEPOSITS**

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle which can result in reduced efficiency. You can use a commercially available descaler and follow the instructions on the descaler packaging. Alternatively, you may follow below instructions using white vinegar.

- Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
- Then discard the mixture in the kettle, fill the kettle with clean water to the maximum position, boil and then discard the water. Repeat several times until the odour of the vinegar has been removed. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

---

**AFTER SALES SUPPORT**

  0800 422 274



# LIVING & CO<sup>®</sup>

## Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 2 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 2 year warranty when Accompanied by proof of purchase.

IM Version 1.0 – November, 2019

---

**AFTER SALES SUPPORT**

  **0800 422 274**

---

**AFTER SALES SUPPORT**

  0800 422 274