


LIVING & CO[®]

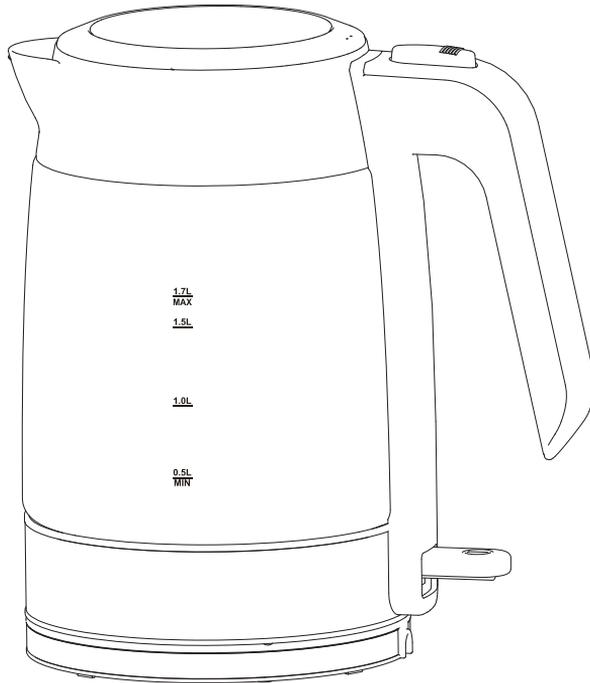

GLASS KETTLE 1.7LSS. USER MANUAL MK-17G01

Please read the manual carefully before operating your product.
Retain it for future reference.

AFTER SALES SUPPORT

  0800 422 274

CONTENT

| | |
|-------------------------------------|---|
| IMPORTANT SAFETY INSTRUCTIONS | 1 |
| PRODUCT OVERVIEW | 3 |
| SPECIFICATIONS..... | 4 |
| HOW TO USE | 4 |
| CLEANING | 5 |
| ENVIRONMENTAL PROTECTION | 6 |

IMPORTANT SAFETY INSTRUCTIONS

- 1、 Read carefully and save all the instructions.
- 2、 We recommend the use of a power outlet with a rated current of 10A which is appropriately protected by an RCD.To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- 3 Do not fill kettle when positioned on base, dry any excess or spilt water from the bottom of the body before placing it onto power base.
- 4、 Never leave the appliance unattended when in use.
- 5 Close supervision is necessary when your appliance is being used near children or infirm persons.
- 6 Electric kettle must be operated on a flat surface. Do not place this appliance on or near a hot gas or electric burner or on the top of other electric appliances
- 7、 Do not touch hot surfaces, use the handle. Be aware of steam being emitted from spout or lid especially during refilling. Do not remove lid during boiling cycle.
- 8、 Do not use the kettle to heat anything other than water. Do not fill above the "max" indication. Do not operate kettle if water is below minimum.
- 9、 Do not let the power cord hang over the edge of the table or touch hot surfaces. Always store excess portion of the power cord in the compartment of the base unit.
- 10、 Do not immerse any part of the appliance in water or other liquid. Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person. Always use your appliance from a power outlet of the voltage(A.C. only)marked on the appliance.
- 11、 If the power cord is damaged, it must be changed by a qualified and registered service technician.
- 12、 Always unplug from the socket outlet when under the following conditions:
No water in kettle, Not in use, Before cleaning or moving kettle.

NOTE: If the kettle is overfilled,boiling water may be ejected.
The kettle is only to be used with the stand provided.

IMPORTANT SAFETY INSTRUCTIONS


- 13、 Never attempt repair of the appliance yourself only use a qualified and registered service technician.

WARNING: To reduce the risk of fire or electric shock , do not remove the bottom cover of the body or the power base by yourself.

- 14、 Do not use a base unit other than the one supplied. The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock or personal injury.
- 15 Do not insert any object into slots or holes of the kettle.
- 16、 This appliance is for household use only. Do not use outdoors.
- 17、 This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- 18、 Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and
- 19、 its cord out of reach of children aged less than 8 years.
- 20、 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 21、 Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard Only the appropriate connector must be used.
- 22、 This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

PRODUCT OVERVIEW

1. Lid 2. Spout 3. Switch 4. Handle
5. Water gauge 6. Lid knob 7. Power base

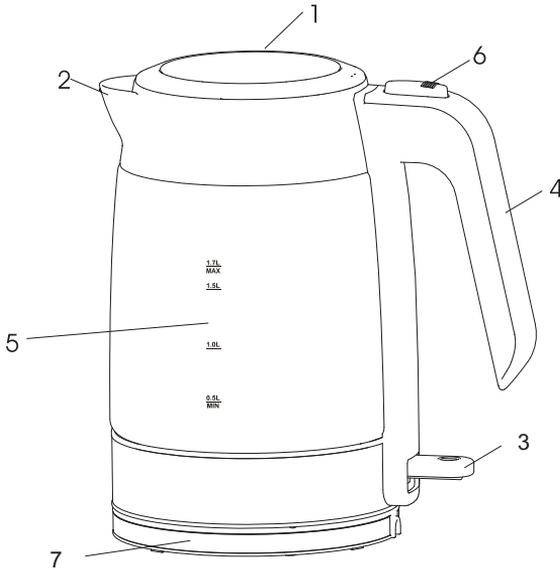

SPECIFICATIONS

| Model No. | Rated voltage | Rated power | Capacity | Dimensions | Weight |
|-----------|----------------------|-------------|----------|---------------|--------|
| MK-17G01 | 220-240V~ 50/60Hz | 1850-2200W | 1.7L | 231*150*250mm | 1.2 kg |

HOW TO USE

When using for the first time, or if having not used for more than 2 weeks, it is recommended that you fill to the maximum level with fresh tap water, boil and empty (discard the kettle contents) at least 2 times to clear any impurities.

1. Press the lid (release) knob, and the lid will open automatically.
2. Using the kettle handle, remove from the base and locate the open spout / top of kettle under the water tap. Fill the kettle with the desired amount of water (no less than the minimum and no more than the maximum). Push the lid back down until it clicks into place on the top of the kettle.
3. Connect the plug into a power outlet (220~240V,AC), switch the kettle on by pressing the switch. The light will illuminate to indicate the kettle is heating.
4. The kettle will automatically switch off once the water has boiled and the neon light goes off.
5. Lift the kettle from the base, and you can pour out the water into container.

CLEANING

- ▶ To prolong the kettle's life, please clean the mineral deposits in the kettle regularly.
- ▶ Always unplug from the plug socket and allow to cool down before cleaning.
- ▶ Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the kettle, as these will scratch the surface and fade the outside color.

Cleaning methods:

- 1、 Fill the kettle with 0.5L white vinegar and the remainder with water and allow to stand for over 1 hours;
- 2、 Empty the solution from the kettle. Wipe off the deposits remained with damp cloth;
- 3、 Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will be ready to use;
- 4、 If necessary, repeat the operations above for several times;
- 5、 The surface of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth;
- 6、 Grasp the top of the scale filter and pull upwards to remove. Wash with clean water and dry thoroughly before replacing in the kettle.

ENVIRONMENTAL PROTECTION

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.



LIVING & CO[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 2 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 2 year warranty when accompanied by proof of purchase.