




Kensington

# **KENSINGTON DIGITAL KETTLE**

## **1.7L SS**

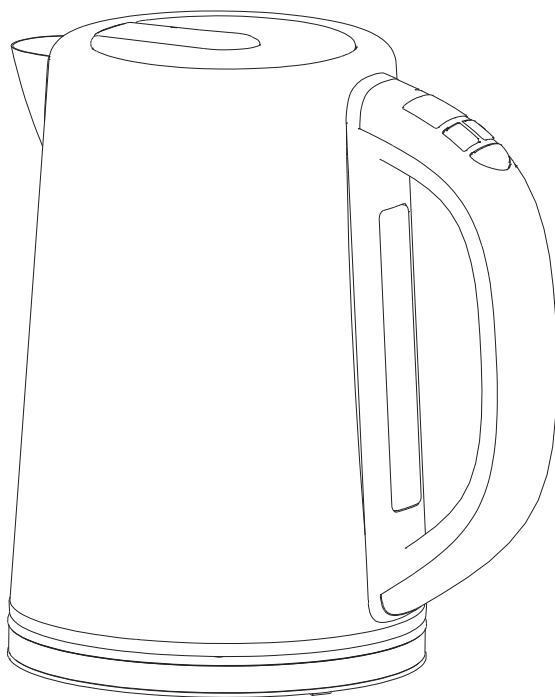

# **INSTRUCTION MANUAL**

## **MODEL MK-17S25B-E5**

# CONTENT

	Page
Important Safety Instructions	2-3
Product Overview	4
Specifications	5
How to use	5
Cleaning	6
Disposal	6
Warranty	7

# IMPORTANT SAFETY INSTRUCTIONS

- 1 Read carefully and save all the instructions.
- 2 We recommend the use of a power outlet with a rated current of 10A which is appropriately protected by an RCD. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- 3 Do not fill kettle when positioned on base, dry any excess or spilt water from the bottom of the body before placing it onto power base.
- 4 Never leave the appliance unattended when in use.
- 5 Close supervision is necessary when your appliance is being used near children or infirm persons.
- 6 Electric kettle must be operated on a flat surface. Do not place this appliance on or near a hot gas or electric burner or on the top of other electric appliances
- 7 Do not touch hot surfaces, use the handle. Be aware of steam being emitted from spout or lid especially during refilling. Do not remove lid during boiling cycle.
- 8 Do not use the kettle to heat anything other than water. Do not fill above the "max" indication. Do not operate kettle if water is below minimum mark.
- 9 Do not let the power cord hang over the edge of the table or touch hot surfaces. Always store excess portion of the power cord in the compartment
- 10 Do not immerse any part of the appliance in water or other liquid. Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person. Always use your appliance from a power outlet of the voltage(A.C. only)marked on the appliance.
- 11 If the power cord is damaged, it must be changed by a qualified and registered service technician.
- 12 Always unplug from the socket outlet when under the following conditions:  
No water in kettle, Not in use, Before cleaning or moving kettle.

**NOTE:** If the kettle is overfilled,boiling water may be ejected.  
The kettle is only to be used with the stand provided.


# IMPORTANT SAFETY INSTRUCTIONS

- 13 Never attempt repair of the appliance yourself only use a qualified and registered service technician.

**WARNING:** To reduce the risk of fire or electric shock , do not remove the bottom cover of the body or the power base by yourself.

- 14 Do not use a base unit other than the one supplied. The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock or personal injury.
- 15 Do not insert any object into slots or holes of the kettle.
- 16 This appliance is for household use only. Do not use outdoors.
- 17 This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- 18 Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- 19 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 20 Children should be supervised to ensure that they do not play with the appliance.
- 21 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Only the appropriate connector must be used.
- 22 This appliance is intended to be used in household and similar applications such as:
- staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

# PRODUCT OVERVIEW

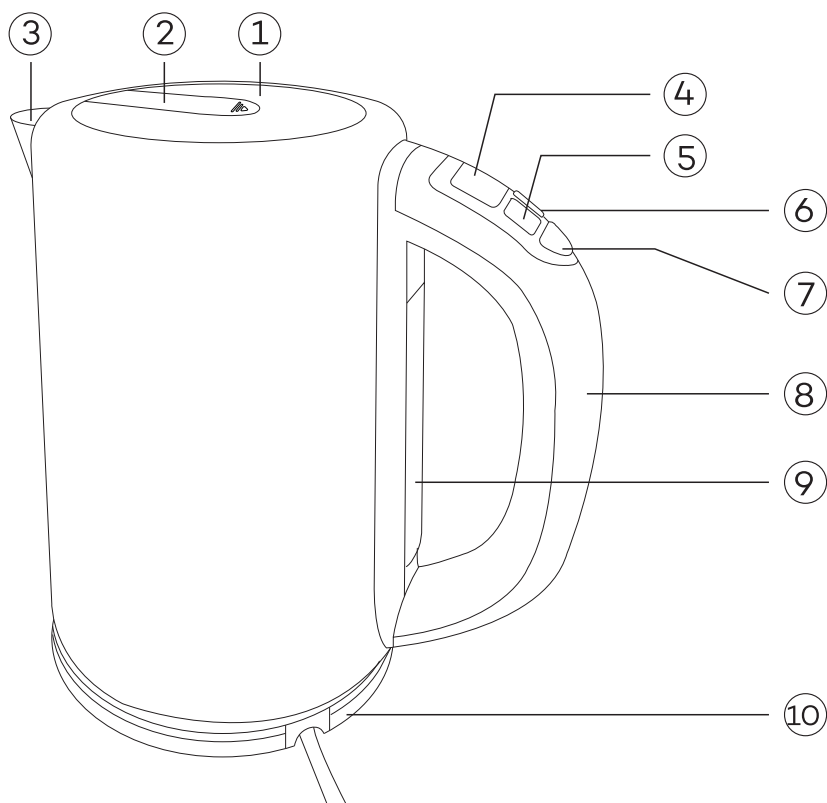

1. Lid      2. Lid Release Button      3. Spout      4. Display  
5. Temperature "-" Button      6. Temperature "+" Button  
7. Start / Stop    8. Handle    9. Water Level Window  
10. Power Base (cord storage provision - not visible)

## SPECIFICATIONS

Model No.	Rated voltage	Rated power	Capacity	Dimensions	Weight
MK-17S25B2-E5	220-240V ~50/60Hz	1850-2200W	1.7L	218*154*234mm	0.9 kg

## HOW TO USE

When using for the first time, or if having not used for more than 2 weeks, it is recommended that you fill to the maximum level with fresh tap water, boil and empty (discard the kettle contents) at least 2 times to clear any impurities.

- 1 Press the lid (release) knob, and the lid will open automatically.
- 2 Using the kettle handle, remove from the base and locate the open spout / top of kettle under the water tap. Fill the kettle with the desired amount of water (no less than the minimum and no more than the maximum). Push the lid back down until it clicks into place on the top of the kettle.
- 3 Place the kettle onto the base, plug the supply plug into a socket outlet. The appliance will emit an audible beep sound, the LED display light will illuminate for approximately 2 seconds and will then go into the standby mode. The LCD display will show the current water temperature.
- 4 In stand by, press the start/stop button and the LCD display will show the previous selected temperature. To boil to 100°C, press the "+" button until it displays 100. The kettle will start heating and the LED display light (red on the start / stop button) will remain on. Once the water temperature reaches the preset temperature, 3 audible beeps will be heard and then the kettle will enter the 'keep warm' state. During 'keep warm' state, the kettle can only heat to a maximum of 90°C and will remain active for 2 hours, after which time the kettle will switch off.
- 5 At the end of the 'keep warm' state, the display will turn off and 3 audible beeps will be heard. When the start/ stop button is pressed again, the LED display light will illuminate and the LCD display will show the previous selected temperature. The kettle will start heating if it is below the selected temperature and will then enter the keep warm state.
- 6 During water heating / boiling stage, the start/stop button can be pressed to cease operation and revert to the standby mode.
- 7 During the 'keep warm' state, you can press the start/stop button once, the kettle will cease the heating and revert to the 'standby' mode.

NOTE: During 'standby' and 'operational' modes, pressing the "+" and "-" buttons, can vary the temperature between 50~100°C.

# CLEANING

- ▶ To prolong the kettle's life, please clean the mineral deposits in the kettle regularly.
- ▶ Always unplug from the plug socket and allow to cool down before cleaning.
- ▶ Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the kettle, as these will scratch the surface and fade the outside color.

## Cleaning methods

1. Fill the kettle with 0.5l of white vinegar and the remainder with water and allow to stand for at least 1 hour (recommend 8 hours).
2. Empty the solution from the kettle and wipe off the deposits remaining with a damp cloth.
3. Fill the kettle with clean water, bring to the boil and then discard the water. Repeat this process again and the kettle will be ready for use.
4. If necessary, repeat the process above for several cycles.
5. The external surface of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth.
6. Grasp the top of the scale filter (located in the spout entry) and pull upwards to remove. Wash with clean water and dry thoroughly before replacing in the kettle.



### DISPOSAL:

Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances.

By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.



### Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 3 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by a 3 year warranty when accompanied by proof of purchase.

IM Vesion 1.1 - November 2019