

LIVING & CO[®]

HAIR STRAIGHTENER



INSTRUCTION MANUAL CL-715

AFTER SALES SUPPORT

  0800 422 274

Contents


TECHNICAL DATA	2
PRODUCT OVERVIEW	2
BEFORE USING	3
SAFETY WARNINGS	3-5
OPERATION	6
CLEANING	7
STORAGE	7
FAULT FINDING	8
RESPONSIBLE DISPOSAL	9
WARRANTY	10

TECHNICAL DATA

Model: CL-715

Power: 220-240V ~ 50-60Hz, 35W

PRODUCT OVERVIEW

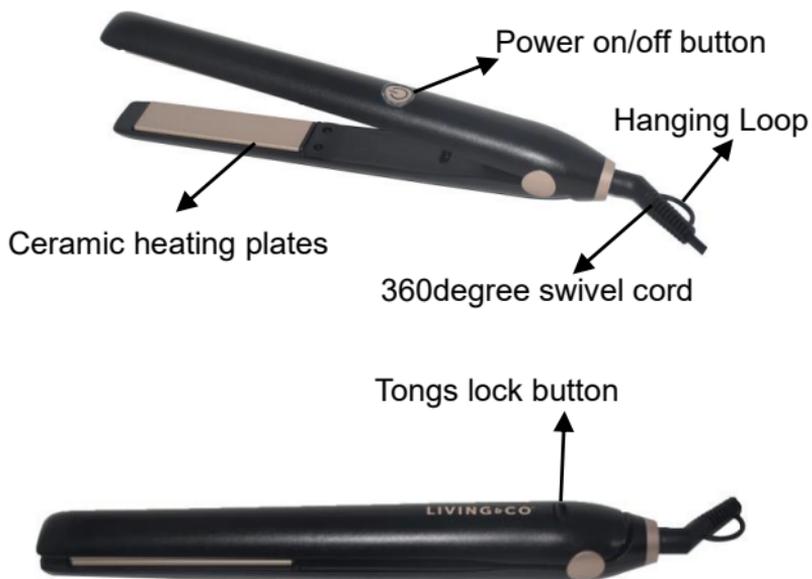

BEFORE USING

Please read through this booklet for safe and efficient use of the appliance. We strongly recommend you to read the “**SAFETY WARNINGS**” section and all detailed instructions even if you are familiar with a similar appliance.

Keep this instruction manual for future reference.

SAFETY WARNINGS

- **When the hair straightener is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the straightener is switched off;**
- **WARNING: Do not use this appliance near water, do not use this appliance with wet hands.**
- **Do not leave or store the hair straightener near a tub, sink or other place where it will be exposed to water and other liquids or high humidity.**
-  **DO NOT use this appliance near bathtubs, showers, basins or other vessels containing water.**
- **When in use, only place on a heat resistant surface.**
- **Always ensure the supply voltage to be used corresponds to the voltage stated on the unit.**

- Always switch the hair straightener off before putting it down, even if it is only just for a moment.
- As the hair straightener can reach high temperatures, keep out of reach from children during heat-up, operation and cool-down to avoid potential burns.
- Do not unplug by pulling on the cord. Always grasp the plug and unplug it from the socket outlet.
- Do not use the hair straightener near gas or other flammable materials (such as benzene, paint thinner, sprays, etc.)
- Avoid directly touching the hot parts of the hair straightener.
- Care should be taken to avoid contact of the heating plates with skin, the face and neck.
- When hot, do not place on surfaces that are not heat-resistant.
- For additional protection, we recommend you install a Residual Current Device (RCD) with a rated residual current not exceeding 30mA in the electrical circuit supplying the bathroom.
- Do not wind the mains supply cord around the hair straightener body.
- If the mains supply cord is damaged, you must have it replaced by an authorized service centre or similarly qualified person in order to avoid a hazard.

- **This hair straightener is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
- **Children should be supervised to ensure they do not play with the appliance.**
- **Only use the hair straightener on dry hair. Do not use the straightener on artificial hair.**
- **Do not use the hair straightener in conjunction with other accessories or attachments unless designed specifically for use with this product.**
- **To protect against risk of electric shock, never immerse the unit or let it come into contact with water or any other liquids.**
- **Do not use the unit with wet hands. If the appliance should become wet, damp or fall into water, remove plug from the mains socket immediately. Do not put your hands into the water**
- **We recommend avoiding use of this product in a bathroom to minimise the risk of contact with water.**

OPERATION

- If the tongs are in the closed / locked position, lightly press the tongs together and push the 'Tongs Lock' button. This will release the tongs and allow them to open apart.
- It is recommended that hair is washed prior to straightening and be approximately 80% dry.
- Connect the plug to an AS/NZS power supply socket and switch on.
- Switch the hair straightener on by pushing the "ON/OFF" button on, the hair straightener plates will heat up.
- Comb your hair and hold a section that is not wider than 5 cm for straightening.
- Place it between the hair straightener plates and press the handles firmly together.
- Slide the hair straightener down the length of the hair in a single motion (Not more than 5 seconds) from root to end, without stopping to prevent overheating.
- To create flicks, turn the straightener 180 degrees (half-circle) inwards or outwards, when it reaches the end of the hair. Hold the straightener in that position for 2 to 3 seconds, and then release it.
- Repeat above steps until you achieve the desired effect.
- Allow your hair to cool down. Do not comb or brush it before it has cooled down, as this would ruin the hairstyle you have just created.
- Switch off using the ON/OFF Button to turn off the appliance and remove mains plug from the supply.

CLEANING:

- Ensure the mains plug is disconnected from supply.
- Clean the hair straightener body with a damp (well-wrung) cloth and if required, a very small amount of dish washing liquid within the water used. Do not let water or any other liquid to enter the appliance.
- Remove any dust or hair from the surface of hinge area using a soft brush.
- Ensure all parts are wiped dry with a soft clean dry cloth.

STORAGE

- Ensure the appliance is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Close the tongs together and lock in position using the tong lock button.
- Store the appliance in a cool, dry place.

FAULT FINDING:

Problem	Possible Cause	Solution/Hint
The appliance does not operate.	This appliance is not switched on	Press on button for 2 -3 seconds to switch on the appliance.
	The plug is not fitted correctly into wall socket.	Fit the plug correctly correctly into wall socket.
	The wall socket is damaged.	Connect the appliance to a wall socket that works properly.
	The supply cord may be damaged.	The supply cord must be replaced by an authorized technical service technician in order to avoid hazard.
Smoke comes out of the hair or from the heating plates of the appliance during use.	You have styling products in your hair (for example mousse,spray or gel)	This is normal if you use products to style. Never put any product in your hair that is not suitable for use with high temperature appliances. Do not use gel or wax. Use only styling products specifically designed for this purpose.
The results are not as expected.	You have put too much hair on the plates during styling.	Make sure that the section of hair being straightened does not exceed 50 mm in width or 5 mm of thickness.

RESPONSIBLE DISPOSAL

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

LIVING & CO[®]



Warranty

We pride ourselves on producing a Range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 1 year warranty

When Accompanied by proof of purchase.

IM Version 1.0 – Jan, 2020