

LIVING & CO®

BREEZE HAIR DRYER 2200W



INSTRUCTION MANUAL

CL-HD5928

AFTER SALES SUPPORT

 **0800 422 274**

CONTENTS

TECHNICAL DATA	2
PRODUCT OVERVIEW	2
SAFETY WARNINGS	3
HOW TO USE	4
CLEANING	4 - 5
DISPOSAL	5
WARRANTY	6

TECHNICAL DATA:

Type: CL-HD5928

Power: 220-240V ~ 50/60Hz

Capacity: 1800-2200W

Motor: DC

PRODUCT OVERVIEW:



A - Concentrator

B - Cool switch

C - Heater switch

D - Speed switch

E - Cord guard with storage loop

F - Removable inlet grille

SAFETY WARNINGS:

- Do not switch on before checking that voltage on the specifications plates is the same as that in your home;
- Switch off when not in use, even if for a moment;
- If the supply cord is damaged, it must be replaced by the manufacturer of its service agent or a similarly qualified person in order to avoid a hazard.
- For additional protection, the installation of a residual current device with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- Never submerge or wet the dryer.
- **WARNING-** When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

-  : Not to be used in bath or shower.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- This appliance is intended to be used in household and indoor.
- Do not use the appliance with wet hands.
- Always ensure that the air inlet and output are not blocked during use.

HOW TO USE

- Make sure that your hands are completely dry before plugging in.
- Plug in and set switch to the required position.
- Aim outlet at your hair and move the dryer along the length of hair.
- Once your hair is dry set the switch (D) to the off '0' position and unplug the dryer.

Heater switch:

- Position ↘ low temperature
Position ↙ medium temperature gentle drying and shaping
Position ↗ high temperature for rapid drying

Speed switch:

- Position 0 off
Position 1 gentle stream of air
Position 2 strong stream of air

Cool switch:

* With this switch you can stop the heating and allow cool air flow

CLEANING

- **WARNING-** always unplug your appliance before cleaning.
- Your hair dryer requires very little attention. You can clean it together with its accessories, using a slightly damp cloth.
- The air inlet grille can be removed periodically as shown in the following image, use a damp cloth or vacuum to remove any dust deposits.
- Never clean your appliance with solvent based cleaners or abrasive cleaners.
- Never immerse your appliance or its accessories in water.
- Carefully dry all parts you have just cleaned.

CLEANING (CONTINUED)

AIR INLET GRILLE REMOVAL:



NOTE: Always ensure the grille is clean / dry and refitted before operating the appliance.

DISPOSAL



Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes . To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. Locate a suitable recycling facility within your area.

LIVING & CO[®]



Read the manual.

It will help you get the
best out of your product.

Still have questions?

Call After Sales Support

0800 422 274

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 1 year warranty when

Accompanied by proof of purchase.

IM Version 1.0 – December, 2019