

LIVING & CO[®]

FOIL SHAVER



INSTRUCTION MANUAL

Rs715

AFTER SALES SUPPORT

  0800 422 274

Contents

Product Overview	2
Safety Instructions	3
Charging	4
Shaving	5
Cleaning	6
Reference Figures	6
Warranty	7

Product Overview



① Protective cap

② ON/OFF switch

③ Led indicator

④ Foil shaver head

⑤ Pop-up trimmer

⑥ Cleaning brush

⑦ USB charging cable

⑧ Shaver connector

⑨ 5V USB connector

Safety Instructions:

- ◆ Please read this booklet carefully before using the shaver.
- ◆ Please don't wash the shaver by water, keep dry
- ◆ The structure of the foil is very thin, and tooled through precision, do not squeeze, crush, or apply sharp or hard objects that could result in damage to the foil. Subsequent use with a damaged foil shaver head could result in personal injury.
- ◆ Never attempt to use if the shaver head is damaged.
- ◆ Do not attempt to charge if there is any sign of damage to the charging cable.
- ◆ Only attempt to charge using the charging cable supplied.
- ◆ Never immerse in water.
- ◆ Retain this instruction manual for future reference.

Charging:

- ◆ The ON/OFF switch must be in the off position when charging.
- ◆ Charge the shaver within an ambient temperature between 5°C-35°C.
- ◆ Charge from a standard 5V dc USB socket outlet using the supply lead (USB Charging Cable) provided.
- ◆ In order to maximize product life span, do not leave connected to the power source continuously after completion of charging.
- ◆ Connect the supply lead to the charge socket of the shaver, then the other end to a USB outlet, the charge indicator light on the shaver body will then illuminate (fig.1,2).
- ◆ Normal charging will take approximately 8 hours, which will allow an operation time of up to 45 minutes with full charge (dependent on load).




Shaving

- ◆ Do not allow water or any other liquid into the shaver.
- ◆ Slide the ON/OFF switch upward so the shaver can operate (fig.2,3).
- ◆ Place the shaver head at 90° to the skin and move it back and forth straightly and slowly against the beard growing direction (fig.4).
- ◆ Shaving is best when the face is dry so please shave before or after face washing.
- ◆ If you have not previously used a foil shaver, it may take some time for your skin to get used to the shaving method.
- ◆ Hair on the neck can also be shaved in this way
- ◆ The 'pop-up' trimmer head can be used to trim the beard on the temple and other hair such as a long beard. This can be activated by pushing the slide actuator upwards and then back down to hold away (fig. 3).
- ◆ Once complete, turn off the shaver, use the supplied brush to remove hair from the shaver and trimmer heads (refer cleaning section), then fit the dustproof cover.

Cleaning

- ◆ Switch off the shaver.
- ◆ You are advised to clean the shaving heads periodically to maintain good performance.
- ◆ Knead both sides of the outer foil's outer frame, take off the outer foil (fig.6), clean it with the cleaning brush supplied.
- ◆ After cleaning it, install the outer foil and put on the dustproof cover.
- ◆ The shaver body can be cleaned by wiping down with a dry (or slightly damp) cloth.
- ◆ Never attempt to clean with solvent / alcohol / abrasive cleaners.

Reference Figures:

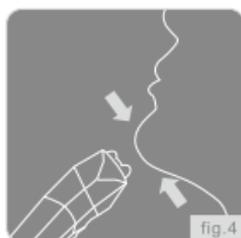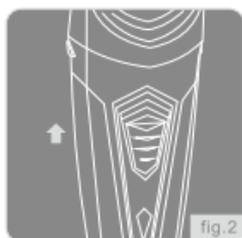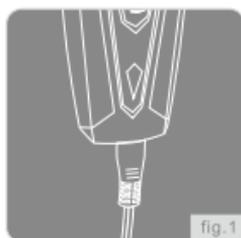

LIVING & CO[®]



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 1 year warranty when

Accompanied by proof of purchase.

IM Version 1.0 – January, 2020

