

LIVING & CO[®]

Hair Clipper Set



INSTRUCTION MANUAL GK-128A

AFTER SALES SUPPORT

☎ NZ 0800 422 274

Contents


PRODUCT OVERVIEW		2
BEFORE USING	CAUTION	3
	IDENTIFICATION OF PARTS	3-6
OPERATION	GETTING STARTED	7
	GUIDE COMBS / CHARGING	8
	HOW TO USE	9-10
CARE FOR YOUR HAIR CLIPPER SET		11
IMPORTANT SAFETY INSTRUCTIONS		12
PROTECT THE ENVIRONMENT		13
SPECIFICATIONS		14
WARRANTY		15

AFTER SALES SUPPORT

☎ NZ 0800 422 274

LIVING & CO[®] 1

PRODUCT OVERVIEW

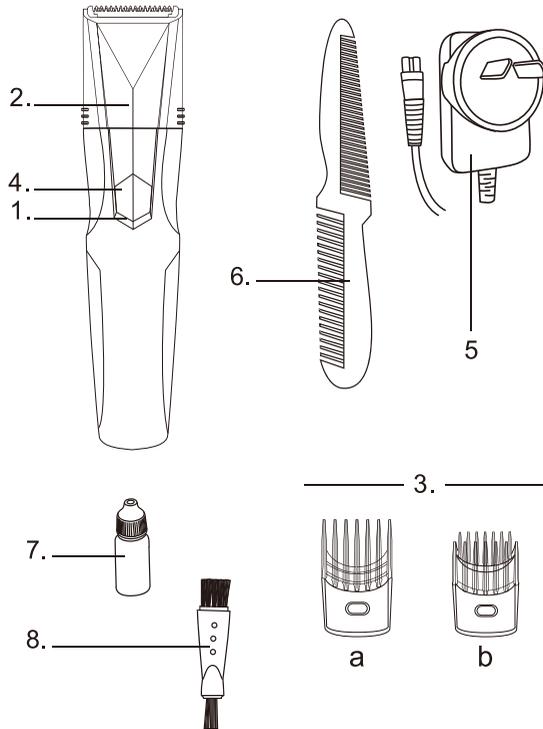

BEFORE USING

Thank you for choosing a Living & Co product. Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new appliance. Please read the instructions for use carefully and keep in a safe place for the future reference.




CAUTION:

- ◆ Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by us.
- ◆ Do not use this product if it is not working correctly, if it has been dropped or damaged, or immersed into water.







IDENTIFICATION OF PARTS:

1. On / Off Switch
2. Precision trimmer head
3. a & b, 2 guide combs for fitment to trimmer head
4. Charging indicator light
5. Charging adaptor
6. Comb
7. Lubricating oil
8. Cleaning brush





OPERATION

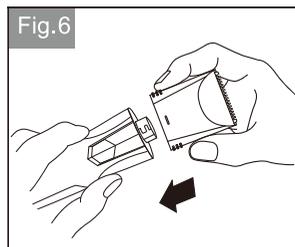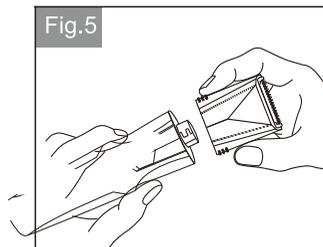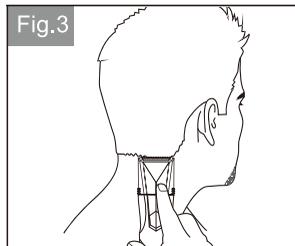

OPERATION

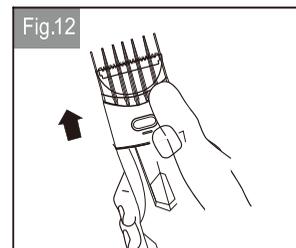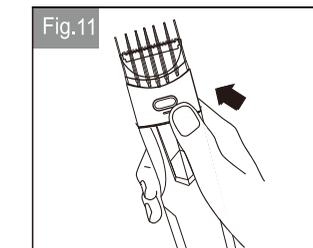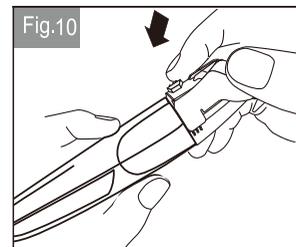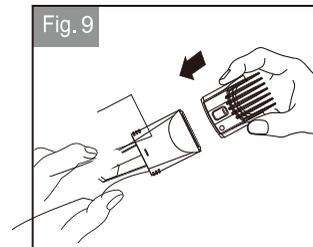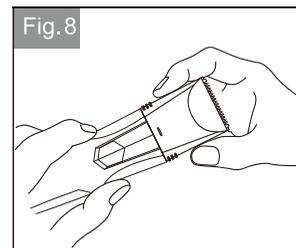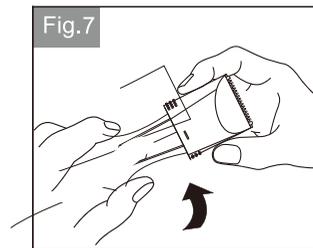

OPERATION

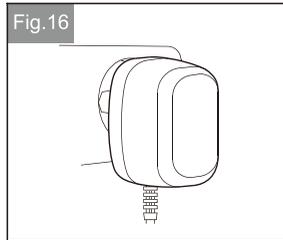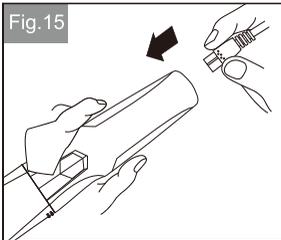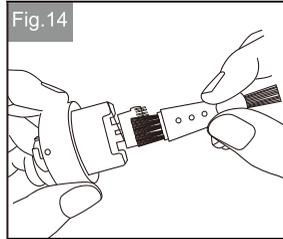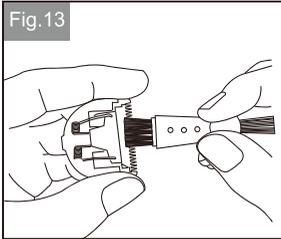

GETTING STARTED

CHARGING YOUR HAIR CLIPPER: Before using your hair clipper for the first time, charge for 8 hours.

Ensure the product is switched off.

Connect the charging adaptor to the product and then to the mains. The charging indicator will light up.

Your hair clipper cannot be overcharged. However, if the product is not going to be used for an extended period time (2-3months), unplug it from the mains and store. Fully recharge your hair clipper when you would like to use it again.

To preserve the life of your batteries, let them run out every six months then fully charge for 14-16 hours.

When changing the trimmer heads or accessories, place the part in the correct position, align with the body and the lock and press the parts to clip into position. (Fig.5 & 6).

Removal of the trimmer heads refer picture. (Fig 11-12)

■ GUIDE COMBS

Level	Length (mm)
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10

Level	Length (mm)
1	12
2	14
3	16
4	18
5	20

Place the guide comb attachment next to the full size trimmer head to align and then slide downwards. (Fig.9).

Align and click into position. (Fig.10).

When changing the guide comb's level (10 variations as table above shows), press the unlock button and hold down to allow release. (Fig.11.) Then push with your finger outwards to disconnect the part (Fig.12).

■ CHARGING THE APPLIANCE

- Ensure the product is switched off.
- Connect the charging adaptor to the mains socket outlet and then the output lead to the product. The charging indicator will light up (red in colour). (Fig 15 and Fig 16).

Note: the indicator light always show red even fully charged. Please unplug the adaptor after the recommended charge time is reached.

HOW TO USE

■ BEFORE YOU BEGIN

Always comb your beard or moustache with a fine comb before you start trimming.

■ ATTACHING & REMOVING THE GUIDE COMBS

With the trimmer blade facing away from you, slide the guide comb on top of the clipper blade and click into position.

With the trimmer blade facing away from you, carefully push the guide comb away from the trimmer blade.

■ TO THIN AND TAPER THE BEARD/MOUSTACHE(Fig.1)

Attach a guide comb to full size trimmer. If you are trimming for the first time start with the maximum trimming length setting.

Turn the unit on.

Place the flat top of the trimmer comb against the skin.

Slowly slide the Hair Clipper through the hair. Repeat from different directions if necessary.

If hair builds up in the trimmer comb during the trimming process, switch the unit off, take off the comb and brush/rinse off.

■ TO DEFINE THE BEARD/MOUSTACHE LINE(Fig.2)

Hold the clipper with precision Trimmer Blade facing you (no comb attached).

Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin. Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area

■ TRIMMING THE NAPE OF YOUR NECK(Fig.3)

NOTE: You will need a hand mirror for this operation if performing it alone.

Before you begin, attach the full size Trimmer Blade.

Use your fingers to lift the hair at the base of your head up. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by the clipper.

Using your other hand, hold the clipper to the base of your neck with the cutting unit facing up, and move the clipper up the length of the neck until it touches your finger covering the hair roots at the base of your head.

Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

To trim in the most effective way, move the appliance slowly against the direction of hair growth (Fig.4).

To trim the body hair with positioning comb if you want to keep a length, as picture shows. (Fig.5)
To trim the detailed beard and moustache with guide comb, as the pic shows. (Fig.6)

■ ATTACHING & REMOVING THE TRIMMER HEAD

NOTE: Always ensure the clipper is switched off before changing any attachments.

To remove, hold the clipper with one hand and turn the trimmer head anticlockwise with the other.

CARE FOR YOUR HAIR CLIPPER SET CLEANING AND MAINTAINING

AFTER EACH USE.

1. Turn the hair clipper off.
2. Gently brush the remaining hairs away/rinse under warm water from the guide comb and trimmer blade.

CLEANING WARNINGS

- Only the guide comb attachment and trimmer blade may be removed from the product for cleaning.
- Cleaning should only be done with a soft brush, such as the brush supplied with the product.
- Only use the light-grade oil supplied or sewing machine oil on the blades.
- Do not use harsh or corrosive cleaners on the units or their blades.
- Do not submerge in water as damage will occur.

STORAGE

- Always store this appliance and power supply in a moisture-free area. Do not store it in temperatures exceeding 60°C.

IMPORTANT SAFETY INSTRUCTIONS

WARNING-TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

Keep the power plug and cord away from heated surfaces.

Make sure the power plug and cord do not get wet.
Do not plug or unplug the product with wet hands.

Do not use the product with a damaged cord.

Charge, use and store the product at a temperature between
15°C and 35°C.

Never Immerse in water.

Always unplug from the mains when cleaning.

Only use the parts supplied with the appliance.

Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.

- Children shall not play with appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

PROTECT THE ENVIRONMENT

The product contains a Nickel Metal Hydride cell unit. Do not dispose the trimmer in household waste at the end of its useful life.



Do not throw away the appliance with the normal household waste at the end of its life, but hand it at an official collection point for recycling. By doing this, you help to preserve the environment.

SPECIFICATIONS

Power source: AC100-240V 50/60Hz

Motor voltage: DC2.4V

Battery capacity: Ni-Mh AAA 600mAhX2

Charging time: 8 hours

Working time: 40-45min



LIVING & CO[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 1 year warranty when

Accompanied by proof of purchase.

IM Version 1.0 – January, 2020