

living & co.

LUXURY FOOT SPA



Instruction Manual Model FM-502A

AFTER SALES SUPPORT

  0800 422 274

Contents


| | |
|---|------------|
| TECHNICAL DATA | 2 |
| PRODUCT OVERVIEW | 2 |
| SAFETY INSTRUCTIONS | 3-4 |
| PRECAUTIONS FOR USE BY THOSE PREGNANT OR PERSONS WITH MEDICAL CONDITIONS | 5 |
| HOW TO USE THIS APPLIANCE | 5-6 |
| CLEANING | 6 |
| CORRECT DISPOSAL OF THIS PRODUCT | 6 |
| WARRANTY | 7 |

TECHNICAL DATA

Model: FM-502A

Power: 220-240V~, 50-60Hz, 420W

PRODUCT OVERVIEW

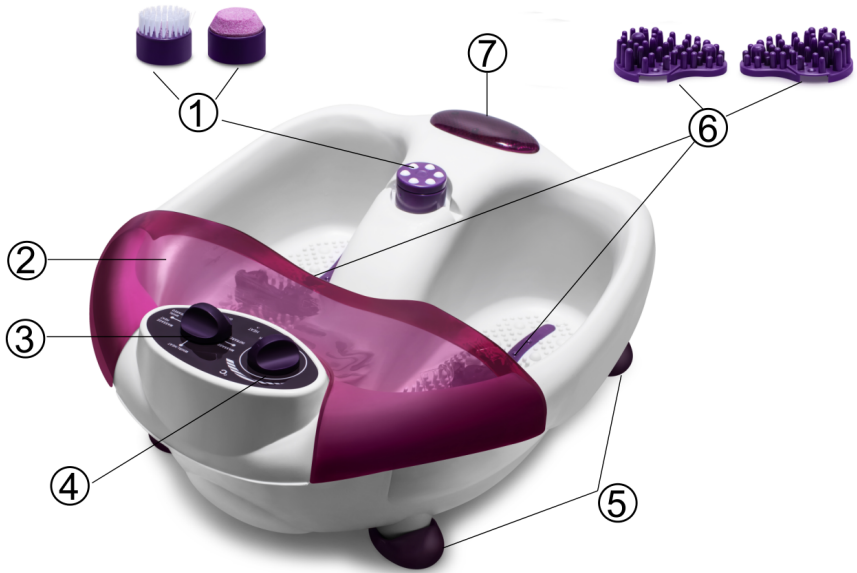

- ① 3 interchangeable pedicure attachments
- ② Anti-splash hood
- ③ Power & function switch
- ④ Thermostat dial
- ⑤ Anti-slip feet
- ⑥ Changeable massage attachments (2 pairs)
- ⑦ Indicator lights

SAFETY INSTRUCTIONS:

- Read the operating instructions carefully before operating the appliance and keep the instructions, the receipt and, if possible, the packaging box.
- The appliance is designed exclusively for domestic use only and is not intended for commercial use.
- Do not use it outdoors.
- Keep it away from sources of heat, direct sunlight, humidity (never immerse the appliance into any liquid) and sharp edges.
- Do not use the appliance with wet hands.
- When cleaning or storing it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable) and remove the attached accessories.
- Never leave the appliance unsupervised. To protect children from the dangers posed by electrical appliances, make sure that the cable is hanging low and that children do not play with the appliance.
- Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged.
- Do not try to repair the appliance on your own. Always contact an authorized / qualified service technician.
- Pay careful attention to the following **“Safety Instructions”**.
- If the supply Cord is damaged, it must be replaced by the manufacturer or our service agent or a similarly qualified person in order to avoid a hazard. Replace with a cord of the same type.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.

SAFETY INSTRUCTIONS (Continued):

- Never use accessories, which are not supplied with this device.
- Never operate the device in places where oxygen or aerosols (sprays) are used.
- Never carry the device by the supply cord and never use the supply cord as a handle.
- The device should only be filled with water. Do not use bath oils, gels or other substances.
- Never sleep while using the device.
- Never operate the device without water.
- Never use the appliance for more than 20 minutes.
- Sit down before putting your feet into the bath. Never stand up if your feet are still in the bath.
- The bath should never be filled beyond the MAX mark.
- To avoid being scalded by hot water, always test the water temperature before putting your feet into the bath.
- Cautions should be observed around use by persons with impaired senses or diabetics; the same cautionary measures must be applied to those with cardiovascular disease or heart disease; Children and elderly must be supervised while using the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety; Children shall be supervised to ensure that they do not play with the appliance.
- The appliance has a heated surface. Persons not sensitive to changes in heat must take care when using the appliance,
- If the appliance appears to be leaking, unplug it immediately and discontinue use.

PRECAUTIONS FOR USE BY THOSE PREGNANT OR PERSONS WITH MEDICAL CONDITIONS:

- Please consult your doctor before using this appliance. This particularly applies to people with heart pacemakers, diabetes or other diseases, pregnant women or people with long-term muscle and/or joint pain. Prolonged pain may be symptomatic of a serious medical condition.
- A massage should have a pleasant and relaxing effect. If you feel discomfort or pain after a massage you should consult a doctor before using the device again.
- Never use massage machines with open wounds, on body parts with circulation disorders, swellings, burns, inflammations or skin sores or pus wounds.

HOW TO USE THIS APPLIANCE

- Place the appliance on the floor so that you can sit comfortably behind it. Ensure the supporting surface (floor) is stable/level and clear from obstacles.
- Fill the appliance with warm or cold water (to your personal preference) up to a maximum of two filling marks located on the appliance's inner wall.
- Plug the supply plug into a suitable electrical socket (Warning: ensure the bath is not in immediate proximity to the socket outlet (> 0.5m).
- Sit down and put your feet in the foot bath.
- Adjust the water temperature and massage function according to your preference:

1. Thermostat dial

Low→High: you can adjust the water temperature between 30°C and 50°C by rotating the thermostat.

(NOTE: The internal heater will slowly heat the water but is more suited to maintaining the original water temperature).

HOW TO USE THIS APPLIANCE (Continued)

2. Function switch button:

You can enjoy the pleasure of a foot massage by selecting the corresponding functions:

- Massager
- Bubble Impact/Heating
- Massager/Bubble Impact/Heating
- Enjoy the deep-penetrating massage while moving your feet forward and backward over the reflex zone massage attachments. The attachments can be easily removed by pulling them out. When using the appliance without the roller attachment, fit in the standard attachment.

3. Three interchangeable pedicure attachments:

- **Six ball massager:** A circumsolve massager for massaging all main points of the sole.
- **Pumice:** Great for removing dead or thick skin off the heels and soles of your feet.
- **Brush:** Great for keeping the feet clean and healthy.

4. After use:

- Turn off the appliance after use and unplug it from the socket outlet. To discard water, tilt the bath sideways.
- Never pour water over the function selector switch.
- Remove pedicure attachments and hang on the wall holder.

CLEANING

- Before cleaning, unplug the electrical supply plug.
- After the machine has been used a few times, the water jet heads may become clogged. These are best cleaned with a soft wire brush.
- Never immerse the whole appliance in water in order to clean it.
- Only use a moist cloth to clean the appliance.
- Do not use harsh chemicals or abrasive cloths to clean the appliance.
- Dry the appliance with a dry cloth.

living & co.



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable.

We are so confident in our products, we back them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 1 year warranty when accompanied by proof of purchase.

IM Version 1.0 – April,2020