

LIVING & CO[®]

Tapered Curling Wand



INSTRUCTION MANUAL HB-765LC

AFTER SALES SUPPORT

☎ (NZ) 0800 422 274

Contents

BEFORE USING	2
TECHNICAL DATA	2
PRODUCT OVERVIEW	2
SAFETY PRECAUTIONS	3-4
OPERATION	5
RECOMMENDATIONS	5-6
CLEANING	6
STORAGE	6
WARRANTY	7


BEFORE USING

Thank you for choosing the Living & Co Tapered Curling Wand. Please read these instructions carefully before use and keep it in a safe place for future reference.

TECHNICAL DATA:

220-240V ~ 50/60Hz 35W

PRODUCT OVERVIEW

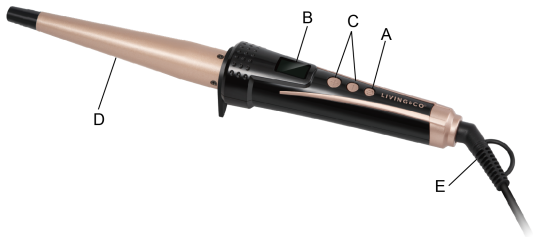

A. ON/OFF switch

B. LCD screen

C. Temperature control (120°C, 140°C, 160°C, 180°C, 200°C)

D. Curling iron (13-25 mm)


E. Swivel power cord

SAFETY PRECAUTIONS

THE APPLIANCE'S BARREL WILL BECOME VERY HOT DURING USE. AVOID CONTACT WITH THE SKIN. MAKE SURE THAT THE SUPPLY CORD NEVER COMES INTO CONTACT WITH THE HOT PARTS OF THE APPLIANCE.

- The appliance must be unplugged:
 - before cleaning and maintenance procedures.
 - if it is not working correctly.
 - as soon as you have finished using it.
 - if you leave the room, even momentarily.
- Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

SAFETY PRECAUTIONS (continued)

- - Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down;
 - When the appliance is connected to the power supply, never leave it unattended;
 - Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- Do not place hair curling iron on soft material e.g. carpet, bedding, towels, rugs etc.
-  **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask you installer for advice.

OPERATION

- Connect the appliance to an electrical outlet and press the ON/OFF switch (A) to turn the curling wand on. The LCD screen (B) will light up.
- Select the preferred temperature and allow approximately 5 minutes for the temperature to be reached before using the appliance.

RECOMMENDATIONS

Your hair must be untangled, clean and dry (in order not to damage your hair).

- Place your curling wand on a flat / stable and heat resistant surface.
- Plug in the appliance and switch it on. Wait for approximately 3 - 5 minutes until the appliance reaches the operating temperature.
- Part a thin section of hair 2 - 3 cm wide.
- Wrap the hair section around the barrel. Wrap the curl as near to the scalp as possible.

To prevent burns, avoid direct contact with the scalp.

- Hold the hair section in this position for approximately 20 seconds for tight curls (less than 20 seconds if you wish to have softer curls).

RECOMMENDATIONS (continued)

- When you have obtained the required curl, half unroll the curled section of hair—and let the curl slide out.
- Repeat this operation to form a new curl.
- For more natural looking waves, carefully comb your fingers through the curls after letting them cool.

CLEANING

Unplug the appliance and let it cool on its stand. Clean the barrel once completely cooled then, wipe down the handle with a slightly damp soft cloth. Never use water or any other liquid inside the handle.

STORAGE

- Ensure the appliance is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Store the appliance in a cool, dry place.

LIVING & CO[®]



Warranty

We pride ourselves on producing a Range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 1 year warranty

When Accompanied by proof of purchase.

IM Version 1.0 – March, 2020