

LIVING & CO[®]

PYRAMID KETTLE



INSTRUCTION MANUAL

MODEL: JK-117

CONTENTS

	Page
IMPORTANT SAFEGUARDS	2-3
BEFORE USING YOUR KETTLE	4
PRODUCT OVERVIEW	5
CLEANING AND MAINTENANCE	6

IMPORTANT SAFEGUARDS

- Read all instructions before using.
- Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your retailer and stop using the kettle.
- Do not let the cord hang over the edge of a table, counter, or touch a hot surface.
- Do not place on, near a hot gas or electric burner, or in a heated oven.
- Do not operate the appliance without anything in it to avoid damaging the heat elements.
- Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
- To protect against a fire, electric shock or personal injury, do not immerse cord, electric plug or kettle in water or other liquids.
- While water is boiling, or just after the water has been boiled, avoid contact with the steam from the spout.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Be careful when refilling the kettle while it is hot.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are 8 years or older and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Extreme caution must be used when moving an appliance containing hot water.

IMPORTANT SAFEGUARDS (Continued)

- The kettle is for household use only. Do not use outdoors.
- Do not touch the hot surface of the kettle. Use the handle only.
- The use of accessories which are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
- Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts and before cleaning the appliance.
- To disconnect, turn socket outlet switch to “off”, then remove plug from wall outlet.
- If the supply cord is damaged, it must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.
- Do not use the appliance for anything other than its intended use.
- The kettle should only be used with the base provided.
- If the kettle is overfilled, boiling water may spill out.
- Always ensure the lid is closed and do not lift the kettle while the water is boiling. Scalding may occur if the lid is removed during the boiling process.
- Avoid spillage on the base.
- The heating element surface is subject to residual heat after use.
- This appliance is intended to be used in household and similar applications such as:
 - a. Staff kitchen areas in shops, offices and other working environments;
 - b. Farmhouses;
 - c. By clients in hotels, motels and other residential type environments;
 - d. Bed and breakfast type environments.



Please follow the instruction for use carefully!

BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling the Maximum capacity of water once and then discarding the water, repeat this step twice. Wipe the surface with a damp cloth once cooled.

USING YOUR KETTLE:

1. Place the kettle on a flat surface.
2. To fill the kettle, remove it from the power base and remove the lid, then fill the kettle with the desired amount of water and replace the lid. The water level must be between the Min and the Max levels. Too little water will cause the kettle to switch off automatically before the water has boiled or, will cause the kettle to “dry boil” activating the over-temperature protective device.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging into the power outlet.

3. Position the kettle on the power base.
4. Connect the plug into a power outlet. Press down the on/off (boil) switch and the indicator will light up, the kettle will then start to heat the water. The kettle will switch off automatically once the water has boiled. Please allow at least 30 seconds before pressing the switch again to re-boil the water. You may shut off the power by lifting the switch up or directly lift the kettle from the power base at any moment to stop the boiling process.

NOTE: Ensure that the switch is free of obstructions and the lid is firmly closed during operation.

5. Lift the kettle from the power base and then pour the water.
NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in scalding. Do not open the lid while there is hot water in the kettle.

6. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.

NOTE: Always disconnect the power supply when not in use.

PRODUCT OVERVIEW



- | | |
|-------------------------|------------------------|
| 1 Lid | 5 360° rotary base |
| 2 Handle | 6 Spout |
| 3 Water Level Indicator | 7 Housing |
| 4 On/Off (Boil) Switch | 8 Indicator Light (On) |

Specifications

Model	JK-117
Power Consumption	1850-2200W
Rated Voltage	220-240VAC 50/60Hz

CLEANING AND MAINTENANCE

1. Be sure the product is turned OFF and DISCONNECTED from the power socket outlet. Let the product cool after use and before cleaning.
2. Clean the exterior of the product by wiping with a slightly dampened (not wet) soft cloth. Remove stubborn spots with a cloth moistened (not wet) with soapy water or a mild, non- abrasive cleaner. Avoid the use of scouring pads, harsh detergents, solvents, polish, abrasive or aerosol cleaners as they may damage surfaces of the product. Dry with a clean, soft cloth before storage, or reconnecting to the power outlet.
3. From time to time, depending on the nature of your water supply, you may need to clean the inside of the kettle. This can be done in the following manner:

REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled as the mineral deposits in tap water may form scales on the bottom of kettle which can result in reduced efficiency. You can use a commercially available descaler and follow the instructions on the descaler packaging. Alternatively, you may follow the instructions below using white vinegar.

- Fill the kettle with a 1:1 mixture of white vinegar and water to the full mark. Leave the solution in the kettle overnight.
- Then discard the mixture in the kettle, fill the kettle with clean water to the maximum position, boil and then discard the water. Repeat several times until the odour of the vinegar has been removed. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

WARNING: The use of descalers containing phosphoric acid, sulphamic acid, or their equivalents must not be used as they may damage your kettle.

CLEANING THE SPOUT FILTER

The following steps can be applied only when the kettle is switched OFF, removed from the power outlet and the kettle including water are cool.

- 1) Remove the lid and lift the filter out from its location in the spout inlet.
- 2) Wash the filter in warm soapy water. Rinse and dry with a clean, soft cloth.
- 3) Insert the filter back into the body making sure it is correctly located.



LIVING & CO[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 2 years warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 2 years warranty when accompanied by proof of purchase