

# LIVING & CO<sup>®</sup>

## 4 Slice Toaster



### INSTRUCTION MANUAL

### MODEL:KY-810

# CONTENTS

|                          | Page |
|--------------------------|------|
| IMPORTANT SAFEGUARDS     | 2-3  |
| PRODUCT OVERVIEW         | 4    |
| FIRST TIME USE           | 4    |
| USING YOUR TOASTER       | 5    |
| PRECAUTIONS DURING USE   | 6    |
| CLEANING AND MAINTENANCE | 6    |

# IMPORTANT SAFEGUARDS

Before using this appliance, please follow the safety precautions below:

1. Read all instructions and retain this manual for future reference.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surfaces. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug unit from outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
8. Do not let the cord hang over edge of table or counter, or touch hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
12. Bread may burn, so toasters must not be used near or below curtains and other combustible materials and must be watched.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Don't attempt to dislodge food when toaster is in operation
15. Be sure to take the bread out carefully after toasting so as to avoid injuries
16. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
17. Keep the appliance and its cord out of reach of children less than 8 years.

## IMPORTANT SAFEGUARDS (CONTINUED)

18. Warning: if toasting small bread slices less than 85mm in length, you must pay attention to the potential risk of burning when taking out the slices.
19. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
20. Do not use the appliance outdoors.
21. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farmhouses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
22. Save these instructions.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
24. Children should be supervised to ensure that they do not play with the appliance.
25. The surfaces are liable to get hot during use.
26. The door or the outer surface may get hot when the appliance is operating.
27. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
28. The Hot surface warning symbol is marked on the appliance means that the appliance may be hot during use.
29. If the supply cord is damaged it must be replaced by a qualified service person.



**Please follow the instruction for use carefully!**

# PRODUCT OVERVIEW



1. Toasting Slots
2. Carriage Control Lever
3. Enclosure housing
4. Variable Browning Control
5. Base
6. Crumb Trays
7. Cancel Button
8. Reheat Button
9. Defrost Button



## FIRST TIME USE

1. Remove all packaging materials, including those that may be inside the toasting slots or toasting lever slots.
2. Wipe the exterior with a damp cloth. Dry thoroughly. Do not use abrasive cleaners.
4. Make sure the crumb tray is pushed all the way into the back of the toaster and the toasting levers are in the UP position.
5. Unwrap the power cord from the cord storage area on the underside of the toaster and plug into a 220- 240V AC outlet.
6. Turn the browning selector dial to the lightest setting.
7. Lower the toasting lever until they lock in place. Operate without bread once or twice to burn off any manufacturing residue.

Note: During manufacture, oil or lubricant residue may contact the heating elements, this can cause a slight amount of smoke or odour to be emitted during first use. This is normal and will not occur after several cycles of use.

# USING YOUR TOASTER

1. Insert a bread slice into the bread slot (1 piece of bread per slot, so 4 in total). Only use regular sized bread slices, never attempt to force oversized bread into the slots.
2. Make sure the crumb trays (2) are correctly positioned in place before using.
3. Plug the power cord into the outlet (Note, the carriage control lever will not lock down unless the toaster is plugged into the socket outlet).
4. Set the 'browning control knob' to your desired setting (1 control for each pair of bread slots ie left and right). Each browning control has 6 positions, the lowest "1" is for light (shortest toasting time) and the highest "6" is for dark (longer toasting duration).

In general, the mid position ("3.5") will result in a golden brown for most bread types, but variations will exist depending on size / texture and type of bread used.

5. Press the carriage handle down vertically until it latches into position. The light indicator for the Cancel Function will be illuminated, and the appliance will begin toasting.
6. Once the bread has been toasted to the preset colour, the carriage handle will automatically pop up. Also, you can uplift the carriage handle a little (from its resting position) to remove the bread.

NOTE: During toasting, you may also observe the toasting colour. If it is acceptable, you can press the Cancel button to cancel operation at any time, but never try directly lifting the carriage control lever to cancel toasting.

## **Defrost button**

This feature takes the guesswork out of toasting frozen bread. Set the browning level to your preferred setting, put the frozen bread into the toasting slot, lower the bread carriage handle, and then press the defrost button. The indicator light next to the button will come on. The toasting time will be adjusted automatically to give the same browning level you get with unfrozen bread.

## **Reheat button**

Use the lowest setting, and only reheat plain, unbuttered toast.

## PRECAUTIONS DURING USE

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke excessively, Press **Cancel** button to stop toasting immediately.
3. Avoid toasting any food with runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Take care not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only suitable for toasting regular bread slices.
6. In order to achieve uniform colour, we recommend that you should wait minimum 30 seconds between each toasting so that colour control can reset automatically.

## CLEANING AND MAINTENANCE

1. Before cleaning, unplug the appliance and let it cool down completely.
2. Wipe the outside with a soft dry cloth, never use metal polish.
3. Remove the crumb trays at the bottom of toaster and empty. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb trays are completely closed before using the toaster again.
4. The power cord may be wound under the bottom of toaster when not in use or during storage.

### Crumbs

Remove crumbs frequently, as they could cause a fire hazard. Unplug the toaster and let it cool down fully. Remove and empty the crumb trays. Wipe them with a damp cloth, dry it, then slide them back into the toaster. **CAUTION** Do not use the toaster unless the crumb tray is in place and closed.

## Specification

|                   |                    |
|-------------------|--------------------|
| Model             | KY-810             |
| Power Consumption | 1370-1630W         |
| Rated Voltage     | 220-240VAC 50/60Hz |



# LIVING & CO<sup>®</sup>

## Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 2 years warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 2 years warranty when accompanied by proof of purchase