

# LIVING & CO<sup>®</sup>

## DEEP DISH SANDWICH MAKER

900W




## INSTRUCTION MANUAL

MODEL:SW-2028

---

**AFTER SALES SUPPORT**

 **(NZ) 0800 422 274**



# CONTENTS


	Page
IMPORTANT SAFEGUARDS	3
PRODUCT OVERVIEW	4
GETTING STARTED	5
HOW TO USE	5
CLEANING AND MAINTENANCE	6
STORAGE	6

# IMPORTANT SAFEGUARDS

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:

1. Make sure the rated voltage of your socket outlet is the same as the voltage indicated on the appliance's rating label.
2. Use only for household use.
3. Do not touch hot plate surfaces directly. Use the handle.
4. To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use or before cleaning. Allow to cool before cleaning the appliance.
7. Do not operate any appliance with a damaged supply cord or plug or if the appliance has been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the Sandwich Maker yourself. Take it to an authorized service centre for examination and repair. Any incorrect assembly could present a risk of electric shock when the Sandwich Maker is used.
8. The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
9. Do not use outdoors or for commercial purposes.
10. Do not let the power cord hang over the edge of a table or counter, or let it touch hot surfaces.
11. Do not place on or near a hot gas or electric burner or heated oven.
12. Do not operate by means of an external timer or separate remote-control system.
13. Never leave unattended during use and unplug the unit from the mains supply when not in use.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.

# PRODUCT OVERVIEW

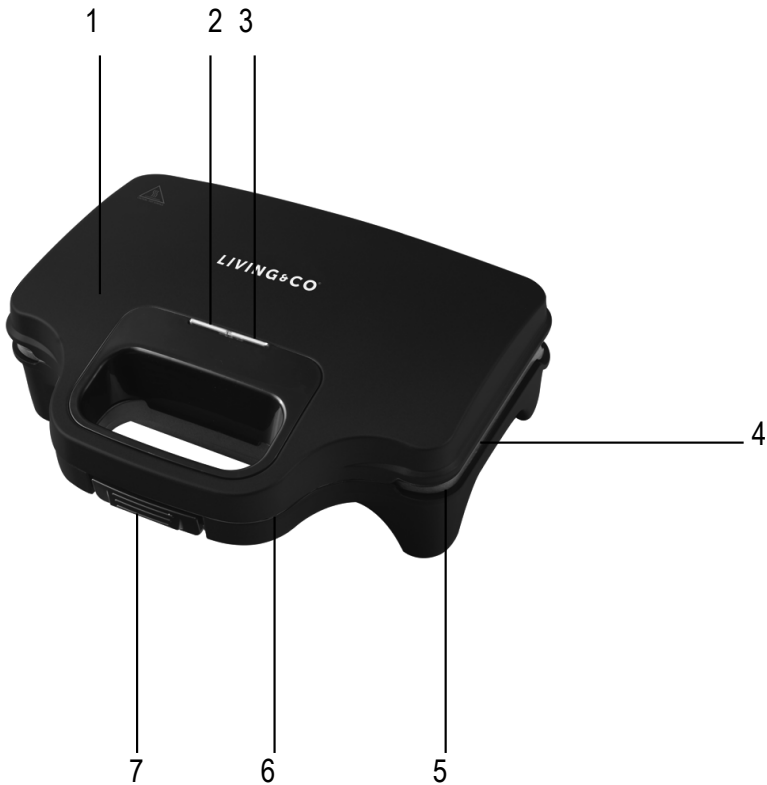

1. Upper Housing
2. Power Indicator light (orange)
3. Heating Indicator light (green)
4. Top plate
5. Bottom plate
6. Handle
7. Handle Lock

# GETTING STARTED

## BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging
- Clean the Cooking Plates by wiping a sponge or cloth dampened in warm soapy water over them.

**DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY OVER THE COOKING SURFACES.**

- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

**NOTE:** When your Sandwich Maker is heated for the first time, it may emit a slight smoke or odor. This is normal with many cooking appliances. This does not affect the safety of your appliance.

## HOW TO USE

1. Close the Sandwich Maker and plug it into the socket outlet, you will note that the power and heating indicators (orange and green lights) will come on, indicating that the Sandwich Maker has begun preheating.
2. It will take approximately 2~4 minutes to reach cooking temperature before the ready light (green light) turns off.
3. Open the lid and place food on the bottom cooking plate.
4. Close the lid. The ready light may turn on again, if the heating plate temperature drops below the ideal cooking temperature.
5. Cook for about 2 to 4 minutes or until golden brown, adjusting the cooking time to suit your own individual taste.

**NOTE:** The heating indicator light will cycle on / off during the cooking period indicating that the cooking temperature is being regulated.

6. When the food is cooked, use the handle to open the lid. Remove food with the help of a plastic spatula. Never use metal tongs or a knife as these can damage the non-stick coating of the cooking plates.
7. Once you are finished cooking, disconnect the supply plug from the wall outlet and leave the unit open to cool.

# CLEANING AND MAINTENANCE

- Always unplug the Sandwich Maker and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble the Sandwich Maker for cleaning. Never immerse the Sandwich Maker in water or place in a dishwasher.
- Wipe cooking plates with a slightly damp and soft cloth to remove food residue. For baked on food residue squeeze some warm water mixed with detergent over the food residue then clean with a non-abrasive plastic scouring pad or place a wet kitchen paper over the grill to moisten the food residue.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods, they can damage the non-stick surface.
- Wipe the outside of the Sandwich Maker with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.
- Do not place in the dishwasher.

# STORAGE

- Always unplug the Sandwich Maker before storage.
- Always make sure the Sandwich Maker is cool, clean and dry before storing.
- Use the handle locking clip, to secure the two plates together.



**STOP**  
BEFORE  
RETURNING  
TO STORE

**Read the manual**  
It will help you get the best out of your product.  
Still have questions?  
Call After Sales Support  
**0800 422 274**

# LIVING & CO<sup>®</sup>

## Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase