

LIVING & CO[®]

TOASTER - METAL SIDE 2 SLICE



INSTRUCTION MANUAL
MODEL TA01305

AFTER SALES SUPPORT

 **(NZ) 0800 422 274**

Contents

IMPORTANT SAFETY INSTRUCTIONS	2
PRODUCT OVERVIEW	4
OPERATION	4
CLEANING AND MAINTENANCE	6

IMPORTANT SAFETY INSTRUCTIONS


When using electrical appliance. Basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surfaces. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug unit from outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state.
8. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
9. Do not let the cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use the appliance for other than its intended use.
12. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
13. Bread may burn, so toasters must not be used near or below curtains and other combustible materials and must be watched.
14. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
15. Don't attempt to dislodge food when toaster is in operation
16. Be sure to take the bread out carefully after toasting so as to avoid injuries
17. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
18. Keep the appliance and its cord out of reach of children less than 8 years.
19. Warning: if toasting small bread slices less than 85mm in length, you must pay attention to the potential risk of burning when taking out the slices.
20. The appliance is not intended to be operated by means of an external timer or separate remote-control system.

IMPORTANT SAFETY INSTRUCTIONS (Continued)

21. This appliance is intended to be used in household and similar applications such as
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
23. Children should be supervised to ensure that they do not play with the appliance.
24. The surfaces are liable to get hot during use.
25. The door or the outer surface may get hot when the appliance is operating.
26. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
27. The Hot surface warning symbol is marked on the appliance means that the appliance may be hot during use.
28. If the supply cord is damaged it must be replaced by a qualified service person.
29. Do not use the appliance outdoors.

PRODUCT OVERVIEW

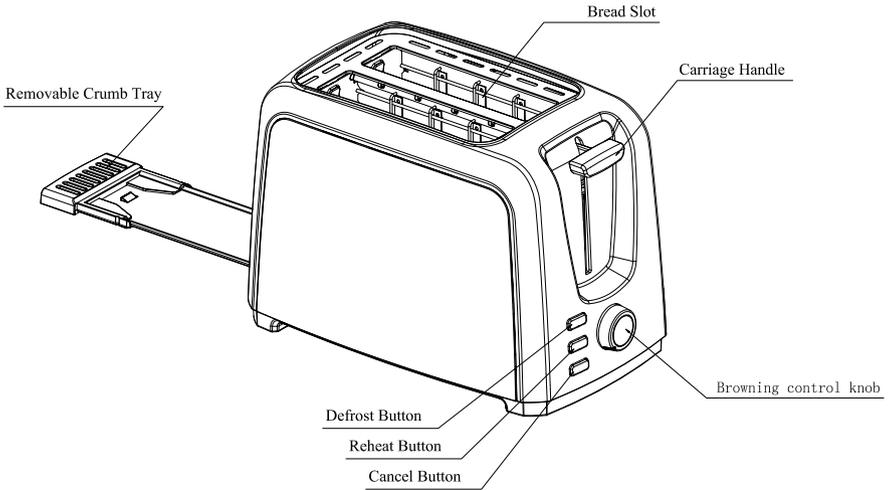

OPERATION

FOR THE FIRST USE

As there can be manufacturing residue or oil remaining on the heating elements, a slight amount of smoke or odour may be emitted during first use. This is normal and will not occur after several cycles of use. During first time use, it is suggested the toaster be operated according to the steps below, except without bread, then let the toaster cool down and begin toasting the first slice.

OPERATION

USING YOUR TOASTER

1. Insert bread slice into the bread slot (1 piece of bread per slot). Only use regular sized bread slices, never attempt to force oversized bread into the slots.

NOTE: Make sure the crumb tray is correctly positioned in place before use

2. Plug the power cord into the outlet.

3. Set the 'browning control knob' to your desired setting. There is a 7-position level, the lowest is the shortest cooking time and results in minimal toasting whereas the highest setting toasts for longer and results in a darker colour. In general, the mid position ("4") will result in a golden brown for most bread types, but variations will exist depending on size / texture and type of bread used.

Notes: a) Toasting colour can be darker when toasting only one piece of bread compared to that for double bread at the same level.

b) If toasted continuously, toasting colour for the latter bread is darker than the colour of previous cycle at the same level.

4. Press carriage handle down vertically until it latches in place, the indicator light "**Cancel**" will be illuminated, and toasting begins. Once the bread has been toasted to the preset colour, the carriage handle will automatically spring up, and you can remove the toast.

Note: The carriage handle can only be latched when the appliance is connected to the mains power supply.

5. During the toasting process, you may observe the toasting color. If it is satisfactory, you may interrupt the toasting process by pressing the **Cancel** button at any time, this will release the carriage which again will automatically spring up.

6. If the bread has been taken out from refrigerator or freezer. Set color control knob to your desired color. Press carriage handle down vertically until it is positioned in place, then press **DEFROST** button and the indicator light ('Defrost') will be illuminated. In this mode, the bread will be defrosted first before the bread is toasted to your desired colour.

USING YOUR TOASTER (Continued)

7. If you want to reheat cold toasted bread, press carriage handle down vertically until it is latched in place, then press **REHEAT** button and the indicator light ('Reheat') will be illuminated. In this mode the toasting time is fixed regardless of what position the browning control knob is in. At the end of the cycle, the carriage handle will automatically spring up and end the reheating process.

CAUTION

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke excessively, Press **Cancel** button to stop toasting immediately.
3. Avoid toasting any food with runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Take care not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only suitable for toasting regular bread slices.
6. In order to achieve uniform color we recommend that you should wait minimum 30 seconds between each toasting so that colour control can reset automatically.

CLEANING AND MAINTENANCE

1. Before cleaning, unplug from the appliance and let the appliance cool down completely.
2. Wipe the outside with soft dry cloth, never use metal polish.
3. Pull out crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When the toaster is not in use, the power cord may be wound under the bottom of toaster.



LIVING & CO[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 2 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 2 year warranty when

Accompanied by proof of purchase.

IM Version 1.0 – May, 2020

AFTER SALES SUPPORT

  **0800 422 274**