



TOASTER MATTE BLACK



INSTRUCTION MANUAL MODEL: TA5728B-SA

CONTENTS

	Page
IMPORTANT SAFETY INSTRUCTIONS	2-3
PRODUCT OVERVIEW	4
HOW TO USE	4-6
CLEANING	6

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed including the following:

1. Read all instructions carefully before use.
2. Make sure that your socket outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not directly touch hot surfaces. Use handles or knobs only.
4. To protect against electric shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug appliance from the socket outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state.
If its main cord is damaged, it must be replaced by a qualified service agent.
8. Do not let the cord hang over edge of table or counter, or touch hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversized food, metal foil packages or utensils must not be inserted into the toaster as they may cause fire or electric shock.
12. Bread may burn, so toasters must not be used near or below curtains and other combustible materials, and must be watched.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. To avoid risk of electrocution, do not attempt to dislodge food when toaster is in operation.
15. Be sure to take the bread out carefully after toasting so as to avoid damage to toaster.
16. Children shall not play with the appliance.
17. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

IMPORTANT SAFETY INSTRUCTIONS


18. Warning: When toasting small slices of bread less than 85mm length, you must pay attention to the potential risk of burns when taking out the slices.
19. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
20. Don't use the appliance outdoors.
21. This appliance is intended to be used in household and similar applications such
 - as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
23. Children should be supervised to ensure that they do not play with the appliance.
24. Keep the appliance and its cord out of reach of children less than 8 years.
25. The external surfaces are liable to get hot during use.



26. The Hot surface warning symbol marked on the appliance means that the appliance may be hot during use.

**SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY**

PRODUCT OVERVIEW

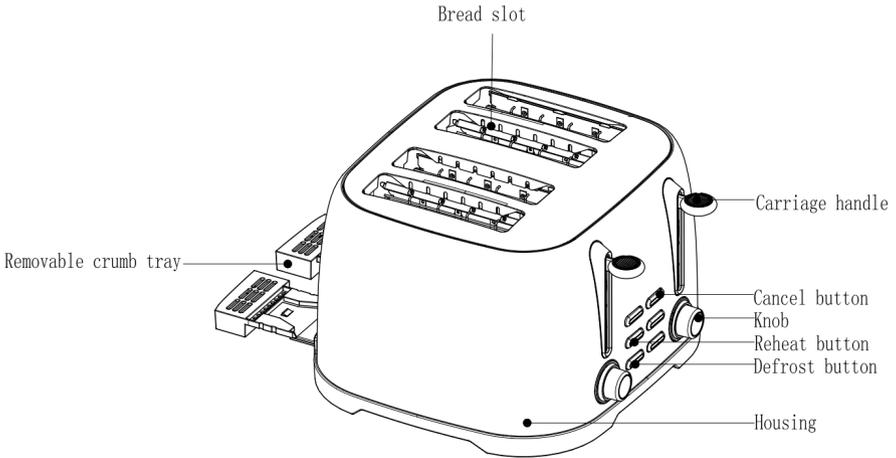

HOW TO USE

DURING FIRST USE

1. Remove all protective wrappings and packaging prior to operation.
2. Manufacturing residue or oil can contaminate the heating element during production, on first use the toaster will generally emit a small amount of odour or smoke. This is normal and will not occur after several times of use. For first use, it is suggested that the normal operation steps be followed but without bread inserted, then let the toaster cool down and begin toasting the first slices.

HOW TO USE

OPERATING YOUR TOASTER

1. Insert bread slice/s into the bread slot (1 single piece per slot). Only use regular shaped / sized bread, irregular or oversized bread may result in jamming.

NOTE: Make sure the crumb trays are correctly positioned and fully inserted before using.

2. Plug the power cord into the socket outlet.
3. Set colour control dial to your desired colour. There is 7-position level, the lowest "1" is for light and the highest "7" is for dark. Bread can generally be toasted to a golden colour in the middle position.

NOTES: 1). Toasting colour for one slice is darker than that for two bread slices at the same level.

2). If toasting continuously, toasting colour may get darker after several cycles. As such, we recommend a rest period of 30 seconds between toasting cycles.

4. Lower the carriage handle/s down vertically until they are latched in place, the indicator light for **Cancel** will be illuminated, and the appliance will begin toasting.

NOTE: The carriage handle can only be latched when the appliance is plugged in to the power supply.

5. Once the bread has been toasted to the preset colour, the carriage handle will automatically pop up. Also, you can uplift the carriage handle a little to remove the bread easily.

NOTE: During toasting, you may also observe the toasting colour. If it is satisfactory, you can press the Cancel button to stop the operation at any time, but never lift carriage handle to try and cancel toasting.

6. If you want to toast frozen bread, firstly press **Defrost** button and the (Defrost) indicator will be illuminated, set colour control knob to your desired colour and then lower carriage handle down vertically until it is latched in place. In this mode bread will be toasted to your desired colour.

HOW TO USE

7. If you want to warm cold previously toasted bread, firstly press the **Reheat** button and the (Reheat) indicator will be illuminated, then lower the carriage handle vertically until it is latched in place. In this mode toasting time is fixed, the carriage handle will automatically spring up and end up the reheating process.

CAUTION

1. If the toaster starts to smoke, Press **Cancel** to stop toasting immediately.
2. Avoid toasting the food with extremely runny ingredients such as butter.
3. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be careful not to damage the internal mechanism or heating elements when removing bread.
4. In order to achieve uniform colour we recommend that you should wait a minimum of 30 seconds between each toasting so that colour control can be reset automatically.

CLEANING

1. Before cleaning, unplug from the appliance and allow to cool down completely.
2. Wipe the outside with a soft dry cloth, never use metal polish.
3. Pull out the crumb trays at the bottom of toaster and empty. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is correctly fitted before using the toaster again.
4. When not in use or storage, the power cord may be wound under the bottom of the toaster.



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 3 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 3 year warranty when

Accompanied by proof of purchase.

IM Version 1.0 – June, 2020

AFTER SALES SUPPORT

  0800 422 274

