



LIVING&CO®

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase

LIVING&CO®

COFFEE & SPICE GRINDER 200W



INSTRUCTION MANUAL

MODEL:KWG-130

CLEANING AND CARE

Make sure the appliance is unplugged from electrical outlet before cleaning.

- 1. Wipe the outside body of the appliance with damp cloth.
- 2. DO NOT IMMERSE THE UNIT, OR THE POWER PLUG WITH WATER OR ANY OTHER LIQUID.
- 3. The Safety Cover and Grinding Cup (once removed from the base unit), can be washed in Warm soapy water, they should then be rinsed with clean water and thoroughly dried. Take care Not to directly contact the grinding blade as the surface is sharp!

CONTENT


	Page
IMPORTANT SAFEGUARDS	3
PRODUCT OVERVIEW	4
OPERATING INSTRUCTIONS	4
CLEANING AND CARE	5

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed:

1. Read all instructions carefully.
2. Before connecting the appliance to the power supply ,check that the voltage indicated on the appliance corresponds with the voltage in your home.
3. To avoid electrical shock, do not immerse electrical parts in water or other liquid.
4. Do not allow children to operate or play with the appliance.
5. Unplug from outlet when not in use, or before putting on/taking off parts.
6. Do not use with a damaged electrical cord or plug.
7. If damage or malfunction occurs, refer to an authorized service center only.
8. Do not place on or near hot surfaces.
9. Never pull the appliance by the power cord.
10. Do not use the appliance for other than its intended household use.
11. Close supervision is necessary when the product is used near children.
12. Do not twist or wrap the power cord around the appliance, as it may weaken or split the insulation, particularly where it enters the unit. Store excess cable by winding it into the base.
13. Do not allow the unit or cable to touch hot surfaces such as hot plates or grills.
14. Avoid contacting on moving parts.
15. Allow the blade to stop from rotating before removing the lid.
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction by a person who is responsible for their safety concerning the use of the appliance.
17. Children should be supervised to ensure that they do not play with the appliance.
- 18.Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- 19.This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- 20.This appliance is for household and indoor use only. Don't use it outdoors!
- 21.The transparent plastic cover and grinding cup should be hand washed only, do not attempt to wash in a dishwasher.
22. Save these instructions.

PRODUCT OVERVIEW

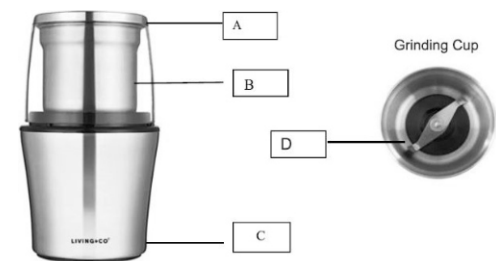

- A. Transparent Safety Cover
- B. Grinding Cup
- C. Base Unit
- D. Grinding Blade

SPECIFICATION

Model No.:	KWG-130
Power Consumption	200W
Rated Voltage	220-240VAC 50-60Hz

OPERATING INSTRUCTIONS

1. Remove all packaging materials/sticker before using the appliance for the first time.
2. Place the appliance on a clean & level surface.
3. Remove the Safety Cover and Grinding Cup and rinse in clean water, then thoroughly dry.
4. Place the Grinding Cup on the base unit, insert the required quantity of coffee beans or spices, taking care not to exceed the max capacity marking or weight (70grams). DO NOT OVERFILL.
5. Place the Safety Cover Over the Grinding Cup and connect the power plug to an electrical outlet.
6. Make sure the cup is in locked position, A safety feature of this grinder prevents it from operating unless the lid is in place.
7. **NOTE: DO NOT add water or other liquid into the cup .**
8. Hold and push down the lid to start grinding or chopping, The lid should be pressed and released intermittently until the desired grinding or chopping is reached.
9. The operation period shall not exceed 30 seconds each time to prevent the appliance from overheating, DO NOT operate for more than 3 consecutive cycles. Let the Base Unit rest to room temperature before operating again.
10. When grinding or chopping is finished, **LET THE BLADE STOP COMPLETELY BEFORE REMOVING THE LID.**