

living & co.

Buffet Food Warmer



Instruction Manual

Model No.: HD9003C

AFTER SALES SUPPORT

☎ NZ 0800 422 274

CONTENTS

	Page
IMPORTANT SAFEGUARDS	3
PRODUCT OVERVIEW	4
BEFORE FIRST USE ASSEMBLY	5
USING THE BUFFET FOOD WARMER USING THE WARMING TRAY	6
CLEANING AND CARE RESPONSIBLE DISPOSAL	7
WARRANTY	8

IMPORTANT SAFEGUARDS

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Please keep this user manual in a safe place along with your purchase receipt and carton for future reference. If applicable, pass these instructions and packaging on to the next owner of the appliance. Always follow basic safety precautions and accident prevention measures when using an electrical product.

- Check that the voltage indicated on the rating label corresponds with that of the local supply before connecting the appliance to the mains power supply.
- Do not leave the appliance unattended whilst connected to the mains supply.
- Do not immerse the appliance in water or any other liquids.
- Unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Never leave the appliance within reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- This appliance is intended for household use only and should not be used for commercial purposes.
- Do not operate the appliance with a damaged plug or cord, after a malfunction, or after being dropped or damaged in any way.
- Do not use the appliance for anything other than its intended use.
- Take care to not directly touch hot surfaces, use handle or knobs to handle.
- Ensure the appliance is used on a stable, heat resistant surface.
- Any meat dishes placed in the buffet warmer must be thoroughly cooked first. Do not place raw meat in the buffet warmer.
- The appliance is not intended to reheat food.
- Do not attempt to move or lift the appliance while the power cord is still connected to the outlet, still in operation or if still hot.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments

PRODUCT OVERVIEW



- A. Large warming trays and lids
- B. Cool touch handles
- C. Warming tray frame
- D. Warming tray base
- E. Indicator light
- F. Temperature dial
- G. Small warming trays and lids

Specifications

Model	HD9003C
Power Consumption	300W
Rated Voltage	220-240VAC 50/60Hz

BEFORE FIRST USE

Prior to using your Buffet warmer, please read all safety and operating instructions thoroughly. Ensure all parts indicated on the Product Overview Diagram on the previous page of this instruction manual have been included in the packaging.

1. Unpack the product but keep all packaging material until you have made sure your new Buffet Warmer is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are kept out of reach of children.
2. Uncoil the cord and straighten it to remove any kinks. Do not use the product if any parts are damaged. In case of damage, phone the After Sales Support Line.
3. Wash the warming trays and lids in warm, soapy water using a soft sponge and dry thoroughly before use. Never use a metal scourer to clean the warming trays or lids.
WARNING: Do not immerse the warming tray base in water.
4. Place the Buffet Warmer on a dry, flat, level surface

NOTE: You may notice a slight odour being emitted from the Buffet warmer during the initial use. This is normal and will cease with continued use.

ASSEMBLY

1. Before assembling the Buffet Warmer, ensure the exterior of all warming trays are clean and dry.
2. Place the warming tray base on a flat, level and stable surface and place the warming tray frame directly on top of the warming tray base. Ensure the exterior guides on the warming tray frame align with the edges of the warming tray base so it sits securely.
3. Place the warming trays inside the warming tray frame.

USING THE BUFFET FOOD WARMER

CAUTION: Do not use the Buffet Warmer for more than 6 hours at one time

1. Insert the plug into a power outlet and switch on.
2. Turn the temperature dial clockwise until you hear a click and the indicator light illuminates red.
3. Allow the Buffet Warmer to pre-heat for approximately 10 minutes. The indicator light will turn off when the Buffet Warmer has reached the desired temperature setting.

NOTE: The Buffet Warmer is not intended to defrost or cook food.

4. Using caution, transfer food that has already been cooked into the warming trays of the Buffet Warmer.

TIP: Use the large warming trays for mains and the smaller warming trays for sides.

5. Adjust the temperature dial to the desired heat setting to keep your food warm. The indicator light will cycle On and Off whilst maintaining the correct temperature.
6. Once you have finished using the Buffet Warmer, turn the temperature dial anticlockwise until you reach the "OFF" position. Switch off the power at the outlet and unplug the power cord.
7. Carefully remove any food remaining in the warming trays.
8. Allow the appliance to cool down completely and unplug from the mains supply before disassembling and cleaning the warming trays.

CAUTION: Always use the cool touch handles and oven mitts when removing warming trays or moving the Buffet Warmer. Parts of the Buffet Warmer (such as the warming trays) can reach extremely high temperatures. Do not touch hot surfaces.

NOTE: Extended use over long periods of time at high temperatures may cause discolouration of the warming trays and scorching may occur on the Buffet Warmer.

USING THE WARMING TRAY

You can use the warming tray base on its own to keep warm appetisers, finger foods and also for keeping whole plates warm. When using the unit as a warming tray ensure containers are heat-proof.

NOTE: The warming tray is not designed to keep large, deep pots full of food or liquid warm.

CLEANING AND CARE

Caution: Always ensure the appliance is unplugged from the mains power supply and has thoroughly cooled before cleaning or storing.

- Remove each warming pan, the lid and the frame and wash with warm, soapy water. Rinse well and dry thoroughly.
- Wash the warming tray in a mild detergent with a soft, moist cloth, do not use any abrasive cleaning agents or allow water to spill or seep into the frame. Never immerse the warming, tray cord or plug in water or any other liquid.
- Re-assemble the buffet warmer and store in a cool, dry place. We recommend storing the Buffet Warmer in its original carton to protect it from dust, with all the parts and accessories.

RESPONSIBLE DISPOSAL

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 2 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 2 year warranty when accompanied by proof of purchase