

living & co.

Men's Grooming Gift Set



INSTRUCTION MANUAL

CL-2037A & CL-NT312

AFTER SALES SUPPORT

☎ (NZ) 0800 422 274

CONTENTS

PRODUCT OVERVIEW	2
PARTS DESCRIPTION	2
IMPORTANT SAFETY INSTRUCTIONS	3
GETTING STARTED	4
CHARGING YOUR HAIR CLIPPER	5
FITMENT OF BATTERY TO THE NOSE AND EAR HAIR TRIMMER	5
TIPS FOR BEST RESULTS	6
REMOVAL AND FITMENT OF TRIMMER HEADS AND ACCESSORIES	6
CLIPPER COMBS	8
CLEANING AND MAINTAINING YOUR HAIR CLIPPER	9
HOW TO USE YOUR HAIR CLIPPER	10
HOW TO USE YOUR EAR AND NOSE HAIR TRIMMER	12
WARRANTY	13

PRODUCT OVERVIEW



PARTS DESCRIPTION

1. Hair clipper short length comb (3-15 mm)
2. Hair clipper long length comb (18-30 mm)
3. Beard comb (1-12mm)
4. Rotary dial (for adjustment of the cutting length)
5. On/Off switch of hair clipper
6. LED indicator light (battery status when charging)
 - Red colour illuminated when charging, Blue when fully charged.
7. Charge lead connection socket
8. Locking switch for Rotary dial – underside (not shown)
9. Protection cap
10. Lubricating oil
11. Cleaning brush
12. Styling comb
13. USB charge cable
14. Nose and ear hair trimmer
15. On/Off switch of nose hair trimmer
16. Battery access cover (battery not included)
17. Beard and sideburns trimmer

IMPORTANT SAFETY INSTRUCTIONS

Warning to Reduce the Risk Hazard or Injury to Persons:

- An appliance should never be left unattended while charging.
- Keep the charge lead away from heated surfaces.
- Ensure the charge lead and plug of the hair clipper do not get wet.
- Do not plug or unplug the product with wet hands.
- Do not use the product with a damaged charge lead.
- Charge, use and store the product at a temperature between 15°C and 35°C.
- Only use the parts supplied with the appliance.
- Do not use this product if it is not working correctly or if it has been dropped or damaged.
- Ensure the product is never dropped into water, this presents a risk of battery explosion.
- Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.
- Don't put the appliance in liquid, don't use it near water in a bath-tub, basin or any other vessel, and don't use it outdoors.
- Use this appliance only for its intended use as described in this manual. Do not use this product if it is not working correctly, if it has been dropped or damaged, or if it has fallen into water.

GETTING STARTED

Our products are designed to meet a high standard of quality, functionality and design. We hope you enjoy using your new appliance. Please read the instructions for use carefully and keep for future reference.


Protect the Environment

- DO NOT DISPOSE OF THE PRODUCT IN HOUSEHOLD WASTE AT THE END OF ITS USEFUL LIFE.
- DO NOT PLACE IN A FIRE OR ATTEMPT TO OPEN THE INTERNAL BATTERY PACK AS IT MAY BURST OR RELEASE TOXIC MATERIAL.
- CONTACT YOUR LOCAL COUNCIL FOR DETAILS OF WHERE THE PRODUCT CAN BE COLLECTED.
- DO NOT THROW AWAY THE APPLIANCE WITH THE NORMAL HOUSEHOLD WASTE AT THE END OF ITS LIFE, CONTACT YOUR LOCAL COUNCIL FOR DETAILS ON RECYCLING. BY DOING THIS, YOU HELP TO PRESERVE THE ENVIRONMENT.

CHARGING YOUR HAIR CLIPPER:

Before using your clipper, you will need to fully charge the internal battery.

- Ensure the product is switched off.
- Connect the charging adaptor lead to a USB outlet (5V with a supply of at least 800mA), then connect the outlet lead to the product connection socket. The charging indicator will light up (red in colour) to indicate charging has commenced. The indicator will light up blue when fully charged, the charge time is approximately 1.5hrs.
- Your trimmer cannot be overcharged however, to ensure maximum life span of the battery, it is recommended to disconnect from the charging supply as soon as fully charge (blue light operates).
- If the product is not going to be used for an extended period time (2-3 months), unplug it from the mains and store. Fully recharge your trimmer when you would like to use it again.

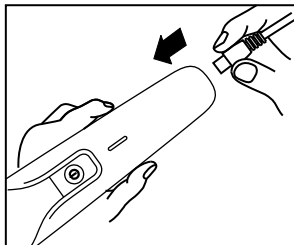

FITMENT OF BATTERY TO THE NOSE AND EAR HAIR TRIMMER

- The device requires 1 x AA (1.5V) battery (not included).
- Make sure the trimmer is switched to the off position.
- Remove the battery access cover by rotating in a counterclockwise direction.
- Insert 1 AA battery taking care to ensure correct polarity.
- Re-attach the battery access cover by rotating in a clockwise orientation to lock into position.

TIPS FOR BEST RESULTS

- Beard, mustache and sideburns hairs should be dry.
- Avoid using lotions before using your hair clipper. Comb your hair in the direction that it grows.
- Remove trimmer comb attachment if you are defining hairline edges such as sideburns, trimming the nape of your neck, trimming your beard line on front of neck.







Before Starting the Cut:



- Inspect the hair clipper making sure that it is free from hair and dirt. Seat the person so that their head is approximately at your eye level. Before cutting, always comb the hair so it is tangle free and dry.

Removal and Fitment of Trimmer Heads and Accessories

- Removal of the trimmer head refer picture. (Fig 1-2).
- When changing the trimmer heads or accessories, place the part in the correct position, align with the body and the lock and press the parts to clip into position. (Fig.3-4).
- Match the positioning comb from front to back and lock with the trimmer head. (Fig.5-6).

Removal and Fitment of Trimmer Heads and Accessories

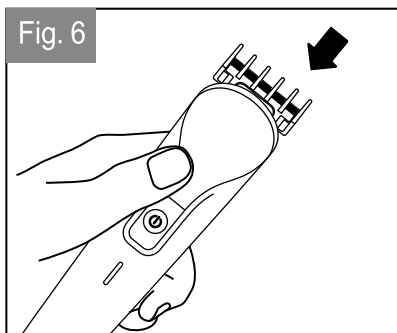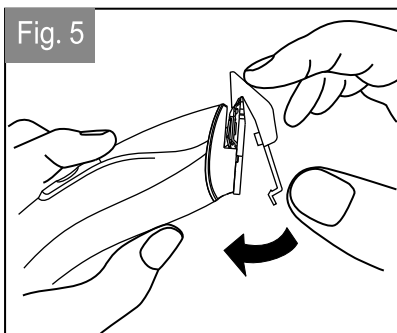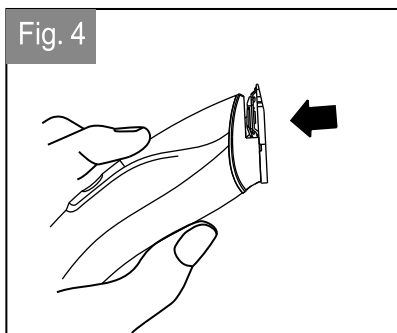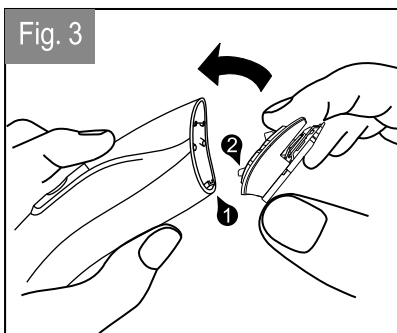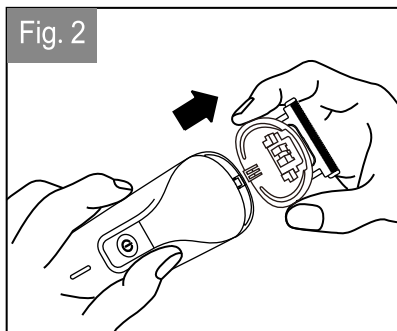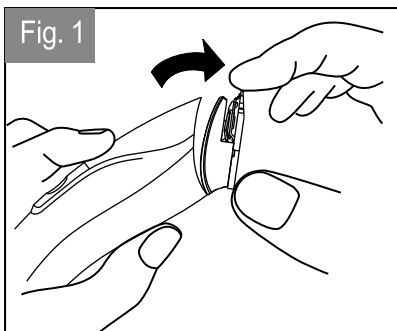

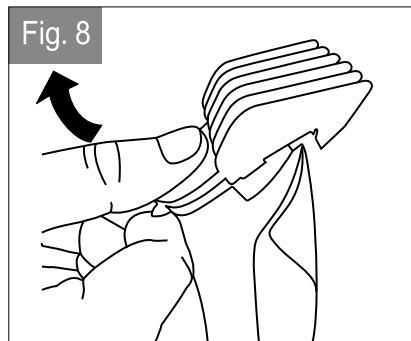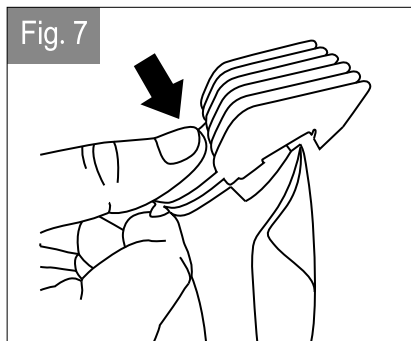



Clipper Combs

- Press down on the arrow button with your thumb and pull upward with index finger to remove the guide comb. (Fig.7-8)
- The two hair clipper combs (short and long) can each provide 12 different trim lengths (#1:3-15mm, #2:18-30mm) simply by turning the rotary adjustment dial to the desired setting.
- The beard comb can provide 12 different trim lengths(1-12mm) again, by simply using the rotary adjustment dial to the desired setting.
- Turn the rotary dial clockwise for a shorter length, anti-clockwise for longer length.
- Use the lock/unlock button in the locked position to prevent inadvertent turning of the rotary dial.

CLEANING AND MAINTAINING YOUR HAIR CLIPPER

When cleaning the appliance, remove the accessories and trimmer head. Then use the cleaning brush, clear the dust by cleaning the inside parts. (Fig. 9-10).

The trimmer heads and accessories can be gently rinsed with water, but it is recommended to immediately dry using a lint free cloth.

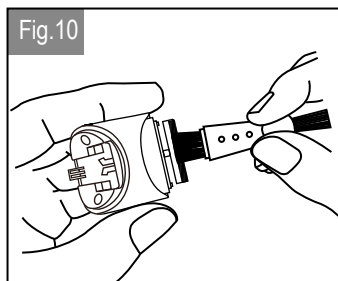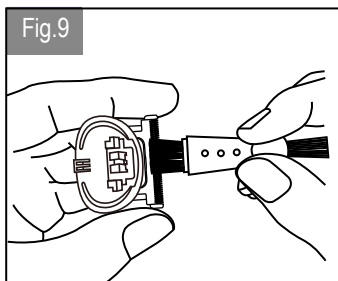

AFTER EACH USE

1. Turn the trimmer off.
2. Gently brush the remaining hairs away / rinse under warm water from the guide comb and trimmer blade.

CLEANING WARNINGS

- Only the guide comb attachment and trimmer blade may be removed from the product for cleaning.
- Cleaning should only be done with a soft brush, such as the brush supplied with the product.
- Only use the light-grade oil supplied or sewing machine oil on the blades.
- Do not use harsh or corrosive cleaners on the units or their blades.
- Do not submerge in water as damage will occur.

HOW TO USE YOUR HAIR CLIPPER

For general hair cutting:

Note: For even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the largest comb attachment.

STEP 1 – Nape of the neck

- Set the comb to 3mm or 6mm.
- Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
- Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

STEP 2 – Back of the head

- With the comb set at 12mm or 18mm, cut the hair at the back of the head.

STEP 3 – Side of the head

- Set the comb to 3mm or 6mm, trim sideburns. Then change the setting to 9mm and continue to cut the top of the head.

STEP 4 – Top of the head

- Use the longer length comb attachment and set it to 24mm or 27mm then cut hair on top of the head against the direction in which the hair normally grows.
- Always work from the back of the head.

STEP 5 – The finishing touches



- Use the clipper without an attachment comb for close trimming around the base and

Sides of the neck.

- To produce a clean straight line at the sideburns, reverse the hair clipper. Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

To Thin and Taper the Beard / Moustache (Fig.11-12)

- Attach a guide comb to the trimmer. If you are trimming for the first time start with the maximum trimming length setting.
- Turn the unit on.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the personal groomer through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush/rinse off.

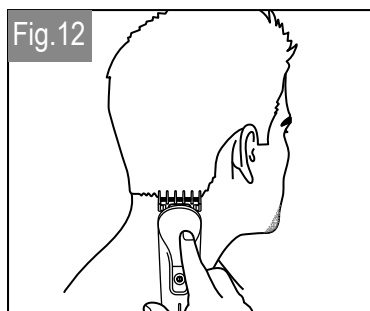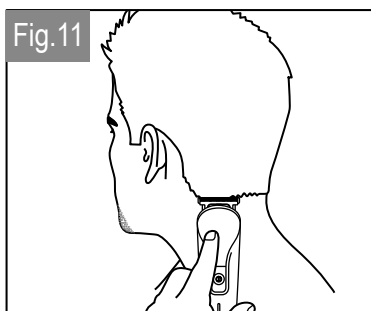

ATTACHING AND REMOVING THE TRIMMER COMB ATTACHMENT

CAUTION: Always ensure the trimmer is switched off before changing any attachments.

HOW TO USE YOUR EAR AND NOSE HAIR TRIMMER

Operation

Ensure a charged battery is fitted, Refer earlier section “FITMENT OF BATTERY TO THE NOSE AND EAR HAIR TRIMMER”. Do not use if the battery is near flat, as the trimmer will not cut hairs efficiently and may tend to grab and pull hairs.

Trimming operation:

Remove the protecting cap by pulling it from the unit. Switch the trimmer on, the indicator LED light will activate.

Trimming nose hair:

Make sure nasal passages are clean, Face a mirror and switch on the unit, the indicator light switch on, then slowly move the cutting head in and out of each nostril to remove unwanted hair.

Trimming ear hair:

Bring the blade head close to the external part of the ear, and moving it slowly remove the hairs. Repeat this operation in the other ear.

Trimming beard and sideburns:

For finer detail trimming, the ‘beard and sideburns trimmer head’ can be used.

Remove the nose and ear hair trimmer head by twisting counterclockwise and lifting off the body.

Fit the beard and sideburns trimmer head by twisting clockwise onto the body and locking into position.

Start with the edge of the beard line and gently lower the trimmer blade onto your skin. Slowly draw the trimmer away from the beard line.

living & co.



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we back them up with a 2 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 2 year warranty when
Accompanied by proof of purchase.

IM Version 1.0 –June, 2021