

living & co.

Stick Mixer



INSTRUCTION MANUAL

MODEL: HB6020R-SA

AFTER SALES SUPPORT

  0800 422 274

CONTENT

IMPORTANT SAFEGUARDS..... 1
Part Name 3
Operating 5
Cleaning & Maintenance 8
Product specification 8
Environmental protection..... 9

IMPORTANT SAFEGUARDS

Caution

For safety reasons and to avoid damage to the appliance or injuries to people, please follow all the safety instructions below. Ignoring safety warnings may result in injuries.

This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

1. Read all instructions.
2. This appliance is for household use only. Do not use outdoors.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Unplug from outlet when not in use and before cleaning.
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. Children should be supervised to ensure that they do not play with the appliance
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
8. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling, or cleaning.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.

IMPORTANT SAFEGUARDS

Caution

10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use the appliance for other than intended use.
12. To disconnect turn the control to OFF, then remove plug from wall outlet.
13. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
14. Do not immerse the appliance in water or any other liquid.
15. This appliance is intended to be used in household and similar applications such as: -staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
16. Children shall not play with the appliance.
17. To protect against electrical shock, do not immerse cord, plug or appliance in water or other liquid.
18. Warning: Misuse may cause potential injury
19. Do not place on or near a hot gas or electric burner, or in a heated oven.
20. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use


IMPORTANT SAFEGUARDS

⚠ Caution


21. Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
22. The appliance cannot be used for chopping ice or blending hard and dry substance, otherwise the blade could be damaged.
23. To reduce the risk of injury, never place cutting blade on the base without first placing the bowl properly in place.
24. Ensure the chopper lid is securely locked in place before operating the appliance.

Part Name


Blending rod attachment (Blend vegetables and fruits)

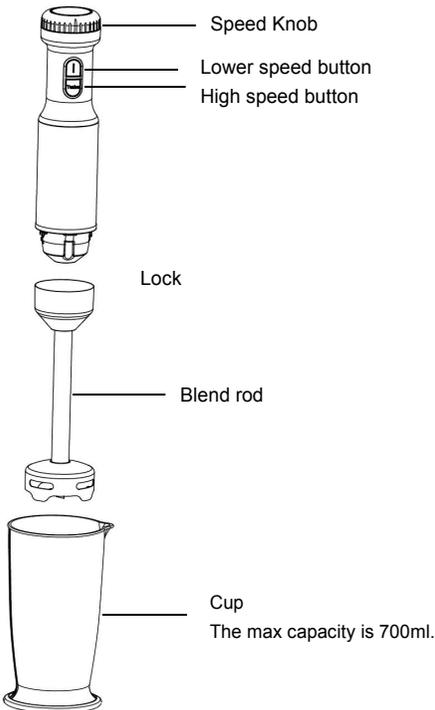

Chopper attachment (Chop meats and making garlic paste)

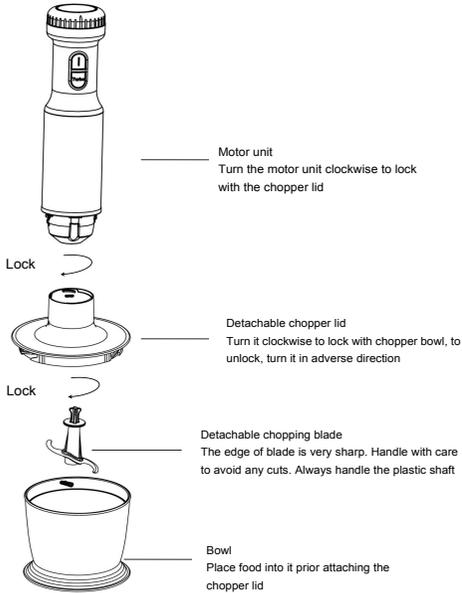

Whisk attachment (Whisk egg whites and cream)

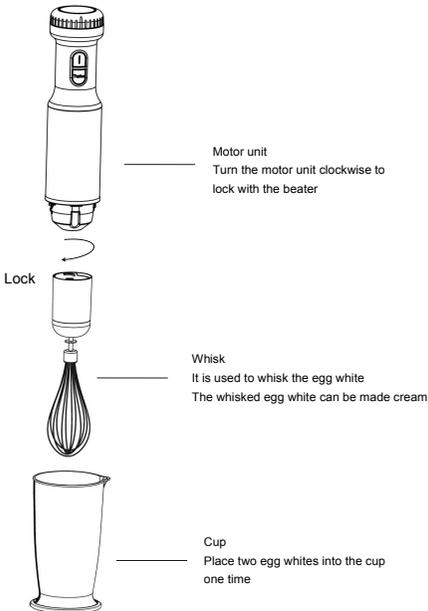

Operating

Before first use, clean the blender according to the section of “quick cleaning”.

The units running time without load cannot exceed 15s.

Important: The blending blades are very sharp, handle with care. Ensure that the hand-held blender is unplugged from the power outlet before assembling or removing attachments.

Blending

1. Insert the blending rod into the motor unit, when inserted correctly in place, a click will be heard.
2. Add correct fruits or vegetables to be blended into the cup. The amount of food shall not exceed 700g.
3. Plug the appliance into a power outlet and switch on.
4. Lower the blade into the ingredients, select the speed setting by rotating the speed dial, then press and hold the On/Off button.
NOTE: The unit will run at the highest speed when pressing and holding turbo button.
5. Release the On/Off button to stop operating when the ingredients consistency is obtained.

Note:

Usually a certain amount of purified water has to be added to facilitate the smooth running of the appliance when blending hard fruit and vegetables. If blending carrot, please cut the carrot into small pieces (15mmX 15mmX15mm).

REFERENCE

FOOD TYPE	SPEC	WEIGHT	SPEED
Carrot (apple, pear etc.)	Cut into 15mm*15mm*15mm	Carrot: 280g Water: 420g	High speed

Chopping

CAUTION: Max operating duration/time cannot exceed 60 sec and only wait until the unit is cooled to room temperature before performing further operation.

1. Place the chopper bowl on a clean, level surface.
2. Assemble the stainless chopping blade into the chopper bowl, as shown in Fig.1.
3. Place ingredients into the chopper bowl.
Note: remove the bone off the meat; cut into small pieces, then place the meat into a bowl, the max quantity of meat cannot exceed 200g when blending.
4. Attach the lid onto the chopper bowl, make sure the tube on the inside wall of bowl aligns with the groove of the lid, turn it in a clockwise direction until it locks into position. (See Fig.2) To detach the lid, turn in an anti-clockwise direction.
5. Insert the motor unit into the hole of the chopper lid, and turn in clockwise direction to lock. (See Fig.3)
6. Plug in the appliance to a power outlet. Press and hold the low speed button to start operating. At the same time you can select the desired speed setting by dialing the speed control dial, there are five settings: 1, 2, 3, 4, 5 (from low speed to high speed).
7. Alternatively you can start operating by press and holding the high speed button (turbo button), the appliance will operate at the highest speed.
Note:The speed will not change even if you dial the speed control dial.
8. Stop the appliance by releasing the low speed button or high speed (Turbo) button of the main motor unit.
9. After finishing chopping, unplug the power outlet.
10. Open the chopper lid by turning it anti-clockwise and remove the chopped food.

Caution:

- To reduce the risk of injury, never place the cutting blade on the base without first connecting the bowl properly in place.
- Be sure the chopper lid is securely locked in place before operating the appliance.
- Never remove the chopper lid with the motor unit in place.

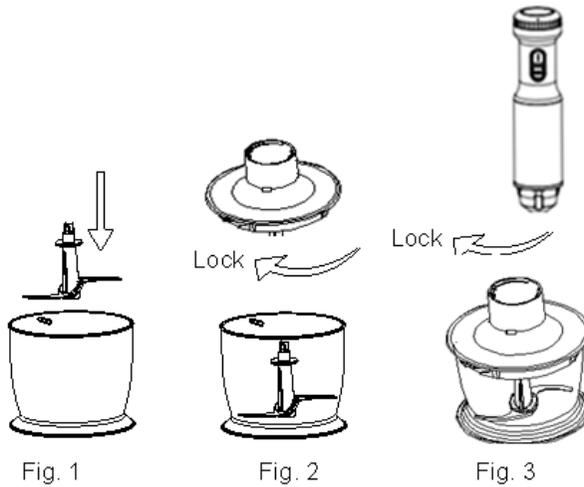


Fig. 1

Fig. 2

Fig. 3

Whisking

Caution: Max operation duration cannot exceed 60 sec and only wait until the unit is cooled to room temperature before performing next operation cycles.

1. To assemble the egg beater with the motor unit, turn the whisk clockwise direction until it tightens. To disassemble, just turn in the anti-clockwise direction.
 2. Plug the hand-held blender to a power outlet and turn on.
 3. Place egg white or ingredients to whisk into the cup.
 4. Lower the hand-held blender into the food. Press and hold the low speed button to start operating. At the same time you can select the desired speed setting by dialing the speed control dial, there are five settings from low speed to high speed.
 5. By pressing and holding the high speed button (turbo button), the appliance will operate at the highest speed.
- Note:** The speed will not change even if you change the speed control dial.
6. To stop the hand-held blender, release the low speed button or high speed button (turbo) of the motor unit.

CLEANING & MAINTENANCE

1. Before cleaning, first switch off the appliance and then disconnect the power plug from the power outlet.
Note: Do not immerse the detachable stem of the blender in water due to the lubrication on the bearings may wash away overtime.
2. Wash the detachable stem under running water. Do not use abrasive cleaners or detergents. After finishing cleaning the detachable stem, place it upright so that any water which may have entered can drain out.
NOTE: The stem is dish washer safe and can be washed on the top rack.
3. Wash the cup, bowl, beater and blade in warm soapy water.
NOTE: The bowl and the beater are not recommended to place in a dishwasher as the plastic component deteriorates.
4. Wipe the motor unit with a damp cloth.
CAUTION: Never immerse it in water as an electric shock may occur.
5. Dry thoroughly.
CAUTION: Blades are very sharp, handle with care.

Quick cleaning

Between processing tasks, hold the hand-held blender in the cup half filled with water and turn on for a few seconds.

Product specification

Product name	Model No.	Rated voltage	Rated frequency	Rated power
Stick Mixer	HB6020R-SA	220 - 240V~	50-60Hz	200W

Environmental Protection

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 2 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 2 year warranty when accompanied by proof of purchase.