



CLEAR KETTLE 1.7L



INSTRUCTION MANUAL MODEL KEG5819-GS

AFTER SALES SUPPORT

☎ (NZ) 0800 422 274

Contents

IMPORTANT SAFETY INSTRUCTIONS	3-4
OPERATION	4
PRODUCT OVERVIEW	5
CARE AND CLEANING	6
REMOVAL OF MINERAL DEPOSITS	6
RESPONSIBLE DISPOSAL / WARRANTY	7

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using.
- We recommend the use of a power outlet with a rated current of 10A which is appropriately protected by an RCD. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- Do not fill kettle when positioned on the base, dry any excess or spilt water from the bottom of the body before placing it onto power base.
- Never leave the appliance unattended when in use.
- The attached base cannot be used for other than intended use.
- Do not operate the appliance without load to avoid damaging the heat elements.
- Unplug from the outlet when not in use.
- Do not let the cord hang over edge of table counter or touch hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
- Ensure that kettle is used on a firm, flat and level surface to prevent from overturning the kettle.
- To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Be careful when opening the lid for refilling when the kettle is hot.
- Close supervision is necessary when any appliance is used by or near children, ensure kettle is positioned where children can't touch.
- Do not touch the hot surface. Use the handle or the button.
- Extreme caution must be used when moving an appliance containing hot water.
- The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
- While boiling water, avoid to contacting steam from the spout when water is boiling or just after it has switched off.
- Unplug from outlet when not in use and before cleaning; Allow it to cool before putting on or taking off parts and before cleaning the appliance.
- Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.

IMPORTANT SAFETY INSTRUCTIONS


- If the supply cord is damaged, it must be replaced by a qualified and registered service person in order to avoid a hazard.
- Do not use the appliance for other than its intended purpose.
- The kettle can only use with the stand provided.
- If the kettle is overfilled, boiling water may be ejected.
- Do not use the kettle outdoors.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The kettle is not a Toy. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments;
- Save these instructions.
- The appliance must not be immersed.
- Warning: Avoid spillage on the connector / base stand.
- CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.
- CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

OPERATION

Before initial use

If you are using the kettle for the first time, it is recommended that you fill to the maximum level with fresh water, boil and empty (discard kettle comments), repeat twice, discarding the water. This process will remove any impurities that were within the kettle as a result of the manufacturing process.

PRODUCT OVERVIEW

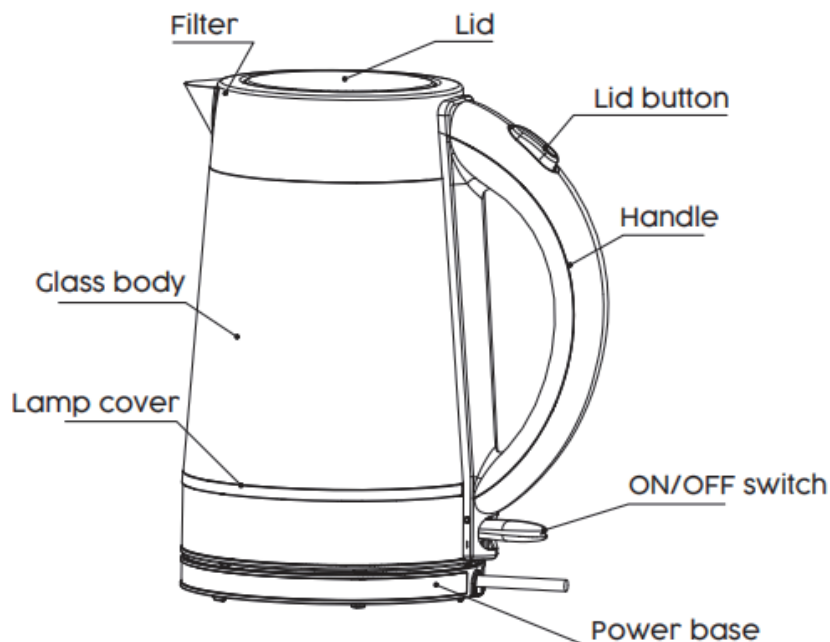

OPERATION

How to use

1. To fill the kettle with water, remove it from the power base and open the lid by pressing down on the lid button, fill with the desired amount of water. Always fill the kettle between the minimum (0.5L) and maximum (1.7L) marks. Too little water will result in the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.

2. Close the lid. Position the kettle on the power base in place. Make sure the kettle contact with the power base completely.

CAUTION: Ensure the lid is firmly closed. The kettle will spout if the lid is left open. CAUTION: Do not pull the lid when you are pressing the lid button.

3. Lift the kettle from the power base and then pour the water.

CAUTION: Take care when pouring the water from your kettle as boiling water may result in scalding. Take extra care if opening the lid when the kettle is still hot.

4. The kettle may be stored on the power base when not in use.

NOTE: Switch off the socket outlet or disconnect the plug when the kettle is not in use.

AFTER SALES SUPPORT

☎ (NZ) 0800 422 274

Boil-dry protection

Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

CARE AND CLEANING

Always disconnect the appliance from the power outlet and leave it to cool down completely before cleaning.

Never immerse the kettle or cord in any liquid, or allow moisture to contact with these parts.

REMOVAL OF MINERAL DEPOSITS

Mineral deposits in tap water may cause the kettle interior to discolor. To remove this build-up, use non-toxic Liquid Descaler.

Alternatively:

1. Fill the kettle with 1 cup of white vinegar and the remainder of water and be allowed to stand overnight. **Do not boil.**
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth, fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use.

Cleaning external housing

Wipe the external housing with a mild and damp cloth or cleaner.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.

Cleaning the filter

The spout filter should be regularly cleaned using a damp cloth.

Storage

When not in use or storage, the power cord may be wound around the cord storage under the base of kettle.

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area. Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 2 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 2 year warranty when
Accompanied by proof of purchase.

IM Version 1.0 – November, 2022

AFTER SALES SUPPORT

  **0800 422 274**