

living & co.

Hot Air Brush



Model CL-8208

INSTRUCTION MANUAL

AFTER SALES SUPPORT

☎ NZ 0800 422 274

Contents

Before using	2
Safety instructions	2
Important	4
Product Overview	5
Using your Hot Air Brush	5
Styling guide	6
Cleaning	6
Fault finding - no operation	7
Technical Data	7
Disposal	7
Warranty	8

Before using

You may already be familiar with using a hot air brush or similar appliance but do please take time to read these instructions. They are designed to familiarise you with the features and to ensure you get the best out of your purchase.

Your safety and the safety of others is important. Please, therefore ensure you also read the safety instructions before you operate this hot air brush.

Safety instructions

Read all the safety instructions before first use of your hot air style.

WARNING:

THIS APPLIANCE IS LIVE UNTIL THE POWER IS DISCONNECTED AT THE MAINS.

TO AVOID RISK OF ELECTRIC SHOCK:



- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure they do not play with the appliance.
Always unplug the appliance after use.
- Do not use or store the appliance where it can come into contact with water.
- If the appliance falls into water, UNPLUG IT IMMEDIATELY. Do not reach into the water until the power has been disconnected.
- This appliance should never be left unattended when plugged in.
- Do not pull or wrap power cord around the body of this appliance
- Close supervision is necessary when this appliance is used by, on, or near children.
- Do not use attachments not recommended by the manufacturer.
- Never operate the appliance if it has a damaged cord or plug or if it has been dropped into water.
- Keep the cord away from heated surfaces.
- Never block the air vents at the rear of the enclosure, or place it on a soft surface where the air vents could be restricted.
- Keep air vent free of dust, hair, etc and do not insert any objects into the vents.
- Do not use outdoors, or where aerosol products are being used.
- Do not direct hot air towards eyes.
- Do not put the appliance down while it is operating.
- Check that the voltage rating of this appliance matches that of your supply.

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

Important

The mains lead of this appliance is not replaceable by the user. If the supply cord is damaged, it must only be replaced by a qualified engineer as special tools are required.


Safety considerations

- Position the power supply lead so that it is not likely to be walked on or pinched by things placed on or against them.
- Do not use the appliance in humid or damp conditions. Do not allow it to get wet i.e. dripping or splashing, as this may be dangerous.

Ventilation

- The slots and openings on the appliance are for ventilation. Do not cover or block them as it could lead to overheating.
- NEVER let children push anything into the holes or slots on the enclosure.

Product Overview

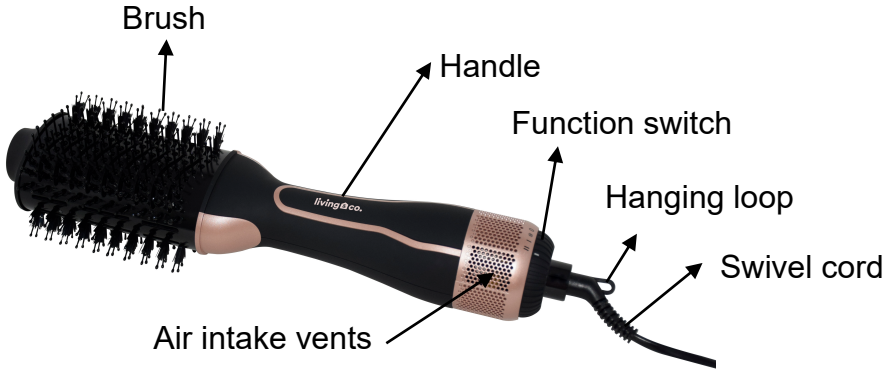

Function switch: rotate clockwise and counter-clockwise to adjust to your desired function:

- 0 : power off position
- ❄ (C) : Cool Shot (Low heat temperature)
- I (1) : Mid temperature with gentle stream of air
- II (2): High temperature with strong stream of air

Using your Hot Air Brush

Switching on

Mains power

Unwind the power cable and plug into the mains socket and switch on.

Set the On/off switch to the required setting (C or 1 or 2).

Switching off

When you have finished, set the On / Off switch to the Off (0) position.

Styling guide

- Shampoo and condition your hair. Rinse the hair thoroughly. Towel blot hair to remove excess moisture. Divide your hair into sections. Using the hot air brush, direct hot air through a section of hair at a time. Move the hot air brush steadily across each section so that hot air passes through the hair. Direct air flow at hair, not scalp.
- Keep the hot air brush's air intake vents unobstructed and free from hair while operating.
- To avoid over-drying, do not concentrate heat on any one section for any length of time. Keep the hot air brush moving as you style.
- For quick styling, dampen hair with a mist of water before styling with the hot air brush.
- When using the hot air brush to create curls and waves, dry hair almost completely on the warmest setting, then finish styling using the lower setting.

Cleaning

- Make sure the hot air brush is unplugged from the mains supply.
- Do not use liquid or aerosol cleaners.
- Clean your appliance with a soft, dry (not wet) cloth.

Fault finding - no operation

- Make sure it is plugged into the main supply and the socket is switched on.
- Make sure the ON/OFF switch is in an on position.
- Check that the supply cord is not damaged.
- Ensure the plug is fully inserted into the socket outlet.
- If the fan is not operating but the product is producing heat, this could indicate that it has been dropped or damaged causing the fan to be jammed - switch off immediately to prevent overheating.

Technical Data

Model name	Rated Voltage	Frequency (Hz)	Rated power input (W)
CL-8208	AC 220-240V	50-60	1000

Disposal

- At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local council regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

living & co.



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we back them up with a two year warranty when accompanied by proof of purchase.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

IM Version 1.0 – May 2023