

living & co.

ELECTRIC FRYPAN 1500W



INSTRUCTION MANUAL JBQ-088

AFTER SALES SUPPORT
☎ NZ 0800 422 274

CONTENTS

	Page
IMPORTANT SAFEGUARDS	2-3
PRODUCT OVERVIEW	4
GETTING STARTED	4
USING YOUR FRYPAN	5
CLEANING AND MAINTENANCE	6

1 living & co.

AFTER SALES SUPPORT
☎ NZ 0800 422 274

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions and save them for future reference.
- This product is designed for indoor use only.
- Use only the voltage specified on the rating plate.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacture and may cause electric shock or injury.
- Ensure the appliance is connected to a power point with an Earth contact. If you are unsure, check with a qualified electrician.
- To protect against the risk of electric shock, do not immerse the cord or plug in water or other liquids.
- Caution: Should be taken when handling a hot appliance, as it can cause serious burns. Also, be careful when removing the lid while cooking as steam can escape and cause burns.
- Do not use this appliance on a wet surface, or where it can fall or be pushed into water. i.e., near sinks, baths, or showers.
- Do not reach for an appliance that has fallen into water. Switch off at the power supply and unplug immediately.
- This appliance heats up when in use. To avoid burns do not let bare skin touch hot surface. Use the handles only.
- Position the power cord so that it is safely out of the way and cannot be tripped over.
- Do not operate the appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to qualified electrical person for examination, electrical or mechanical adjustment. Service or repair.
- This appliance is intended for household use only and not for commercial or industrial use.
- Use only accessories recommended or supplied by an authorized service centre or qualified dealer. The use of accessories not intended for use with this appliance may cause injuries to the user or damage the appliance.
- Do not place this unit on other appliances, uneven surfaces or where it could be subject to heat sources (i.e. ovens/ hot plates), direct sunlight or excessive dust. Always operate on flat horizontal surface.
- Do not operate this appliance underneath or near flammable or combustible materials such as curtains.
- This appliance should always be switched off before connecting or disconnecting from the power outlet.
- Do not remove plug from the power outlet by pulling the flexible part of the cable - always grip the plug body.
- Always disconnect the plug from the power outlet before moving, cleaning or emptying of food.
- This appliance is intended to be used in household, and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments

NOTE: When your Frypan is heated for first time, it may emit slight smoke or odour. This is normal with many heating appliances and is not hazardous. This does not affect the safety of your appliance, it should disappear after few minutes of use. Use in a ventilated area with airflow to help disperse.



(CAUTION: Hot surface): The surfaces are liable to get hot during use.

AFTER SALES SUPPORT
☎ NZ 0800 422 274

living & co. 2

IMPORTANT SAFEGUARDS (Continued)

- Do not allow the cord to hang over the edge of the work surface or come into contact with heated surfaces during operation.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split.
- Allow the appliance to cool before cleaning or storing.
- Keep this appliance out of reach of children and make sure they cannot pull the power cord.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or material capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Any type of servicing, apart from standard cleaning, must be carried out by an authorized service center or qualified dealer. There are no user serviceable parts in this appliance.
- This appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in an electric oven.
- Do not operate this appliance on the same circuit as any other high wattage appliance as this may cause a short circuit.
- Use only suitable utensils for non-stick surfaces to avoid scratching the surface.
- WARNING: Charcoal or similar combustible fuels must not be used with this appliance.
- Do not leave the appliance unattended when in use.
- Take care when removing the temperature control unit as the probe may be hot.
- The temperature control probe must be removed before the appliance is cleaned and the appliance power inlet must be dried before the appliance is used again.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the power outlet before cleaning.

CAUTION: DO NOT IMMERSE THE APPLIANCE IN WATER OR LIQUID

- Only use the temperature control probe supplied with this appliance.
- Attach the temperature control probe to the appliance before connecting to the power outlet
- Dispose of the packaging in a responsible manner and keep all packaging materials away from children.
- Disconnect from the power supply plug when not in use.
- The use of this appliance with an extension cord is not recommended.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the appliance.
- It is recommended to have a residual current device (safety switch) installed by qualified electrician to provide additional safety protection when using all electrical appliances
- Never operate the appliance with wet hands.

3 living & co.

AFTER SALES SUPPORT
☎ NZ 0800 422 274

PRODUCT OVERVIEW



1. Cool touch lid knob
2. Cool touch Handles
3. Removable thermostat controller
4. Tempered glass lid
5. Non-stick coating cooking surface.

GETTING STARTED

Before First Use

- **CHECK** the condition the product has been received in. If any parts appear broken or there is any damage to the cord/plug, the product should not be used and should be returned for replacement.
- **CLEAN** If you are using the Frypan for first time, it is recommended to boil a pan of water (fill half way) and then discard the water. Wipe the cooking surfaces with a sponge or dishcloth in hot soapy water, rinse well. Then wipe the surface down with a damp cloth. NEVER use steel wool or other abrasive cleaning pads as this will cause permanent damage to the cooking surface.
- **WARNING:** Ensure the inlet connector is thoroughly dried after washing and before use.
- **CONDITION** - The cooking surface should be conditioned to ensure non stick cooking. Apply a thin coat of cooking oil with a cloth or paper towel to the cooking surface. Turn the thermostat control onto high and leave to operate for several minutes. Switch off and allow to cool.

CAUTION: Don't turn to "MAX" and dry boil for long time without water or liquid, this may damage the heating element and the non stick coating.

NOTE: When your Frypan is heated for first time, it may emit slight smoke or odour. This is normal with many heating appliances and is not hazardous. This does not affect the safety of your appliance, it should disappear after few minutes of use. Use in a ventilated area with airflow to help disperse.

USING YOUR FRYPAN

- 1). Ensure you are cooking on a dry, level and heat resistant surface.
WARNING: Always allow 20cm of space around the exterior of the appliance when in use. Never use near curtains, under cupboards or near flammable materials.
- 2). Connect the thermostat controller with the frying pan by aligning the pins into the appliance inlet surround, fully insert coupler into the inlet.
WARNING: Always ensure the inlet and coupler are clean and dry and free from foreign objects.
Note, if the coupler cannot be inserted, check that there are no foreign objects in the appliance inlet. Also, check that the inlet pins have not been bent out of shape (forcibly inserting the coupler at the wrong angle can cause damage).
- 3). Connect the power cord and plug into a socket outlet, taking care to ensure placement of the supply cord avoids contact with any hot surfaces. Switch the socket outlet on.
- 4). Brush the cooking surface with a small amount of cooking oil.
- 5). Adjust the controller temperature dial to your desired setting.
- 6). Allow several minutes for the frying pan to reach the set temperature before adding food items.
- 7). When cooking complete, turn the controller to "0", switch the wall socket off, disconnect the supply plug from the socket outlet and leave the appliance to cool.
- 8). When cooled, follow the cleaning and maintenance section later in this manual.

Heat Level	Approximate Temperature (°C)	Food type or function
0 - 1	0 - 120	Warming
1 & 2	120 - 180	Roasted food, Simmering (e.g. sauces)
3 & 4	180 - 220	Pancakes, scrambled eggs, bacon, braising, steaming (e.g. casseroles, curry), rice, pasta, steaming foods (e.g. vegetables)
5	220 - 240	Stir-frying, grilled foods, pizza, shallow frying

NOTE:

- If frying with oil, etc, use extreme caution, if the oil is over-heated, it may catch on fire. Should this occur, DO NOT try to extinguish the fire with water as this will only spread. Use a fire blanket to extinguish the flames.
- This Electric frypan is not suitable for deep frying.
- The controller marking "0" does not indicate "OFF", this only indicates the lowest temperature setting.
- The indicator light on the controller will turn on while the pan is heating and will turn off when the pan has reached the desired set temperature.
- You will notice during cooking that the indicator light will turn on and off at different intervals which indicates the temperature setting is being maintained.

5 living & co.

AFTER SALES SUPPORT
☎ NZ 0800 422 274

CLEANING AND MAINTENANCE

- It is important to look after the non-stick coating on your pan to ensure trouble free operation. Using a non-stick surface allows you to cook without fats or oils.
- Do not let the Frypan get too hot without either oil or food on the cooking surface as high temperatures can cause discoloration of the surface and will reduce the life of the non-stick surface.
- Normally, a medium heat setting on your pan will give adequate heat for most of your cooking requirements.
- If high temperatures are required for your cooking needs, it is best to introduce the heat slowly by preheating the pan on a medium setting for a few minutes before turning the heat up further.
- The use of plastic or wooden utensils will prolong the life of the non-stick coating. Metal utensils will damage the surface.
- To clean the non-stick surface, turn the temperature control to the "0" setting, switch the power off at the power outlet, unplug the cord and remove the temperature controller from the frypan.

CAUTION: the controller may be hot after use, in particular the metal probe, take care when removing it.

- The thermostat controller should not require cleaning, but if necessary, wipe externally with a slightly damp cloth only. NEVER immerse the controller in water or any other liquid.
- Let the pan cool before washing it. NEVER PUT COLD WATER INTO A HOT FRYPAN as this may cause the body to buckle.
- Wash the non-stick surface, both inside and out in clean warm water and mild detergent after each use.
- If you do not clean the pan after use, it will result in a build-up of food residue, making it difficult to clean later. The build up will also cause damage to the non-stick surface.
- Do not use steel wool products or scouring pads on the non-stick surface.
- To remove stubborn food residue, use a plastic mesh pad, or other available products stating they are safe to use non-stick surfaces.
- To clean the glass lid, wash in warm soapy water, rinse with clean water and dry. Do not use steel wool or scouring pads on the lid.
- Do not leave plastic or wooden utensils in the pan while it is hot or in use.
- Do not cut directly on the non-stick surface, this will damage the coating.
- Do NOT place the appliance, controller or lid in the dishwasher, hand wash only.

AFTER SALES SUPPORT
☎ NZ 0800 422 274

living & co. 6

7 living & co.

AFTER SALES SUPPORT
☎ NZ 0800 422 274

AFTER SALES SUPPORT
☎ NZ 0800 422 274

living & co. 4



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 2 year warranty. Now you too can relax knowing that you are covered. Customer Helpline NZ: 0800 422 274 This Product is covered by 2 year warranty when accompanied by proof of purchase