

142.5 mm

living & co.

Steam Iron



**INSTRUCTION MANUAL
MODEL: YPF-6549P**

AFTER SALES SUPPORT
☎ NZ 0800 422 274

210.0 mm

Contents

Introduction and Safety Instructions	2-3
Product Overview	4
How to use your iron	5-8
Cleaning and Storage	8
Warranty	9

INTRODUCTION AND SAFETY INSTRUCTIONS

INTRODUCTION

Before use, please read these instructions carefully and keep them in a safe place for future reference. When passing on the appliance to another person, make sure to include these instructions for use.

This appliance is intended for ironing textiles for private use only. It is not suitable for commercial use.

Only use this appliance for its intended use as described in this instruction manual. In order to avoid any risks or hazards possibly involved in the use of electric appliances, closely follow the safety instructions given in this manual.

SAFETY INSTRUCTIONS

When using any electrical product, always follow these basic safety precautions:

- Read this user manual carefully before first use and save it for future reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product has been designed for domestic use only. In case of any commercial use, inappropriate use or failure to comply with the instructions, the warranty will not apply.
- Before connecting your appliance, check if the mains voltage is the same as the voltage indicated on your appliance and that the power outlet has an earth connection. If unsure check with an electrician.
- Before each use ensure that the electric cord or any other parts on the iron are not damaged. If any damage is evident, do not use.
- If the supply cord is damaged, it must be replaced by qualified electrical person only.
- Keep the iron and its cord out of reach of children when it is connected to mains power or when cooling down.
- Never direct the steam towards persons or animals. Never direct the steam jet towards any other electrical or/and electronic appliances.
- DO NOT use the iron if it has been dropped, if there are visible signs of damage, malfunction or if it is leaking after being filled with water.
- High temperatures develop at the soleplate of the steam iron which can cause serious burns. Therefore, always hold the appliance by its handle and warn others (especially children) against possible hazards (e.g. scalding from steam or hot water).


SAFETY INSTRUCTIONS - CONTINUED

- Always make sure the appliance is switched OFF, unplugged and cooled down before cleaning.
- **IMPORTANT!** The iron must not be left unattended whilst connected to mains power and before it has cooled down. The soleplate of the iron can become extremely hot and may cause burns if touched.
- Do not unplug the appliance by pulling on the cord or on the appliance. Always disconnect from mains power by pulling on the plug.
- Never immerse the iron, the stand, the power cord or the plug in water or other liquid. Never wash these parts under a water tap.
- Do not use the appliance with wet hands.
- Do not use the appliance outdoors.
- The plug must be removed from the socket-outlet before filling the water reservoir with water.
- The iron must be used and rested on a flat, stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- To avoid an overloaded on the electrical circuit, do not operate another high power appliance on the same circuit.
- Only fill with water, no other liquids or additives!
- **WARNING!** Never attempt to iron clothes on the body!

FIRST TIME USE:

- Due to manufacturing processes, some of the metal parts of the iron may have been in contact with lubricants, as a result the iron may emit a slight smoke or odour when switched on for the first time. Operate in a well ventilated area for first use. Any odour should clear after subsequent uses.
- Before using for the first time remove any protective films or stickers from the soleplate and the cabinet. Clean the soleplate with a soft damp cloth.
- When using the iron for the first time, test it on an old piece of fabric to ensure that the soleplate and water tank are completely clean.

PRODUCT OVERVIEW

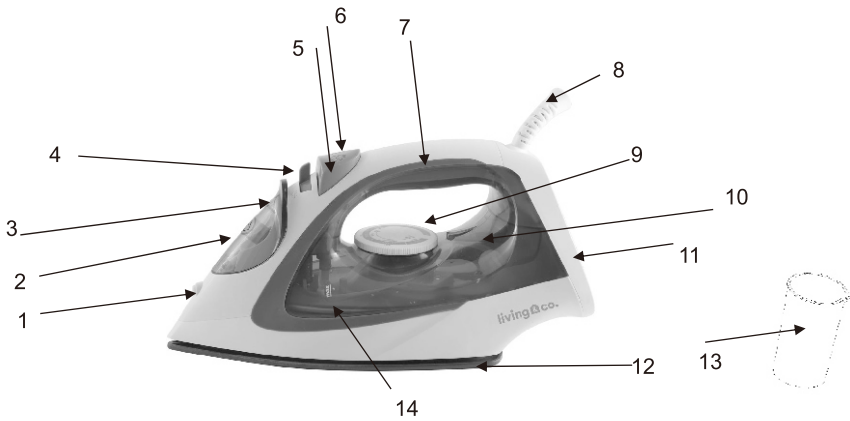

- | | |
|-----------------------------|---------------------------------------|
| 1. Spray nozzle outlet | 2. Water filling inlet |
| 3. Water inlet cover | 4. Steam control /Self-cleaning lever |
| 5. Steam shot button | 6. Spray button |
| 7. Handle | 8. Cord guard |
| 9. Temperature control dial | 10. Power Indicator light |
| 11. Heel stand | 12. Soleplate |
| 13. Measuring cup | 14. Maximum water level marking |

Technical Specifications

Model	YPF-6549P
Power Consumption	2200W
Rated Voltage	220-240VAC 50/60Hz

HOW TO USE YOUR IRON

FILLING THE WATER TANK

- Ensure that the iron is cold and not connected to the mains power outlet socket.
- Open the hinged water inlet cover (3) by gently pulling outwards, hold the iron in a tilted position and fill the water tank with clean cool water, using the measuring cup.

CAUTION! DO NOT exceed the max level on the water tank.


- Close the water inlet cover by pressing inwards until it clicks to lock. Ensure the cover is properly closed to avoid water spillage.

CAUTION: To avoid calcium deposits which can cause staining on clothing, we recommend using distilled water to fill the water tank when using the steam function.

IMPORTANT! To avoid damage or blockage of the steam iron, do not use any scented water or additives.

STEAM IRONING

This function can be used only at higher ironing temperatures.

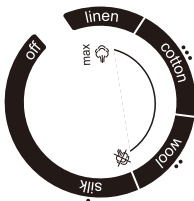

- Fill the water tank as described above.
- Position the iron vertically on its stand on a suitable flat stable surface
- Ensure that the steam control / self cleaning lever (4) is in the central position (OFF).
- Connect the plug to a suitable mains power outlet.

- Turn the temperature dial (9) to the desired fabric setting, but note for steam ironing, this **must** be within the range (Wool - Cotton - Linen). Moderate steam will be produced at the lower end (wool) and high steam output is produced at the upper end of the scale (linen).
- The power indicator light will come on, indicating that the iron is heating up. The light will switch off as soon as the selected temperature is reached and ready to use.
- Move the steam control lever (4) to the right side position and begin ironing.
- Press the steam shot button (5) to generate a burst of steam that can penetrate fabrics and smooth the most difficult and tough creases. Wait for a few seconds before pressing again.
- It is also possible to use the steam shot for straightening hanging clothes (vertical shot of steam). Press the steam shot button (5) in intervals.

CAUTION: If water drips from the soleplate (12), the set temperature might be too low. Either increase the temperature or wait a few seconds before pressing the button again to let the soleplate heat up.

NOTE: During ironing, the power indicator light on the iron automatically switches on/off as the thermostat maintains the set temperature (you may continue ironing during this process).

CAUTION: Always follow the recommended ironing instructions found on the garment.

HOW TO USE YOUR IRON (Continued)

DRY IRONING

1. Position the iron vertically on its stand on a suitable flat stable surface.
2. Ensure that the steam control (4) is on OFF  position
3. Connect the plug to a suitable power outlet.
4. Turn the temperature dial (9) to a desired setting.
5. The power indicator will light up and will turn off as soon as the selected temperature is reached. Now dry ironing can begin.

USING THE SPRAY BUTTON

Press the spray button (6) a couple of times to moisten the garment, this can assist with the ironing process. Before spraying make sure that there is enough water in the water tank.

NOTE: Do not spray water on silk.

USING THE STEAM SHOT BUTTON

Set the temperature dial (9) at MAX position, When the power indicator goes off, Press the steam shot button (5) to instantly provide a burst of steam to eliminate stubborn wrinkles.

The steam shot button can also be used when holding the iron in a vertical position. This is useful for removing creases from hung clothes, curtains, etc.

ATTENTION: To protect against burns or injury to persons, do not iron or steam fabrics while being worn on the body. Do not direct steam towards the body when ironing.

AFTER IRONING

- After use, rotate the temperature dial (9) to the OFF position and disconnect the iron from the mains power outlet socket.
- Let the iron cool down and empty the water tank to prevent built up of any residue in the water tank.

AUTO-OFF FUNCTION

The iron incorporates an automatic safety switch off function whereby, if no movement is detected for approximately 8 minutes, the iron will switch to stand-by. In the standby state, the power indicator will flash and the soleplate will begin to cool. The heating element will not switch back on until the iron is manually moved again. During normal use (hand held and with movement), the auto off function will not activate.

HOW TO USE YOUR IRON (CONTINUED)

SELF-CLEANING

The self-cleaning function should be used on a regular basis, depending on usage and the hardness of water used.

WARNING: Never pour white vinegar or any liquid cleaners into the water tank! Make sure the appliance is unplugged.

- Fill the water tank to maximum level.
- Select the maximum ironing temperature.
- Plug the supply cord into the wall socket.
- Unplug the iron when the indicator light has goes off.
- Hold the iron over the sink, press and hold the steam control /self-cleaning lever (4) in the left hand side position (marked ) and gently shake the iron forwards and backwards to allow any scale and other calcium deposits to expel with boiling water and steam. (Steam and boiling water will come out of the soleplate. Impurities and flakes (if any) will be flushed out.)
- Release the self-clean button as soon as all water in the tank has been emptied. Repeat the self-clean process if the iron still contains a lot of impurities.

TEMPERATURE CONTROL SETTING

- Always check garment label for ironing instructions before ironing garment.
- If the ironing instructions are missing, then the table below may help you.
- The iron heats up quicker than it cools down, therefore, you should start ironing the articles requiring the lowest temperature such as those made of synthetic fibre.
- If the fabric consists of various kinds of fibres, you must always select the lowest ironing temperature to iron the composition of those fibres.
- Silk and other fabrics that are likely to become shiny should always be ironed on the inner side.
- To prevent staining, do not spray water straight on silk or other delicate fabrics.
- Velvet and other textures that rapidly become shiny should be ironed in one direction with light pressure applied. Always keep the iron moving at any moment.
- Pure wool fabrics (100% wool) may be ironed with the iron set to steam position. Preferably set steam button to the maximum position and use a dry cloth between the garment and the iron for protection.
- Do not touch plastic buttons with a hot iron because they may melt.
- Be careful around zippers and similar items to prevent the soleplate from scratching.

HOW TO USE YOUR IRON (CONTINUED)

IRONING LABEL	KIND OF TEXTILE	FABRICS
	Synthetic	Acrylic, Polypropylene, Polyurethane
	Wool, Silk	Wool, Silk
	Cotton, Linen	Cotton, Linen
	Attention! This symbol indicates: DO NOT IRON!	

CLEANING AND STORAGE

Unplug the iron from mains power and allow it to cool down completely before cleaning and storing.

1. Clean the upper part of iron with a damp cloth. If necessary, use a mild detergent.
2. Do not use alcohol, acetone, benzene, scouring cleaning agents, etc., to clean the iron. Do not use hard brushes or metallic objects.
3. Remove any deposits on the soleplate with a damp cloth. To avoid scratching the finishing, never use a metallic pad to clean the soleplate, and never place the iron on a rough surface.
4. To remove synthetic residue from the soleplate, iron over an old cotton rag in high setting.
5. Always store the emptied iron horizontally on a stable surface with a cloth protecting the soleplate.



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase