




Hot Air Straightening Brush

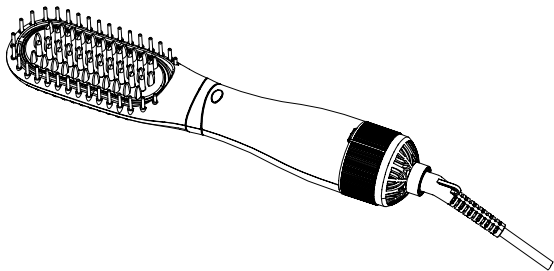

Instruction Manual Model: BY-811

Before operating this product, please read these instructions completely and save this manual for future use.

AFTER SALES SUPPORT

 **(NZ) 0800 422 274**

CONTENTS

Before using.....	2
Safety Instructions	2
Important.....	4
CAUTION.....	5
Product Overview.....	6
Heating modes / How to use	7
Cleaning	9
Fault Finding / Technical Data.....	10
Disposal.....	10
Warranty.....	11

Before using

You may already be familiar with using a hot air straightening brush or similar appliance but do please take time to read these instructions. They are designed to familiarize you with the features and to ensure you get the best out of your purchase.

Your safety and the safety of others is important. Please, therefore ensure you also read the safety instructions before you operate this hot air brush.

Safety Instructions

Read all the safety instructions before first use of your hot air style.

WARNING:

THIS APPLIANCE IS LIVE UNTIL THE POWER IS DISCONNECTED AT THE MAINS.

TO AVOID RISK OF ELECTRIC SHOCK:



- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.

- Do not use or store the appliance where it can come into contact with water.
- If the appliance falls into water, UNPLUG IT IMMEDIATELY. Do not reach into the water until the power has been disconnected.
- Do not use the hair styler while your hands are wet.
- Do not use the hair styler near inflammable material such as benzene, paint thinner, sprays, etc.
- This appliance should never be left unattended when plugged in.
- Do not pull or wrap power cord around the body of this appliance
- Close supervision is necessary when this appliance is used by, on, or near children.
- Do not use attachments not recommended by the manufacturer.
- Never operate the appliance if it has a damaged cord or plug or if it has been dropped into water.
- Keep the cord away from heated surfaces.
- The unit can be **very hot** when in use. Take care to avoid contact between the hot surface of the heating plate and bare skin, particularly around the ears, face and neck when in use.
- Care should be taken not to touch the heated plate of the appliance when it is switched on or just after it has been turned off. ALLOW AT LEAST 30 MINUTES TO COOL DOWN BEFORE PUTTING AWAY.
- Keep the appliance away from non-heat-resistance surfaces and never cover the appliance with anything (e.g. clothing or towels) when it is hot.
- Never block the air vents at the rear of the enclosure, or place it on a soft surface where the air vents could be restricted.

- Keep air vent free of dust, hair, etc. and do not insert any objects into the vents.
- Do not use outdoors, or where aerosol products are being used.
- Do not direct hot air towards eyes.
- Do not put the appliance down while it is operating.
- Check that the voltage rating of this appliance matches that of your supply.
- Always unplug the appliance after use.
- Do not attempt to repair, disassemble or modify the hair styler by yourself.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

Important

The mains power lead of this appliance is not replaceable by the user. If the supply cord is damaged, it must only be replaced by a qualified engineer as special tools are required.

Safety considerations

- Position the power supply lead so that it is not likely to be walked on or pinched by things placed on or against them.
- Do not use the appliance in humid or damp conditions. Do not allow it to get wet i.e. dripping or splashing, as this may be dangerous.

Ventilation

- The slots and openings on the appliance are for ventilation. Do not cover or block them as it could lead to overheating.
- NEVER let children push anything into the holes or slots on the enclosure.


CAUTION

- Do not put your hands on the air outlets or use them if they are damaged. You may get burned.
- Only use the hot air straightener brush for drying and styling human hair. Do not use it for children.
- Do not use the product if it is damaged.
- Do not touch the attachment as it becomes hot during and after use.
- Make sure hair does not get sucked into the air inlets.
- Do not use thinner, benzene or any other solvent to clean the hair style.
- This product is equipped with an automatic overheating protective device. If the hair styler overheats, it will generate cold air. Unplug it from the power socket. Allow it to cool down for a few minutes before using it again. Check that no fluff, hair etc. is in the air inlets and outlets before switching it on again.

First Use:

For the first few uses, there may be a slight burning smell, which is caused by residual oils used during manufacturing which have contacted the inner heating parts. This is normal and safe to use and will typically last for the first two uses. We suggest initial use in a well-ventilated area.

Product Overview

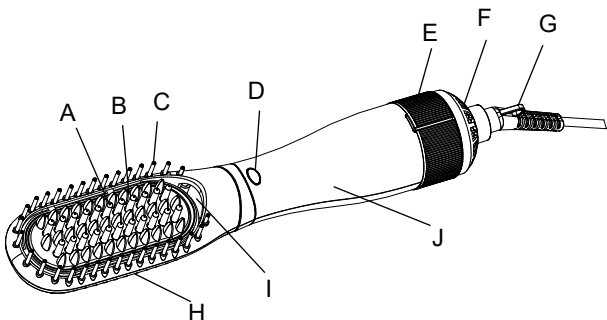

- A. Inner silicone soft comb
- B. Heating plate with integrated comb
- C. Smoothing comb
- D. LED Indicator lights:
(1: green light; 2: red light; 3: red & green light)
- E. Power Switch
0=OFF Position
1= Hair straightening mode
2= Hot air brush mode
3= Hair straightening plus Hot air brush mode
- F. Air inlet grille
- G. Power cable Hanging-hook
- H. Brush head
- I. Hot air outlet
- J. Handle

Heating modes:

- Switch position “0” is OFF, no operation.
- Switch position “1” Hair Straightening mode, the green LED indicator light will operate, and the ceramic coated heating plate will heat up, regulating to a temperature of approximately 210degC.
- Switch position “2” Hot Air Brush mode, the red LED indicator light will operate, and hot air will be discharged from the outlet, over the brush area.
- Switch position “3” Hair Straightening plus Hot Air brush modes operate together. Both the green and red LED indicators will operate. Hot air will be discharged from the outlet and the ceramic coated heating plate will heat.
- When you have finished, set the switch to the Off (“0”) position.

How to use:

General operation

- Check the heating mode switch is set to the off (“0”) position.
- Unwind the power cable and plug into the mains socket and switch on.
- Select your desired heating mode. For modes “2” or “3” allow 1 or 2 minutes for the heating plate to reach the set temperature before use.
- Only place the hot air straighteners on a heat resistant surface during use.
- Switch off after use and allow to cool for 30 minutes before storing.

Hair Straightening guide:

Switch position 1 or 3

- It is recommended that hair is washed prior to straightening and be approximately 80% dry.
- Comb your hair and hold a section of hair taught, that is not wider than 5 cm for straightening.
- Work with the underneath layers first. Place it in contact with the hair straightening plate and caught within the brush bristles.
- Slide the hot air straightener down the length of the hair in a single motion (not more than 5 seconds) from root to end, without stopping to prevent overheating.
- To create flicks, turn the hot air straightener 180 degrees (half circle) inwards or outwards, when it reaches the end of the hair. Hold the straightener in that position for 2 to 3 seconds, and then release it.
- Repeat above steps until you achieve the desired effect. It may be necessary to repeat process on certain areas, depending on the texture of your hair. Some practice is necessary when learning to use the appliance.

NOTE: For switch position 3, this allows a greater level of styling in conjunction with straightening and can be used for wetter hair (refer Hot Air Brush styling guide for switch position 2).

Hot Air Brush Styling guide:

Switch position 2

- Shampoo and condition your hair. Rinse the hair thoroughly. Towel blot hair to remove excess moisture. Divide your hair into sections. Using the hot air brush, direct hot air through a section of hair at a time. Move the hot air brush steadily across each section so that hot air passes through the hair. Direct air flow at hair, not scalp.
- Keep the hot air brush's air intake vents unobstructed and free from hair while operating.
- To avoid over-drying, do not concentrate heat on any one section for any length of time. Keep the hot air brush moving as you style.
- For quick styling, dampen hair with a mist of water before styling with the hot air brush.

Cleaning:

- The hot air straightener brush should be cleaned at least once a month.
- Ensure it is disconnected from the mains supply.
- Do not use liquid or aerosol cleaners.
- Clean the external surfaces with a soft, dry cloth.
- If necessary, use a slightly damp cloth to remove stains, but never use a wet cloth.

Fault finding – no operation:

- Make sure it is plugged into the mains supply and the socket is switched on.
- Make sure the power switch is in an on position.
- Check that the supply cord is not damaged.
- Ensure the plug is fully inserted into the socket outlet.
- When using in the hot air brush or combined modes (switch position 2 or 3) and if the fan is not operating but the product is producing heat, this could indicate that it has been dropped or damaged causing the fan to be jammed - switch off immediately to prevent overheating.

Technical Data

Model name	Rated Voltage	Frequency (Hz)	Rated power input (W)
BY-811	220-240V	50-60	350

Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local council regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

living & co.



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we back them up with a one year warranty when accompanied by proof of purchase.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

IM Version 1.0 – June, 2024