



Kensington

KETTLE 1.7L BLUE



INSTRUCTION MANUAL

MODEL: KE2406-SA

AFTER SALES SUPPORT

  0800 422 274

CONTENTS

| | Page |
|-------------------------------|------|
| IMPORTANT SAFETY INSTRUCTIONS | 2-3 |
| PRODUCT OVERVIEW | 4 |
| HOW TO USE | 4-5 |
| CLEANING | 6 |


IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using.
- Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, do not use the kettle and contact your supplier.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not operate the appliance without any water in it to avoid damaging the heat element.
- Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
- To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
- While water is boiling, or just after the water has been boiled, avoid contact with steam from the spout.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Extreme caution must be used when moving an appliance containing hot water.
- The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
- Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before cleaning.

IMPORTANT SAFETY INSTRUCTIONS

- To disconnect, switch the control to “off,” then remove plug from wall outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not use the appliance for other than intended use.
- The kettle can only be used with the base stand provided.
- If the kettle is overfilled, boiling water may spill out. Ensure not to fill beyond the Max rated water level.
- Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is opened during the heating cycles.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- Avoid spillage directly onto the base connector.
- The heating element surface is subject to residual heat after use.
- **CAUTION:** Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move the kettle while it is switched on.
- **CAUTION:** To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
- The base provided with the kettle can only be used with this kettle and cannot be used for other than the intended use.
- Do not touch the hot surface of the kettle. Use the handle or button only.
- The kettle is for household use only. Do not use outdoors.
- Be careful when refilling while the kettle is hot.
- Save these instructions.

PRODUCT OVERVIEW

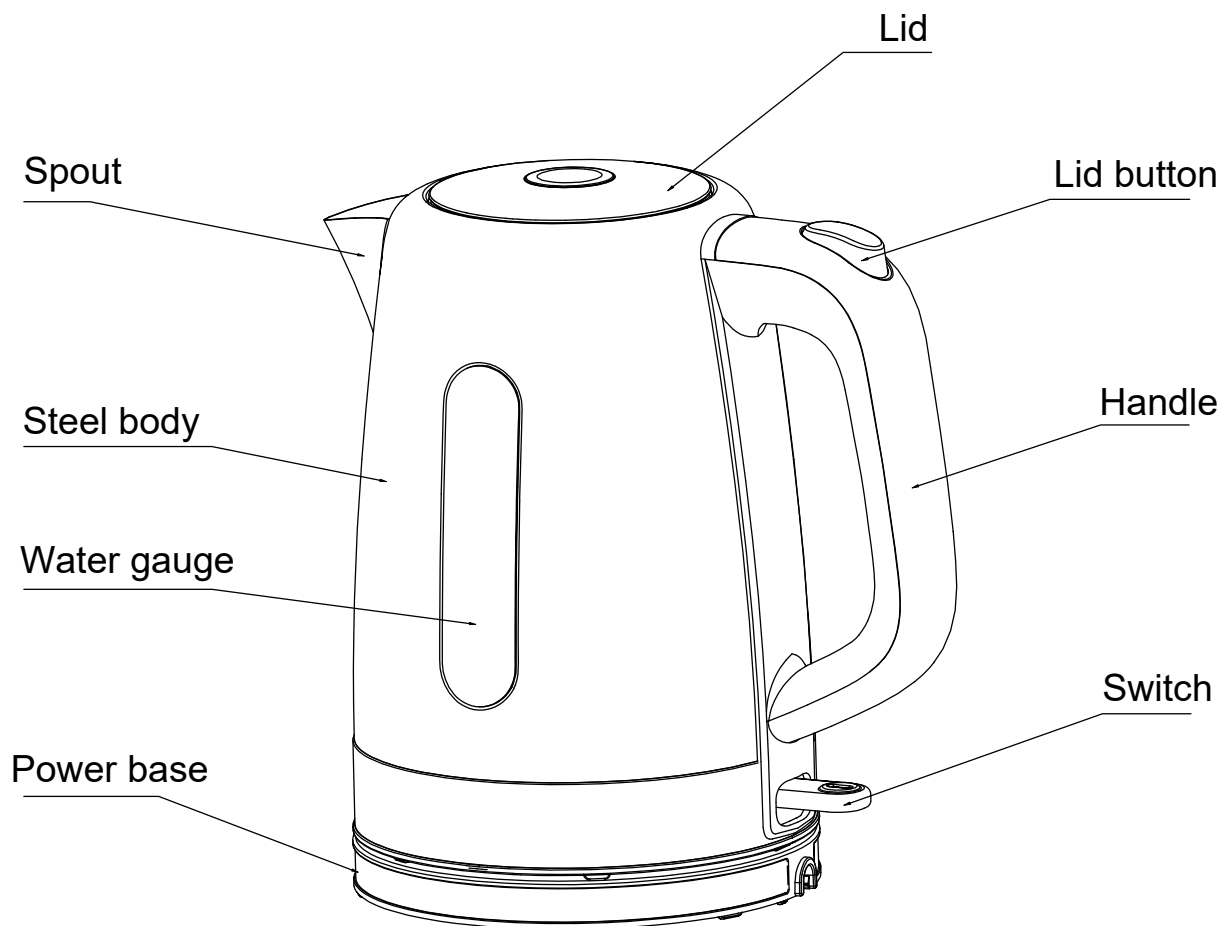

Note: Spout filter is located on the inside, accessible after opening the lid.

HOW TO USE

BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling the Maximum capacity of water and discarding it, then repeat this process. Wipe the external surface with a damp cloth.

NOTE: The maximum capacity of the kettle is 1.7L.

BOIL-DRY PROTECTION

Should you accidentally operate the kettle without water, the inbuilt boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool prior to filling with cold water and before re-boiling.

HOW TO USE

1. Place the kettle on a flat, stable surface.
2. To fill the kettle, remove it from the power base and open the lid by pressing down lid release button, then fill the kettle with the desired amount of water and close the lid. The water level must be within the Min and the Max level. Too little water will cause the kettle to switch off before the water has boiled. **CAUTION:** Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before operating.
3. Position the kettle on the power base.
4. Connect the plug into a suitable power outlet. Press down the power switch and the indicator will illuminate, the kettle will then start to boil the water. The kettle will switch off automatically once the water has boiled. If re-boil is required, you will need to wait approximately 30 seconds before pressing the switch again. You may shut off the power by lifting the power switch up or directly lift the kettle from the power base at any moment to stop the boiling process.
NOTE: Ensure that switch is free of obstructions and the lid is firmly closed, the kettle will not automatically turn off if the switch is constrained or if the lid is open.
5. Lift the kettle from the power base and then pour the water.
CAUTION: Take care when pouring the water from your kettle as boiling water may result in scalding, Do not open the lid while pouring.
6. To re-boil, press the switch again. The kettle may be stored on the power base when not in use.

CLEANING

Always disconnect the appliance from the power outlet and allow to cool down completely before cleaning.

1. Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
2. Wipe the kettle body with a damp cloth or light detergent, never use toxic chemicals.
3. Remember to clean the spout filter at regular intervals. For easier cleaning, detach the filter by pressing down the tab of the filter inside the kettle and then replace it after cleaning.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent damage to the painted finish.

4. When not used or in storage, the power cord may be wound under the bottom of the kettle.

REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled if using hard water (ground sourced), as the mineral deposits may form scale on the bottom of kettle. Hard water comes from groundwater sources and can contain high levels of calcium and magnesium salts. When such water is heated in your kettle, this will lead to formation of limescale which can result in a bitter taste to your heated water and can affect the efficiency of the kettle.

You can use a commercially available descaler and follow the instructions on the package. Alternatively, use the following method:

1. Fill the kettle (to the Max line) with a 50% mixture of white vinegar and water. Leave the solution in the kettle overnight.
2. Discard the mixture in the kettle, then fill the kettle with clean water to the maximum position, boil and then discard the water. Repeat several times until the odour of the vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 3 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 3 year warranty when

Accompanied by proof of purchase.

IM Version 2.0 – July, 2024