



## Heated Drying Rack



## INSTRUCTION MANUAL

**MODEL:EV-230**

---

**AFTER SALES SUPPORT**



**0800 422 274**

# CONTENTS

	Page
IMPORTANT SAFEGUARDS	2
PRODUCT OVERVIEW	3-4
OPERATION / CLEANING	5
WARRANTY	7

# IMPORTANT SAFEGUARDS

Please read all instructions before using this product. And keep these safety instructions for your future reference.

## Warnings for your safety!


- Keep children away from this product when in use.
- **CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.
- Ensure the rack is positioned such that children do not climb on or apply excessive weight. The maximum load limit is 15kg and weight or force above this will cause permanent deformation or damage and may affect product safety.
- Max load-bearing weight is 2.5kg per wing, and 10kg Max in the central section (15kg Total). Please take care to ensure the rack is not overloaded.
- Load evenly to avoid the risk of overbalancing.
- For household use only.
- Do not use outdoors.
- Never put the product in water, in the bath or other water containers.
- Ensure a distance of at least 1 m from a bath or shower.
- Do not unplug the device by the power cord, hold the plug, not the cord.
- Do not use in areas where gasoline, paint or flammable liquids are used or stored.
- Use this product strictly as described in this manual to avoid the cause of fire, electric shock or personal injury.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is not intended for persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Always rinse your clothes fully before hanging on the rack, the appliance is not suitable for use with dripping wet textiles.
- Always fully extend the "wings" (outer racks) before switching on the heated rack.
- Do not completely cover the heated rack with garments/bedding.
- Not suitable for drying silk, down jackets, quilts or duvets.
- After approximately 5-10 minutes of operation, the heated bars will reach a temperature of around 45-55 Degrees Celsius (when uncovered). This is based on a room ambient temperature of 15 - 25 Degrees Celsius. Operating temperature is dependent on ambient temperature and quantity / type of textile used and can also be influenced if the rack is subjected to airflow or wind draughts.
- This appliance is intended only for drying textiles washed in water only.
- Always unplug the power cord when not in use.
- If the supply cord is damaged it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.
- Do not use if there are visible signs of damage to the heated drying rack.

# PRODUCT OVERVIEW

- Please read the instructions carefully to understand how to use the product.
- Press the power switch to [OFF] position. (i.e. Power indicator light is off).
- Plug the power cord into an electrical outlet.
- After connecting to suitable power supply, press the power ON/OFF switch, the power indicator lights up and then the warmer starts the heating work.

## What's in box?

- 1.Heated drying rack x1
- 2.Instruction manual x1
- 3.Height increase clips x2

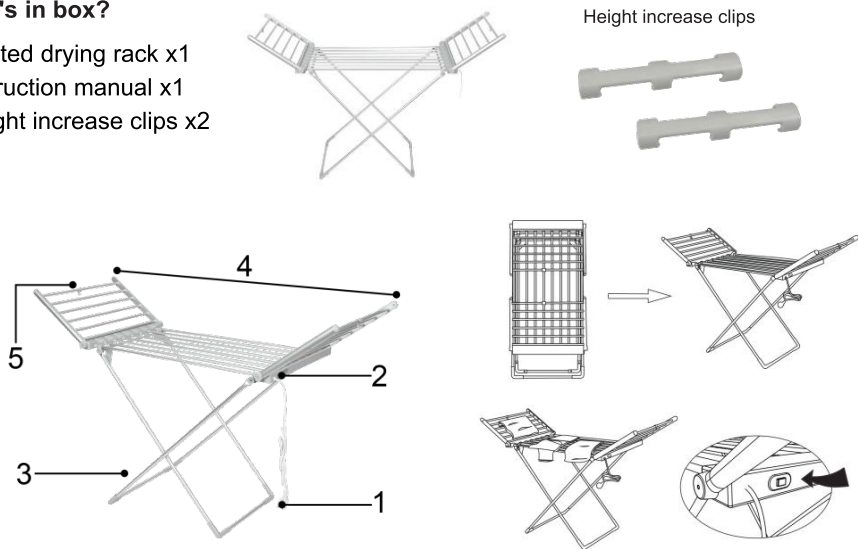


Item	Part description	Function
1	Power Cord / Plug	To connect to your home socket outlet
2	Switch Button	Switch the product on/off
3	Support Legs	In the folded position, serve as the stand to support the rack
4	Heating Region	The area to be used to dry clothes
5	Locking clip	Used to secure wings when folded & stored

# PRODUCT OVERVIEW (continued)

## Height adjustment

There are two options for the resting height of the rack. The default height is 940 mm. However, with addition of the "height increase clips" fitted to the central (outer) rails as shown, allow an increase of 75 mm, raising the height to 1015 mm.

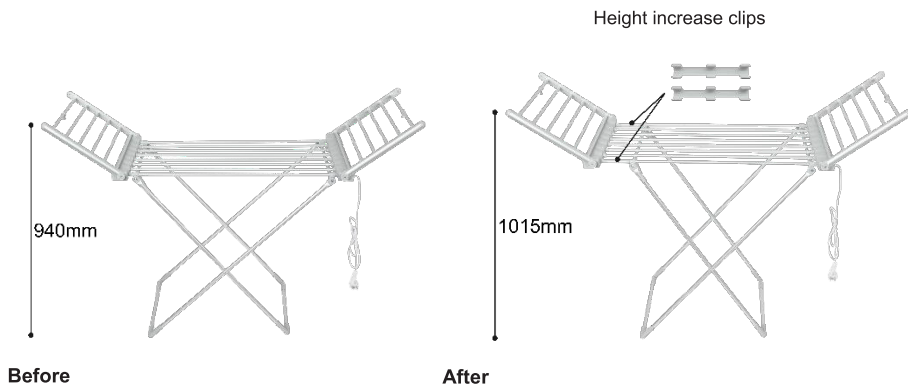

## Power ON/OFF switch

1. Press the switch to the (I) ON position, the power indicator light will illuminate and the product will begin to heat.
2. Press the switch to the [o] OFF position, the power indicator light will go off and the heated bars will begin to cool.

# OPERATION

## HOW TO OPERATE THE HEATED DRYING RACK:

Ensure the drying rack is folded out securely before loading it with laundry and switching it on.

1. Make sure your electricity supply matches the voltage shown on the ratings label, then plug in the supply plug into a socket outlet.
2. Press the On/Off button on the control panel. When the Heated drying rack is on, the red indicator light will turn on.
3. The drying rack will warm up within 5-10 minutes.
4. Load clothes evenly across the surface to avoid over balance.

Clothes should be damp, not soaking wet. Wring out all excess water first before loading.

**CAUTION:** Do not overload the drying rack. The maximum load of the drying rack is 15kg.

5. When you have finished using the drying rack, switch the unit off by pressing the On/Off button again and unplug. Leave to cool down completely.
6. To fold closed for storage purposes, start with the wings first, then the central portion. Proceed to fold the supports inwards so the drying rack is folded flat as originally received.

## CLEANING

Over time, dust can accumulate on the heated drying rack which can effect performance. It is recommended to clean the unit at least once a month.

1. Turn the drying rack OFF and disconnect the appliance from the power supply.
2. Remove any dust build up with a soft brush or vacuum cleaner with a soft brush attachment.
3. Wipe the outer surface of the unit with a soft damp cloth. Mild detergent can be used for any stubborn marks.

### IMPORTANT

The ON/OFF switch and other parts must not come into contact with water or any other liquids.

### Storage

If the unit is not in use for an extended period of time, after cleaning please:

- Ensure the drying rack is OFF and remove plug from the power outlet.
- Cover the unit and store it upright in a location where it will not receive direct sunlight. **IMPORTANT NOTE:** Prolonged exposure to direct sunlight can cause discolouration.





# living & co.

## Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase